


STEM STYLE EARPHONES

LESTWSWH, LESTWSBK
LEWSTWSWH, LEWSTWSBK



USER MANUAL

Function Overview:

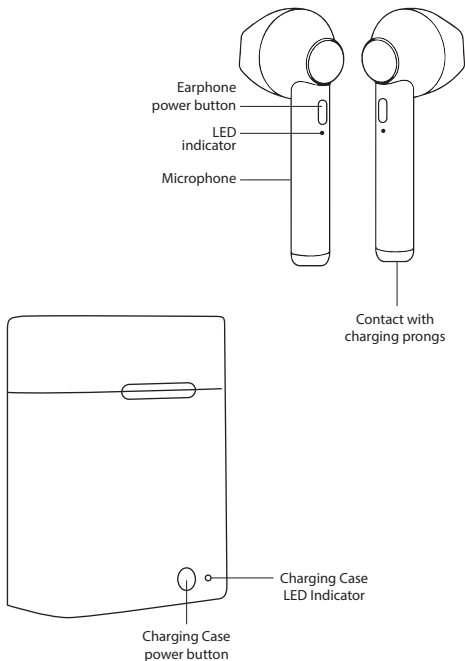



How to use these Earphones:


Pause Press either  button


Play Press either  button

Next Track Press and hold the right  button for 2 seconds


Previous Track Press and hold the left  button for 2 seconds

Answer Call
Press either  button

Reject Call
Press and hold either  button for 2 seconds

Redial Last Number
Press either  button twice


End Call
Press either  button


Decrease Volume
Press the left  button 3 times in quick succession


Increase Volume
Press the right  button 3 times in quick succession

Power ON
Press and hold  button (on each Earphone)

Power OFF
Press and hold  button (on each Earphone)

Activating phone assistant function
Press either  button four times in quick successions

Charging Case Operation
Power ON / OFF
Press  button to turn LED on

Press  button twice to turn LED off

Automatic Synchronizing

- When the earphones are removed from the case they will automatically turn ON and sync to each other. If they have previously been paired to your device they will also automatically re-connect.
- You are now ready to pair to your device.

Pairing with Your Devices

- Look for "LE TWS" on your device (phone, tablet, etc.) and select it to connect.
- You will hear a voice prompt, and the second earphone LED indicator will stop flashing.
- You are now connected.

Pairing Just One Earphone with Your Devices

- Take either one of the earphones out from the charging case, it is automatically turned on. The LED indicator on the earphone stem flash in red/blue.
- Look for "LE TWS" on your device (phone, tablet, etc.) and select it to connect.
- You will hear a voice prompt, and the earphone LED indicator will stop flashing.
- You are now connected.

NOTES:

Earphones will automatically turn OFF if there is no operation for 3 minutes after switching on.

Phone Calls

When there is an incoming call, the unit will pause the playback and ring to alert you of the call. To answer the call, press either of the earphone power buttons. To end a call, press either of the earphone power buttons again.

To decline an incoming call, press and hold either power button for 2 seconds.

Controlling Playback

Press either the left or right earphone power button once to pause playback, press either earphone power button once again to resume playback. Press and hold left power button for 2 seconds for previous song, right power button for 2 seconds to play next song.

Assistant Function

These earphones work with most common phone assistants. Once connected to a mobile phone with an assistant feature, press either earphone power button 4 times in quick succession to activate the assistant feature of your phone.

Battery Charging (Charging Case)

- Connect the USB-C charging cable into the socket on the charging case.
- Plug the cable into a standard USB 5V power output.
- The red LED indicator will flash while the case is charging and will then stay on when fully charged. (**Note: Before using the charging case for the first time, we recommend you fully charge the battery. A full charge takes around 1.5 hours.**)
- When fully charged, unplug the charging cable from the power socket.

Note: The charging case will stop working when the battery is low.

Earphone Charging

- When the earphones battery power is low, the LED indicator will flash red slowly and you will hear a voice prompt every 2 minutes.
- Put the earphones into the charging case, ensuring that the earphones are pushed down all the way.
- If the earphones are on, they will automatically turn OFF when inserted into the case for charging.

(Note: The earphones come with a built-in rechargeable battery. Before using them for the first time, we recommend you fully charge the battery. A full charge takes around 1 hour).

- The blue LED indicator on the charging box will be on when charging the earphones and the charging case LED indicator will turn off when charging is complete.
- When the earphones are removed from the case they will automatically turn ON and sync to each other. If they have previously been paired to your device they will also automatically re-connect.

Warning: the earphones can only be used with the provided charging unit.

Trouble shooting tip: if charging does not begin, please take the Earphones out of the case and put them back again, ensuring they are pushed all the way in.

Specifications

Driver Size:	8mm
Impedance:	16 Ohm
Accessories:	USB-C Charging Cable Included
Battery Type:	Li-ion Battery
Charging Case Battery Size:	350mAh
Earbud Battery Size:	35 mAh each Earbud
Earbuds Battery Standby Time:	60 Hours
Earbuds Battery Talk/Music Time:	3 hours
Battery Charge Time:	Earphone: 1 hour Charging case: 1-1.5 hours
Operating Distance:	10-15 meters



WARNING Do not dispose of unit in fire or water. • Never attempt to disassemble and reassemble. • Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. • Check with your local authority for recycle advice.

- Keep your device and all accessories out of the reach of children and animals.
- Small parts may cause choking or serious injury if swallowed.
- Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C).
- Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device.
- Do not allow your device to get wet—liquids can cause serious damage.
- Do not handle your device with wet hands.