


# DUAL ALARM CLOCK RADIO WITH WIRELESS PHONE CHARGER

LEFMW




USER MANUAL

WIRELESS  
CHARGING PAD

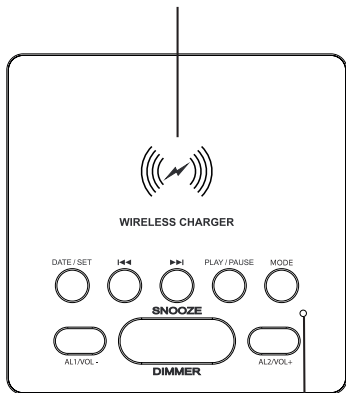

WIRELESS  
CHARGING  
INDICATOR

SPEAKER

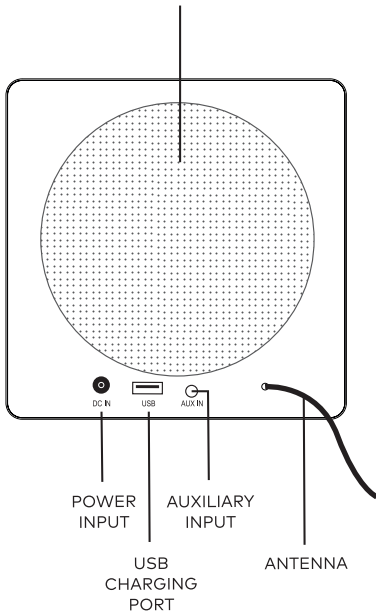

POWER  
INPUT

USB  
CHARGING  
PORT

AUXILIARY  
INPUT

ANTENNA

## Button Overview

DATE/SET	DATE/TIME/FM PRESET ADJUSTMENTS
⏮	LAST TRACK/RADIO TUNING DOWN
⏭	NEXT TRACK/RADIO TUNING UP
PLAY/PAUSE	PLAY/PAUSE WIRELESS AUDIO
MODE	ON/OFF/MODE FUNCTION
AL1/V-	ALARM 1 FUNCTIONS/VOLUME DOWN
SNOOZE/DIMMER	ALARM SNOOZE/DISPLAY BRIGHTNESS
AL2/V+	ALARM 2 FUNCTIONS/VOLUME UP

## Basic Functions

1. Press DATE/SET button to cycle display through YEAR, MONTH/ DAY, and TIME
2. Press PLAY/PAUSE button to change between 12 HOUR and 24 HOUR time format
3. Press SNOOZE/DIMMER button to change display brightness HIGH/MEDIUM/LOW/OFF
4. Press MODE button to change between FM, WIRELESS and AUXILIARY modes
5. Press and hold MODE button to return to CLOCK mode

## Setting Date & Time

1. Press and hold DATE/SET button until the HOUR display starts to flash
2. Use ◀ and ▶ buttons to set the correct hour
3. Press DATE/SET button once to advance to MINUTE adjustment
4. Use ◀ and ▶ buttons to set the correct minute
5. Press DATE/SET button once to advance to YEAR adjustment
6. Use ◀ and ▶ buttons to set the correct year
7. Press DATE/SET button once to advance to MONTH adjustment
8. Use ◀ and ▶ buttons to set the correct month
9. Press DATE/SET button once to advance to DAY adjustment
10. Use ◀ and ▶ buttons to set the correct day
11. Press DATE/SET button to save and exit

## Setting Alarms

1. To set ALARM 1 press and hold AL1/VOL- button until display starts to flash
2. Use ◀ and ▶ buttons to set FM (radio) or BUZZ (buzzer) as your preferred alarm type
3. Press AL1/VOL- button again to advance to HOUR adjustment
4. Use ◀ and ▶ buttons to set the alarm Hour
5. Press AL1/VOL- button again to advance to MINUTE adjustment
6. Use ◀ and ▶ buttons to set the alarm Minute
7. Press AL1/VOL- button again to advance to VOLUME adjustment



8. Use **⏪** and **⏩** buttons to set the alarm Volume
9. Press AL1/VOL- button again to advance to FREQUENCY adjustment
10. Use **⏪** and **⏩** buttons to set alarm frequency to EVERYDAY, WEEKDAY, or WEEKEND ONLY

*To set ALARM 2 follow the same procedure using the AL2/VOL+ button*

### **Using Alarms**

1. Press AL1/VOL- button to display the time set for ALARM 1
2. Press AL1/VOL- button again to ACTIVATE Alarm 1 (🔔 symbol will appear on screen)
3. Press AL1/VOL- button again to DEACTIVATE Alarm 1
4. Press SNOOZE/DIMMER button to pause alarm for 9 minutes
5. Press MODE button to turn alarm off

*To activate ALARM 2, follow the same procedure using the AL2/VOL+ button*

## **Radio Operation**

1. Press MODE button to enter FM mode
2. To automatically scan and save available radio stations, press and hold PLAY/PAUSE button
3. To manually scan and save available radio stations:
  - a. Press and hold **◀** or **▶** until desired radio station is found
  - b. Press and hold the DATE/SET button until the display starts to flash
  - c. Using the **◀** or **▶** buttons select a memory position to save the station to (CH01 to CH20)
  - d. Press DATE/SET button to save the station and exit
4. Once saved use **◀** or **▶** buttons to change from one preset station to the next

## **Wireless Connectivity**

1. Press MODE button twice to enter WIRELESS CONNECTIVITY mode
2. Open your mobile device settings and enable Discovery Mode
3. Search the available devices list for "LEFMW" and select
4. If pairing is successful an indicator will appear on the display
5. If pairing is unsuccessful restart your device and repeat the process

## **Wireless Charger**

1. Place a wireless charging capable mobile phone on top of the Wireless Charging Pad
2. Charging Indicator will illuminate to show charging has begun
3. The phone will continue to charge until the battery reaches full charge or the phone is removed

*If the charging indicator fails to illuminate, reposition your phone on the wireless charging pad and remove any fitted phone cases. If the charging indicator still fails to illuminate, check your mobile phone specifications to confirm it supports wireless charging.*

*Mobile phones that do not support wireless charging can be charged via the integrated USB port situated on the rear of the unit.*

## **Clock Memory**

When batteries are installed, the clock radio can be unplugged from the power outlet and moved to a new location without losing the set time.

## **Back-up Batteries**

2 x AAA (not included) to maintain time, date, alarms and preset stations



**Liquid Ears™**

PO Box 5658 Brendale QLD Australia 4500  
Customer Support 1800 812 261

**[www.liquidears.com](http://www.liquidears.com)**

DESIGNED IN AUSTRALIA

