

TRUE WIRELESS


BUDS

LETWSBBK LETWSBWH





Function Overview:

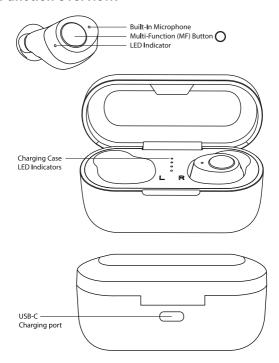

How to use these Earphones:

Pause Press either O button	Power ON
Play Press either 🔾 button	Removing Earphones from charging case will automatically turn them on
Next Track Press the right O	

Previous Track Press the Pleft O button twice

Answer Call Press either O button

Reject Call Press and hold either O button for 2 seconds

End Call Press either O button

Decrease Volume Press and hold the left O button for 1 - 2 seconds

Increase Volume

Press and hold the right O button for 1 - 2 seconds

Power OFF

Placing Earphones into charging case will automatically turn them off

Standby Mode

Earphones will automatically enter standby mode after 10 minutes of inactivity

To resume press either O

Activating phone assistant function

Press either O button 3 times in quick succession

Automatic Synchronizing

- When the earphones are removed from the case they will automatically turn ON and sync to each other. If they have previously been paired to your device they will also automatically re-connect.
- · You are now ready to pair to your device.

Pairing with Your Devices

- Look for "LETWSBBK" or "LETWSBWH" on your device (phone, tablet, etc.) and select it to connect.
- You will hear a voice prompt and the second earphone LED indicator will stop flashing.
- · You are now connected.

Pairing Just One Earphone with Your Devices

- Take either one of the earphones out from the charging case, it will automatically turn on. The LED indicator on the earphone will flash red and blue, indicating that it is ready to pair to a device.
- Look for "LETWSBBK" or "LETWSBWH" on your device (phone, tablet, etc.) and select it to connect.
- You will hear a voice prompt, and the earphone LED indicator will stop flashing.
- · You are now connected.

NOTES:

Earphones will automatically turn OFF if there is no operation for 10 minutes after switching on.

Phone Calls

When there is an incoming call, the unit will pause the playback and ring to alert you of the call. To answer the call, press either of the earphone MF buttons. To end a call, press either of the earphone MF buttons again. To decline an incoming call, press and hold either MF button for 2 seconds.

Controlling Playback

Press either the left or right earphone MF button once to pause playback, press either earphone MF button once again to resume playback. Press the left MF button twice to play previous track. Press the right MF button twice to play next track.

Assistant Function

These earphones work with most common phone assistants. Once connected to a mobile phone with an assistant feature, press either earphone MF button 3 times in quick succession to activate the assistant feature of your phone.

Battery Charging (Charging Case)

- Connect the USB-C charging cable into the socket on the charging case.
- Plug the cable into a standard USB 5V power output.
- The blue LED indicator will flash while the case is charging and will then stay on when fully charged. (Note: Before using the charging case for the first time, we recommend you fully charge the battery. A full charge takes around 2 hours).
- When fully charged, unplug the charging cable from the power socket.

Note: The charging case will stop working when the battery is low.

Earphone Charging

- When the earphones battery power is low, the LED indicator will flash red slowly and you will hear a voice prompt every 2 minutes.
- Put the earphones into the charging case, ensuring that the earphones are sitting properly in the charging case.
- If the earphones are on, they will automatically turn OFF when inserted into the case for charging.

(Note: The earphones come with a built-in rechargeable battery.

Before using them for the first time, we recommend you fully charge the battery. A full charge takes around 1.5 hours).

The blue LED indicator on the charging case will blink when on

- The blue LED indicator on the charging case will blink when on charge. When fully charged the charging case will show 4 solid LED's.
- When the earphones are removed from the case they will automatically turn ON and sync to each other. If they have previously been paired to your device they will also automatically re-connect.

Warning: the earphones can only be used with the provided charging unit.

Trouble shooting tip: if charging does not begin, please take the Earphones out of the case and put them back again, ensuring they are pushed all the way in.

Specifications

Driver Size: 8mm 16 Ohm Impedance: Sensitivity: 98dB + 3dBMic Sensitivity: 42dB + 3dB Battery Type: Li-ion Battery Charging Case Battery Size: 300mAh Earphone Battery Size: 50mAh each Earphone 60 Hours Earphone Battery Standby Time: Earphone Battery Talk/Music Time: 3.5 Hours Battery Charge Time: Earphone: 1.5 hours Charging Case: 1.5-2 hours Operating Distance: 10 Meters Accessories: USB-C charging cable

included





The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by The Crest Company is under licence. Other trademarks and trade names are those of their respective owners.

WARNING Do not dispose of unit in fire or water. . Never attempt to disassemble and reassemble. • Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. . Check with your local authority for recycle advice

 Keep your device and all accessories out of the reach of children and animals. • Small parts may cause choking or serious injury if swallowed. • Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). • Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. • Do not allow your device to get wet—liquids can cause serious damage. • Do not handle your device with wet hands