

MINI LED ALARM CLOCK


LEWACWL, LEWACWH



USER MANUAL

Display

Press SET button to change display:

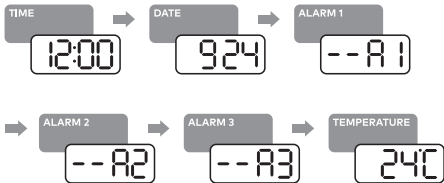

Set Time

1. Change display to TIME mode
2. Press and hold SET button for 2 seconds to enter EDIT mode
3. Use UP/DOWN buttons to choose 12 hour or 24 hour display
4. Press SET button once then use UP/DOWN buttons to adjust Hour
5. Press SET button once then use UP/DOWN buttons to adjust Minutes
6. Press SET button once to Exit

Set Date

1. Change display to DATE mode
2. Press and hold SET button for 2 seconds to enter EDIT mode
3. Use UP/DOWN buttons to adjust Year
4. Press SET button once then use UP/DOWN buttons to adjust Month
5. Press SET button once then use UP/DOWN buttons to adjust Day
6. Press SET button once to Exit

Set Alarm

1. Change display to ALARM mode
2. Press UP button to activate alarm
("oN A1" will appear on the display)
3. Press and hold SET button for 2 seconds to enter EDIT mode
4. Use UP/DOWN buttons to adjust Hour
5. Press SET button again then use UP/DOWN buttons to adjust Minutes
6. Press SET button to Exit
7. Repeat process for Alarm 2 and Alarm 3

Note

- * *Alarm will sound at the set time each day until deactivated*
- ** *Press any button to silence alarm*

Deactivate Alarm

1. Change display to ALARM mode
2. Press UP button to deactivate alarm ("-- A1" will appear on the display)
3. Repeat process for Alarm 2 and Alarm 3

Set Temperature

1. Change display to TEMPERATURE mode
2. Press and hold DOWN button for 2 seconds to switch between Celsius (°C) and Fahrenheit (°F)
3. Press SET button to Exit

Display Mode

Press UP button to change default display mode:

- dP-1:** Display will show TIME mode for 10 seconds then DATE and TEMPERATURE modes for 2 seconds each
- dP-2:** Display will show TIME, DATE, ALARM, or TEMPERATURE mode based on your selection
- dP-3:** Display will default to TIME mode after 15 seconds of no activity

Power Save Mode

1. Change display to TIME mode
2. Press DOWN button to activate Power Save Mode ("oN Sd" will appear on the display)
3. Display will turn off after 10 seconds of inactivity
4. Display will turn on again when clock is touched or loud noise created
5. To deactivate Power Save Mode change display to TIME mode and press DOWN button twice ("--Sd" will be displayed)

Clock Memory

When batteries are installed, the clock radio can be unplugged from the power outlet and moved to a new location without losing the set time.

Batteries Required:

3 x AAA Batteries

1 x CR2032 Back Up Battery (Supplied)

CAUTION: Don't mix old and new batteries. Do not mix standard (super heavy duty/alkaline), rechargeable and lithium batteries. Remove batteries when not in use for a prolonged period of time.

Do not dispose of batteries in fire, batteries may leak and explode. Do not recharge non-rechargeable batteries.

BUTTON BATTERY WARNING - KEEP OUT OF REACH OF CHILDREN

Swallowing may lead to serious injury due to chemical burns. If you suspect a child has swallowed or inserted a button battery immediately seek medical advice. If the battery compartment does not close securely, stop using the product and keep it away from children.

CAUTION:

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.



Liquid Ears™

PO Box 5658 Brendale QLD Australia 4500
Customer Support 1800 812 261

www.liquidears.com

DESIGNED IN AUSTRALIA

1692/11

