

# WIRELESS SOUND BAR

LESBBK, LESBRD



## USER MANUAL

## **Specifications**

Size: 420mm x 71mm x 68mm

Weight: 485g

Speaker output: 3W x 2

Frequency range: 100Hz-20kHz

Charging voltage: 5V d.c

Wireless operating distance: 10m

Battery capacity: 1200mAh

Material: ABS and fabric

## **Contents**

1 x Wireless speaker

1 x Micro USB charging cable

1 x User guide

1 x 3.5mm Audio cable


## **How to use the speaker**

**Power ON / OFF** Press and hold  button

**Pause** Press  button

**Play** Press  button

**Answer Call** Press  button

**End Call** Press  button


**Decline Call** Press and hold  button

**Redial Last Call** Press twice  button

**Next Song** Press  button

**Previous Song** Press  button

**Volume Up** Press and hold  button

**Volume Down** Press and hold  button

**FM Search** Press and hold  button

**FM Channel Up** Press  button

**FM Channel Down** Press  button

**Change Mode** Press  button

## **Charging the Speaker Using Charging Cable**

Insert charging cable into micro USB port marked DC5V. The LED indicator turns red when charging and turns off when fully charged. Fully charge before first use.

## **Wireless Music Function**

Look for the ID relevant to the colour of your product LESBBK or LESBRD on your device (phone, tablet etc.) and select it to connect. There is a prompt sound once the speaker is

successfully connected. Play music from your smart device and enjoy music on the go.

## **FM Radio Function**

Press the mode button to switch mode to FM. Search for channels by holding the Play/Pause button down. Adjust the tuning by quickly pressing the volume up or volume down button.

## **Phone Calls**

When there is an incoming call, the unit will pause playback and ring to alert you of the call. To answer press the play/pause button. To end call press play/pause button. To reject a call, press and hold the play/pause button. To redial the last number called press play/pause button twice. On completion of the call the speaker will automatically recommence playback.

## **AUX Function**

Use a 3.5mm audio cable to connect your media device through the AUX port on the speaker. Connect other end of the audio cable to your device. You can now play music through the speaker.

## **USB Play**

Play music from a USB flash drive by inserting the USB into the USB port. Supports MP3 format files. Press the play button to start playback.



## **TF Card**

Play music from a TF card by inserting the card into the TF card port. Press the play button to start playback.

## **Mode Button**

When multiple media devices are connected via wireless connection, AUX, USB or TF you can cycle through them by pressing the mode button.

## **Safety Instructions**

- Device may become warm while charging.
- Do not press the buttons too hard as it could damage the product.
- Do not leave in direct sunlight for extended periods of time during hot weather.
- Only use a dry cloth to keep product clean from dust.
- Do not use chemicals on this product.
- Avoid dropping the product as it could damage the product.



**Liquid Ears™**

PO Box 5658 Brendale QLD Australia 4500  
Customer Support 1800 812 261

**[www.liquidears.com](http://www.liquidears.com)**

DESIGNED IN AUSTRALIA



**WARNING** Do not dispose of unit in fire or water. • Never attempt to disassemble and reassemble. • Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. • Check with your local authority for recycle advice. • Keep your device and all accessories out of the reach of children and animals. • Small parts may cause choking or serious injury if swallowed. • Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). • Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. • Do not allow your device to get wet - liquids can cause serious damage. • Do not handle your device with wet hands.