



Assembly Instructions for Pallas Parasol





www.harbourlifestyle.co.uk


А	Frame	1
В	Adaptor	1
С	Crank handle	1
D	Screw1	4
E	Screw2	4
F	Washer	4
G	Outer hex wrench	1
Н	Remote control	1
I	Base frame(Optional)	2 pi
J	Portable battery-line	1
К	Power supply cord	1
L	Rotating device	1
М	Assembly Instruction	1
N	Allen wrench(2.5#/6#/7#)	3
0	Fibreglass pole (Optional)	8
Р	Protective cover (Optional)	1

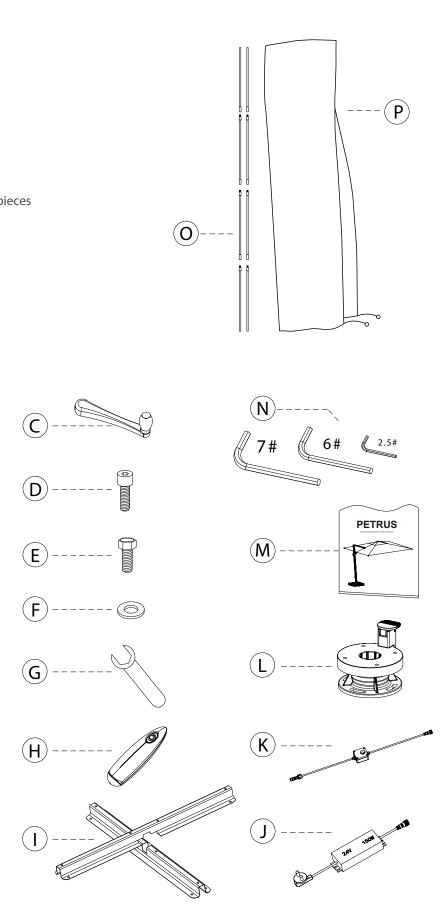

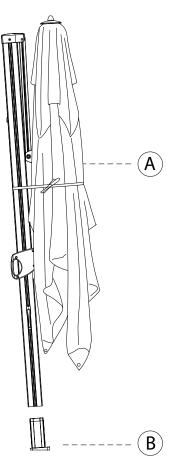


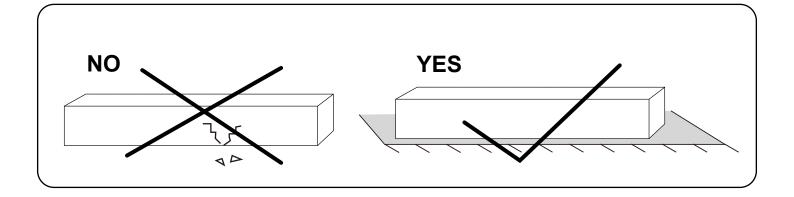

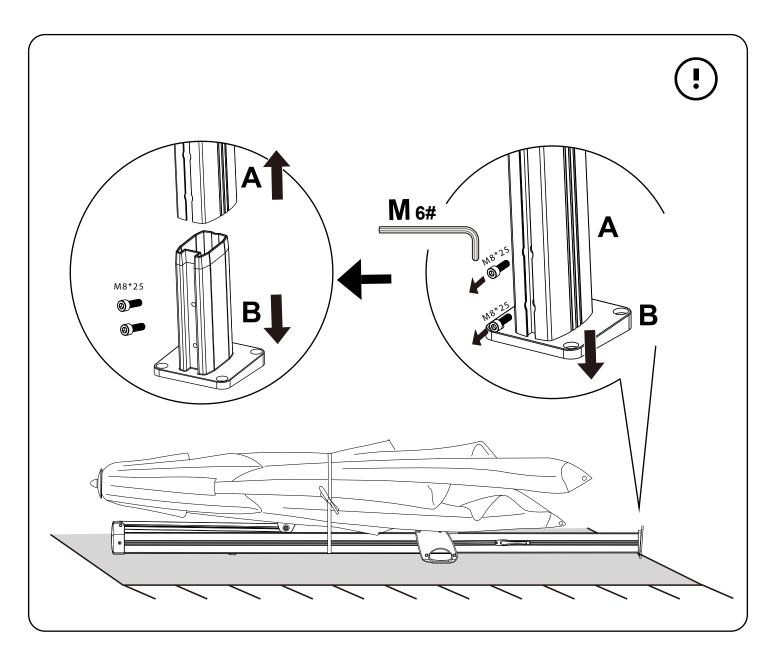


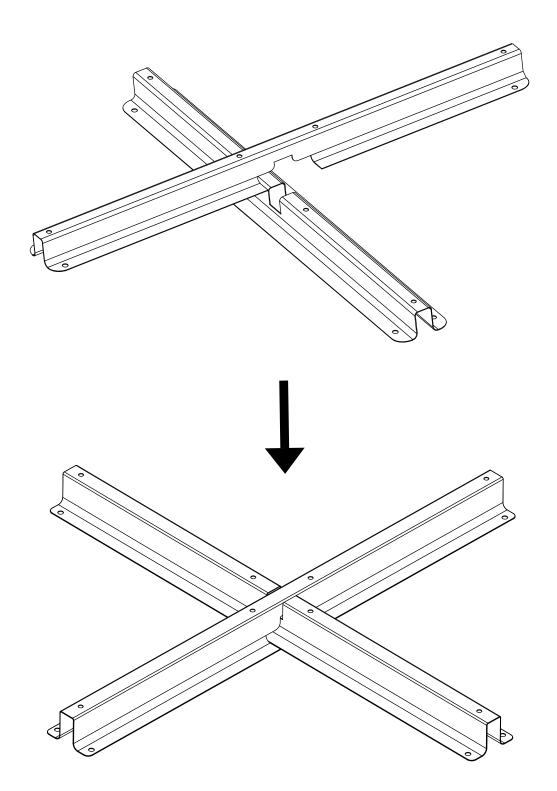



The Parasol Base and Base Weight are Always Seperately Sold, the Manual Graphic DOES NOT Mean they are Included in Your Purchasement. It Only Shows How to Mountain a Parasol in a Similar Way.

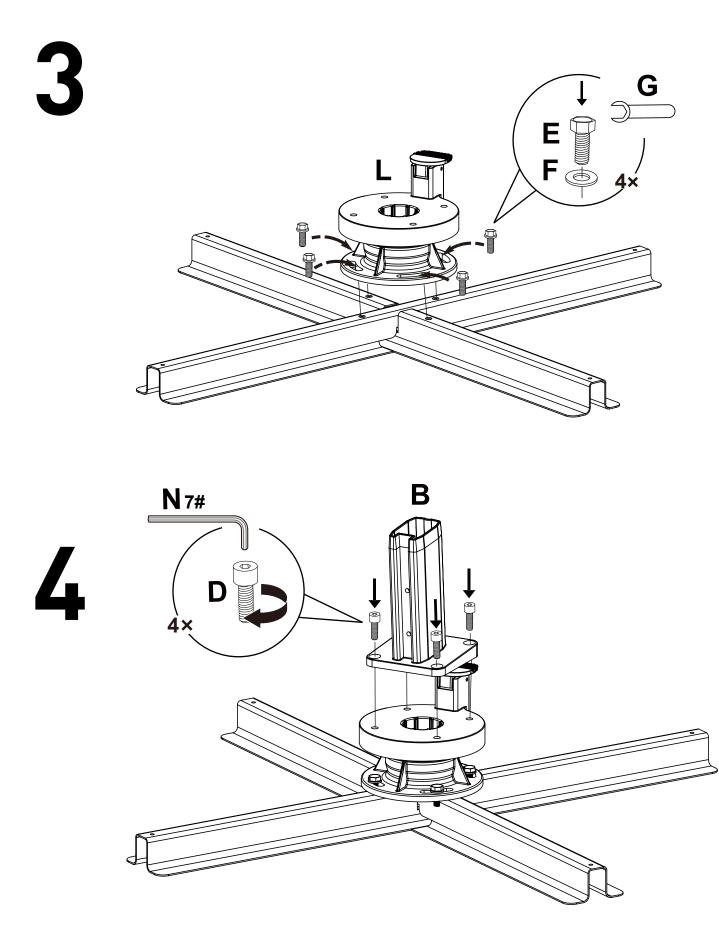



The Parasol Base and Base Weight are Always Seperately Sold, the Manual Graphic DOES NOT Mean they are Included in Your Purchasement. It Only Shows How to Mountain a Parasol in a Similar Way.

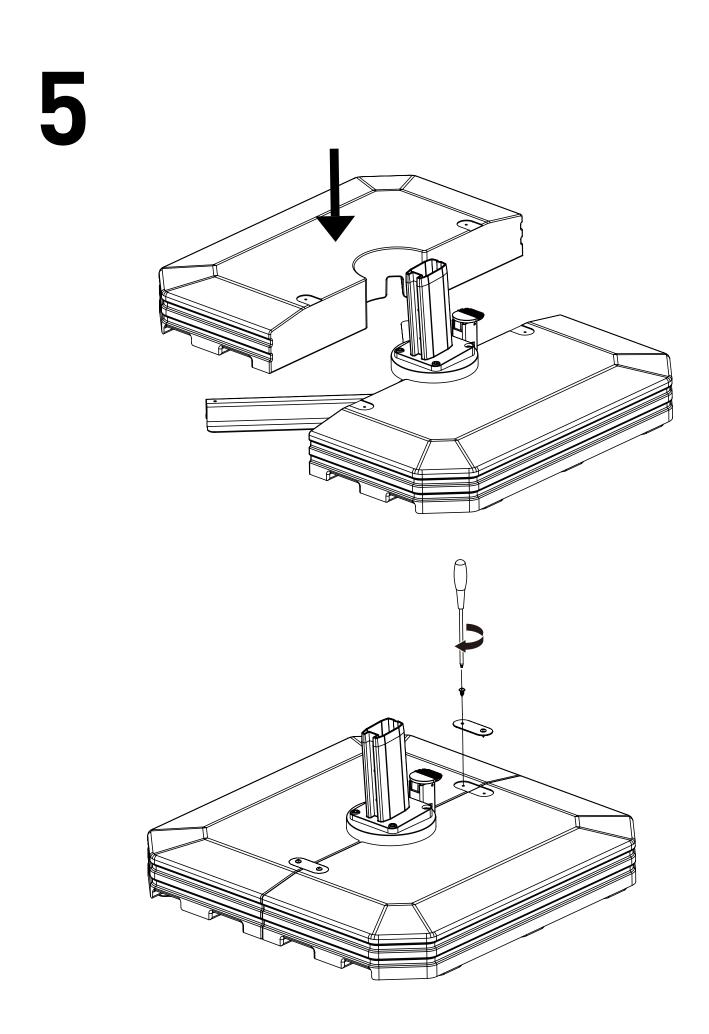


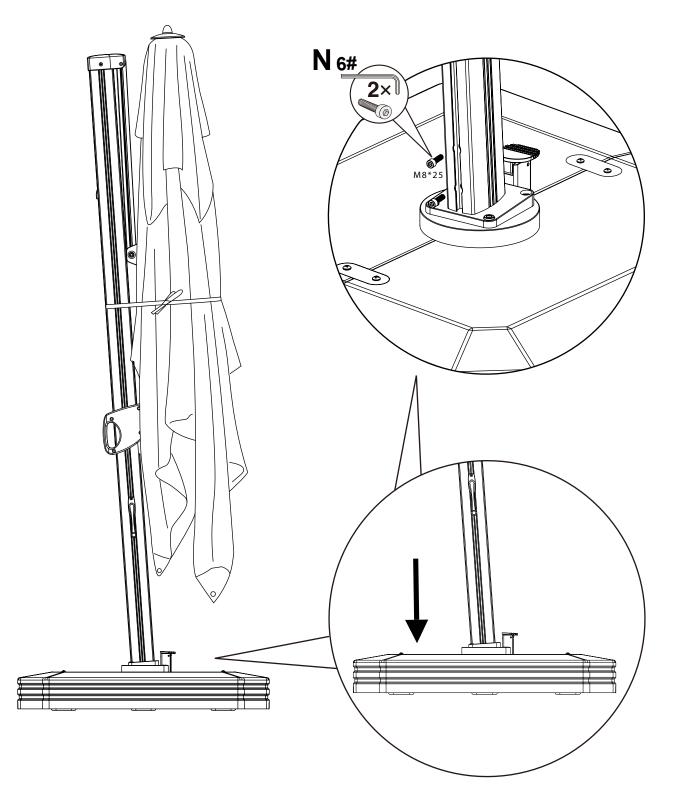


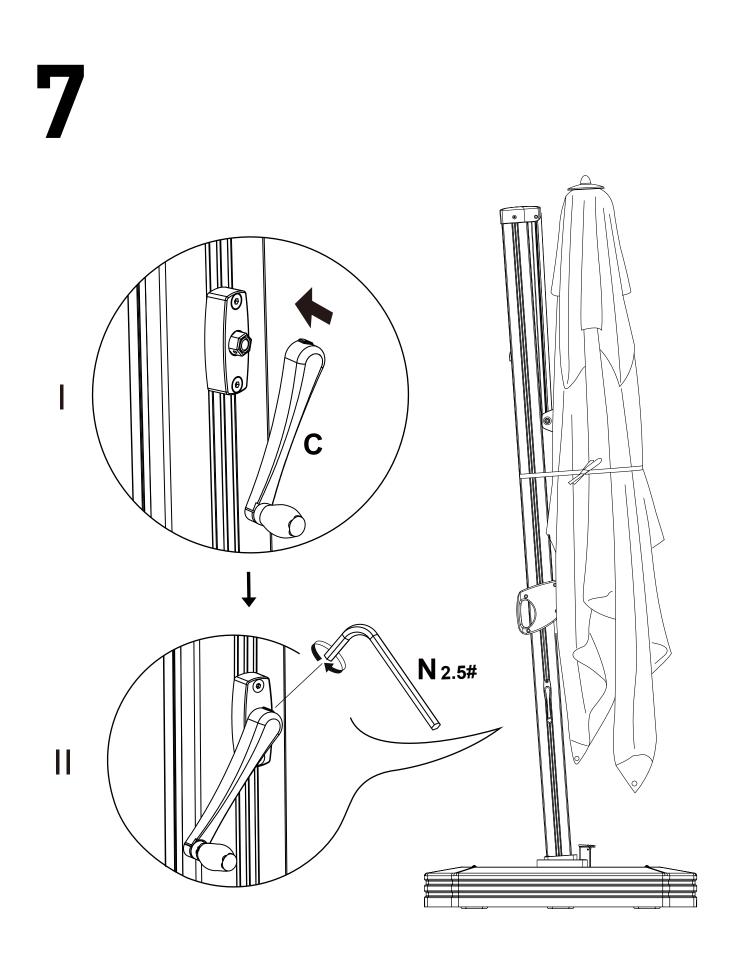


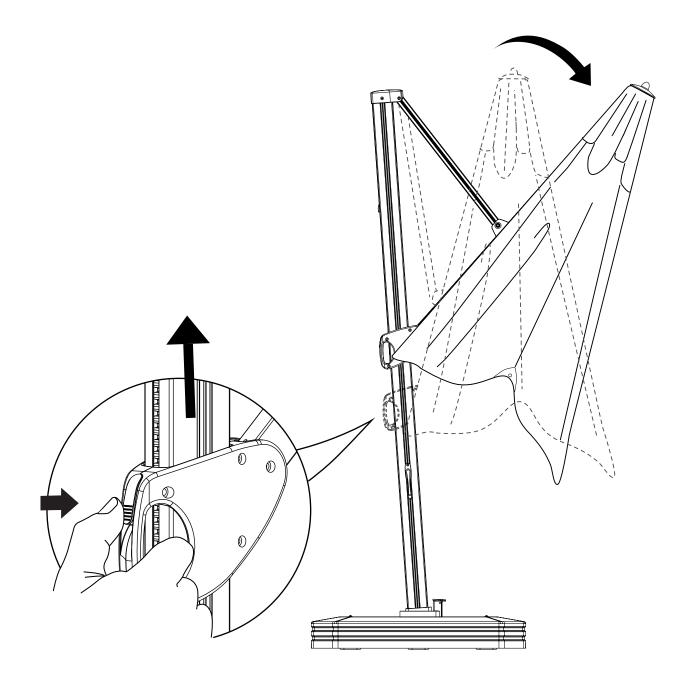


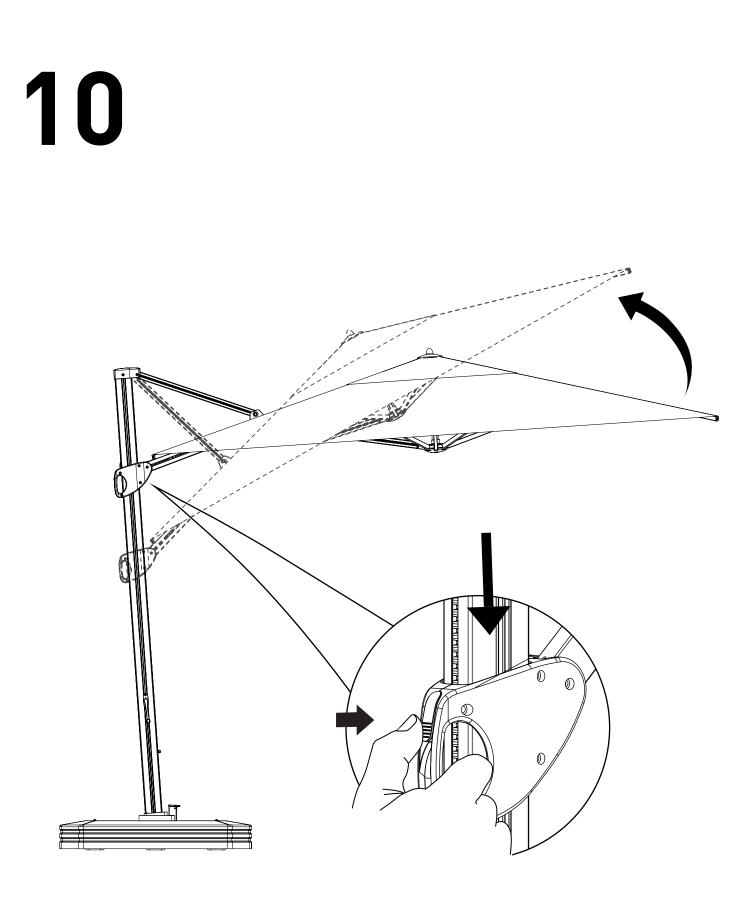

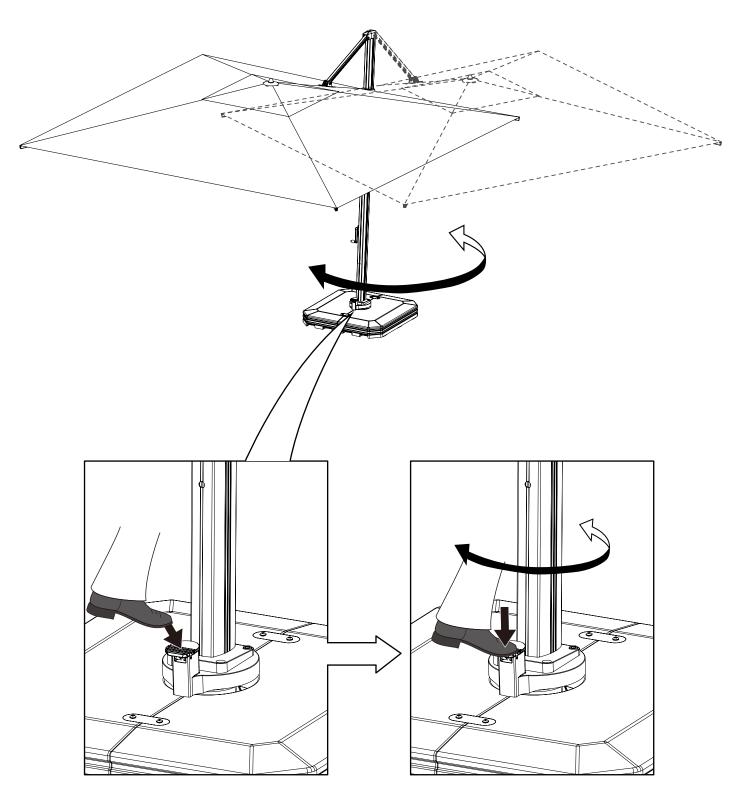

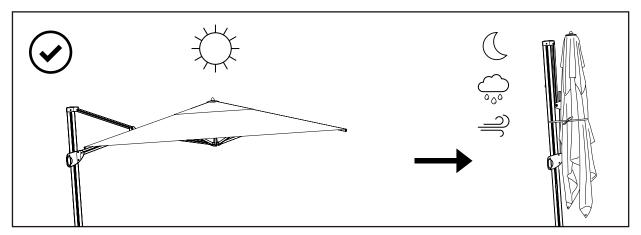

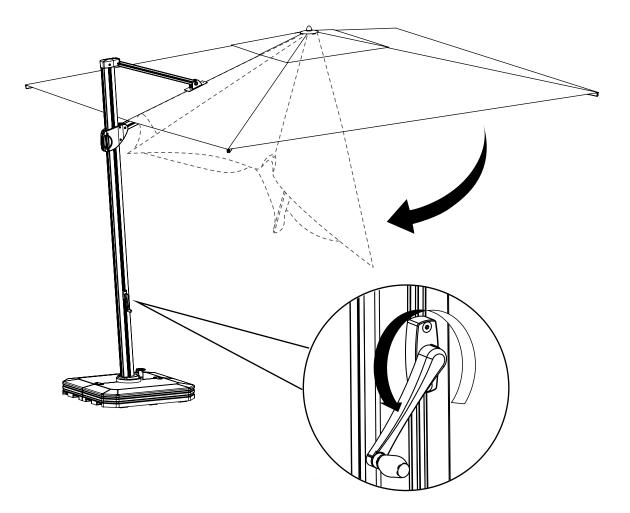

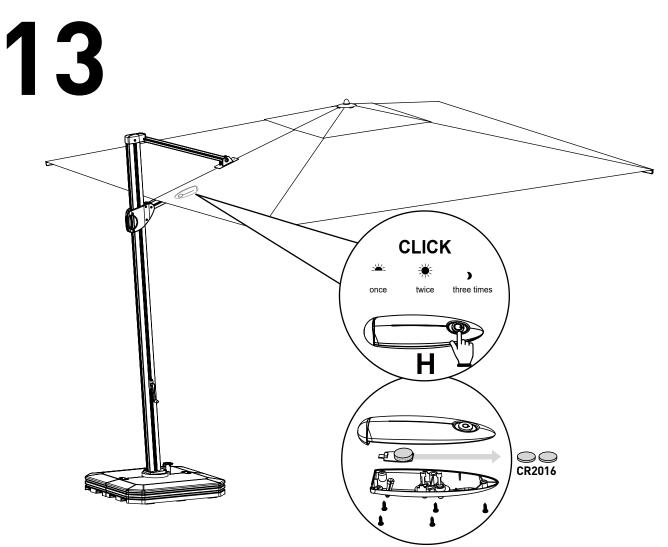


Note:


1. Emergency switch, used for emergency opening/closing of the umbrella light when the remote control is lost, and the remote control circuit is common.

2. The lights turned on by the remote control cannot be turned off with the emergency switch.

3. The light turned on by the emergency switch cannot be turned off with the remote control.

4. When the remote control is lost and the light cannot be turned off, please unplug the power supply.

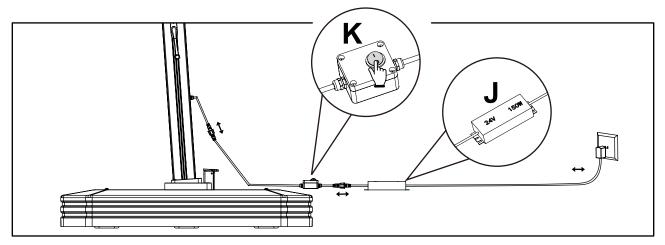

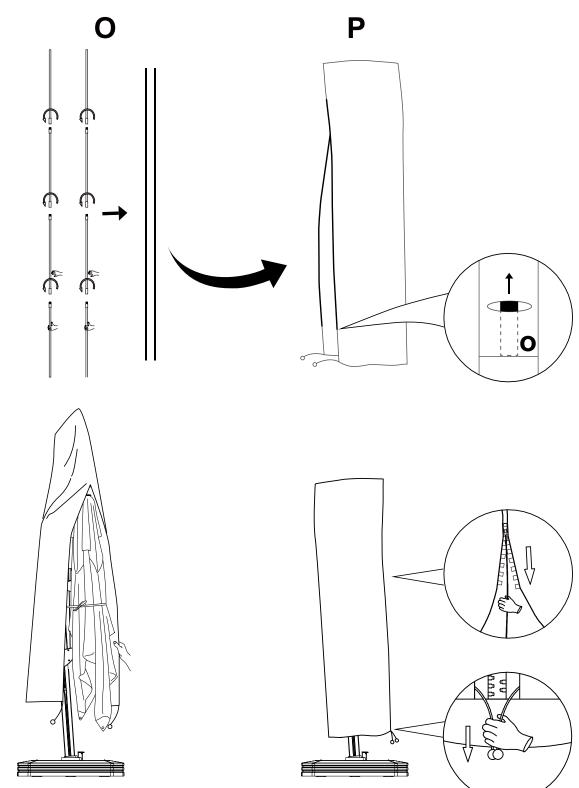

* Optional, Not a Standard Accessory, Your Distributor or Agency may not Customize this into Your Purchasement.