








StandDesk 800 524 2744 hi@standdesk.co standdesk.com

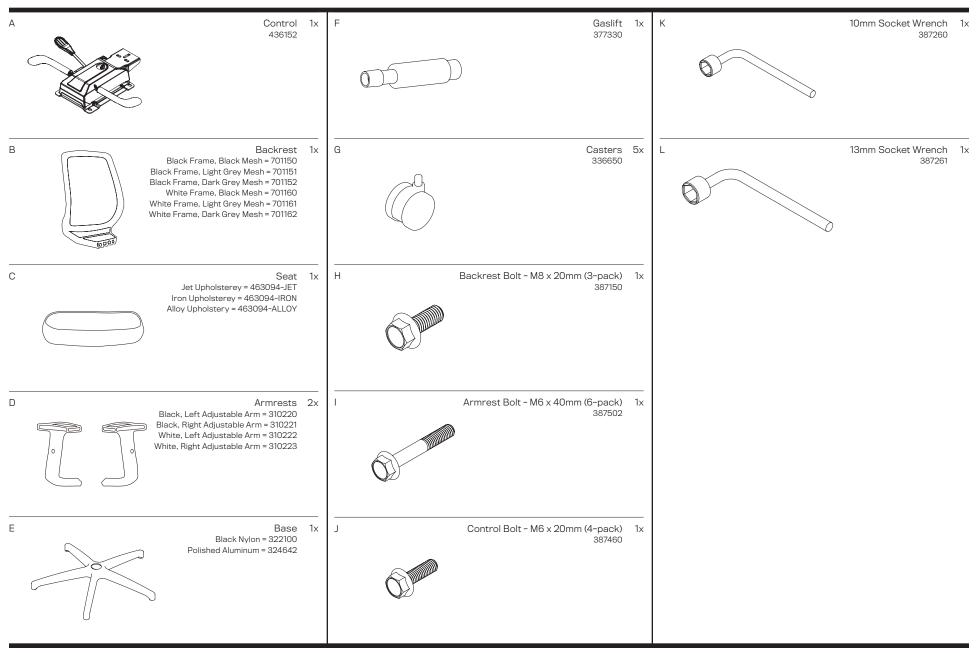


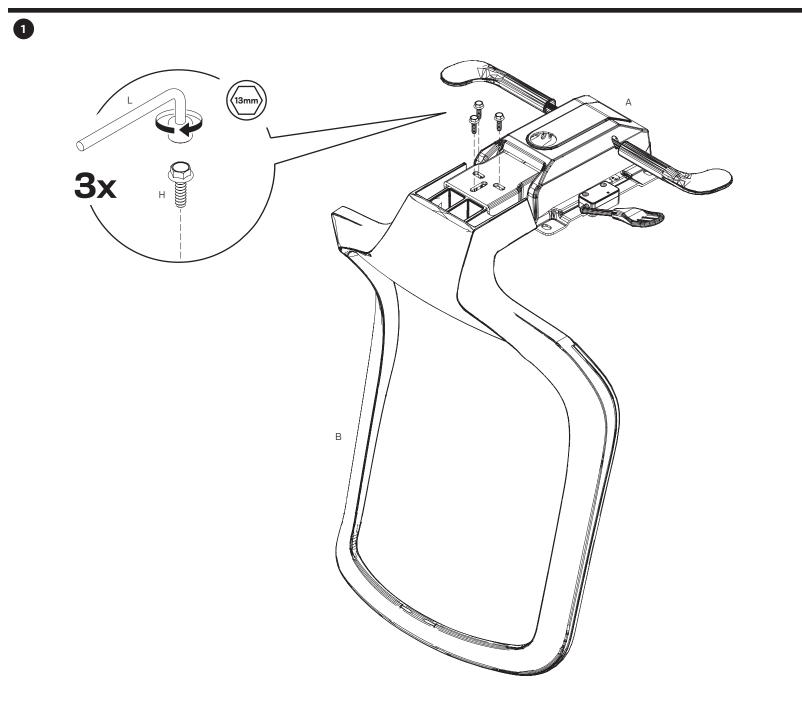

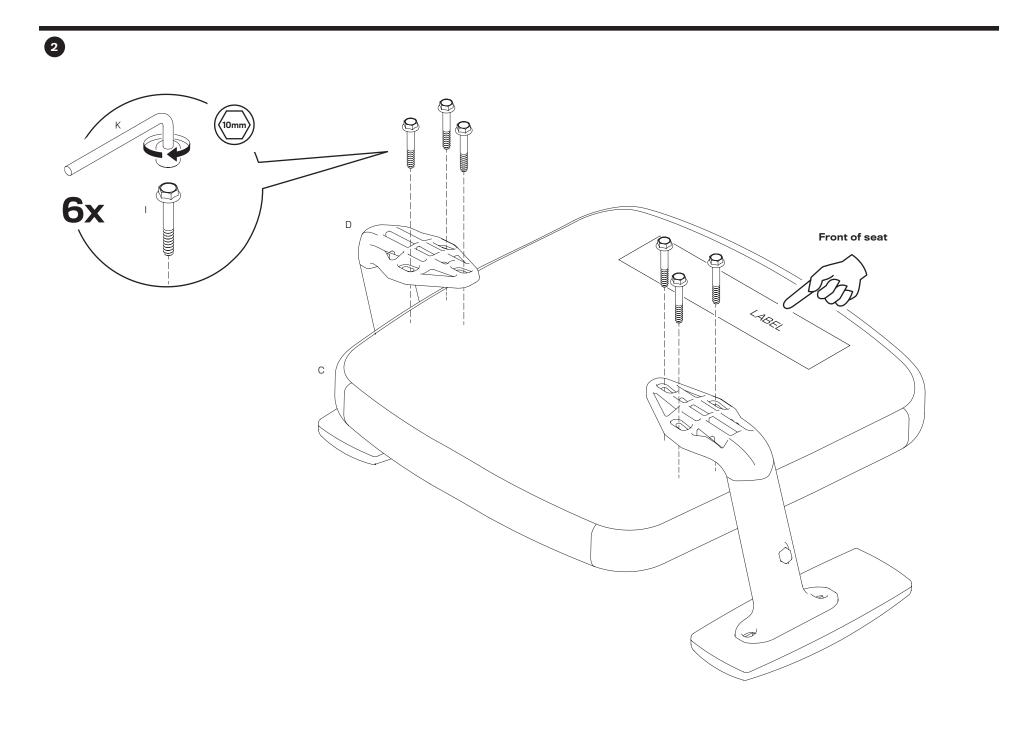

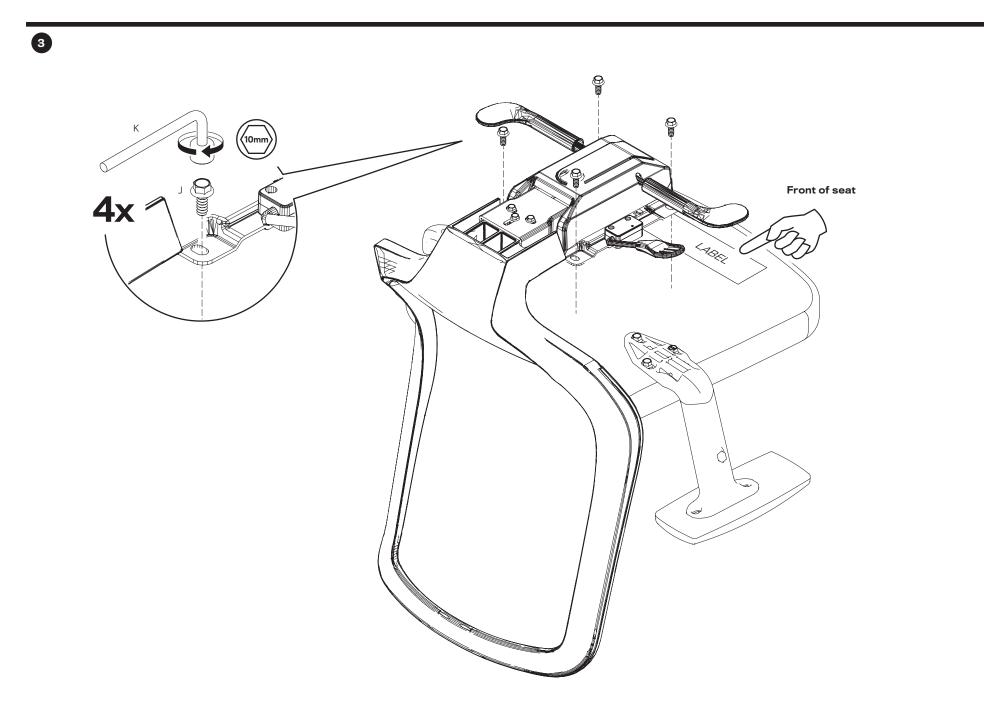

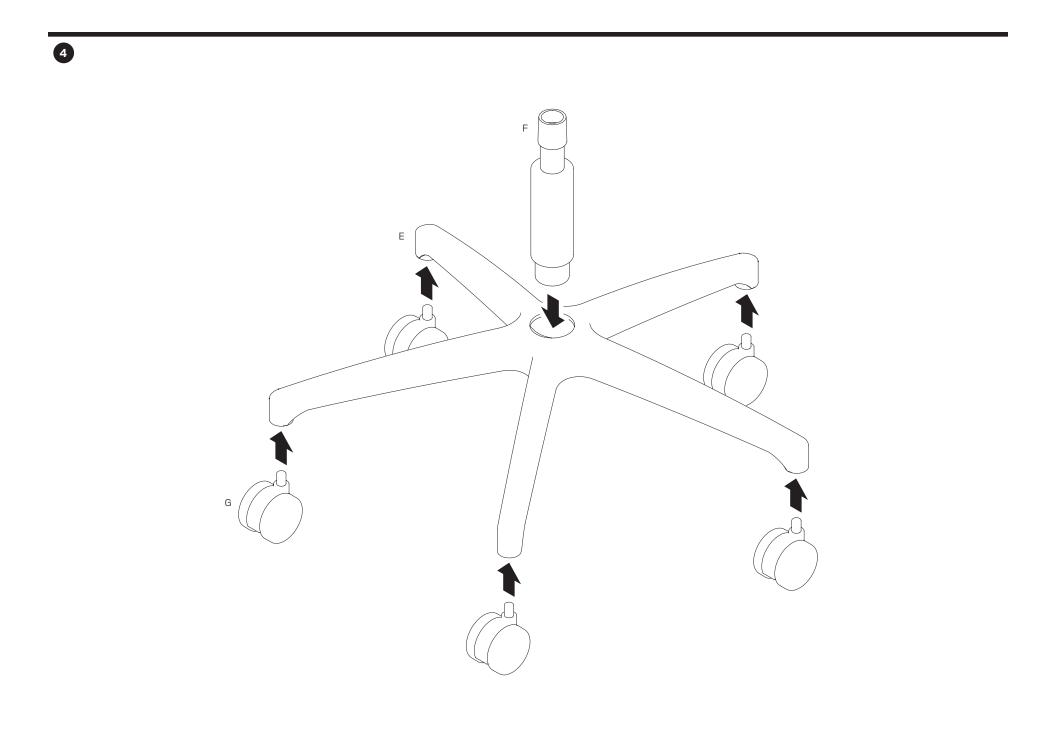

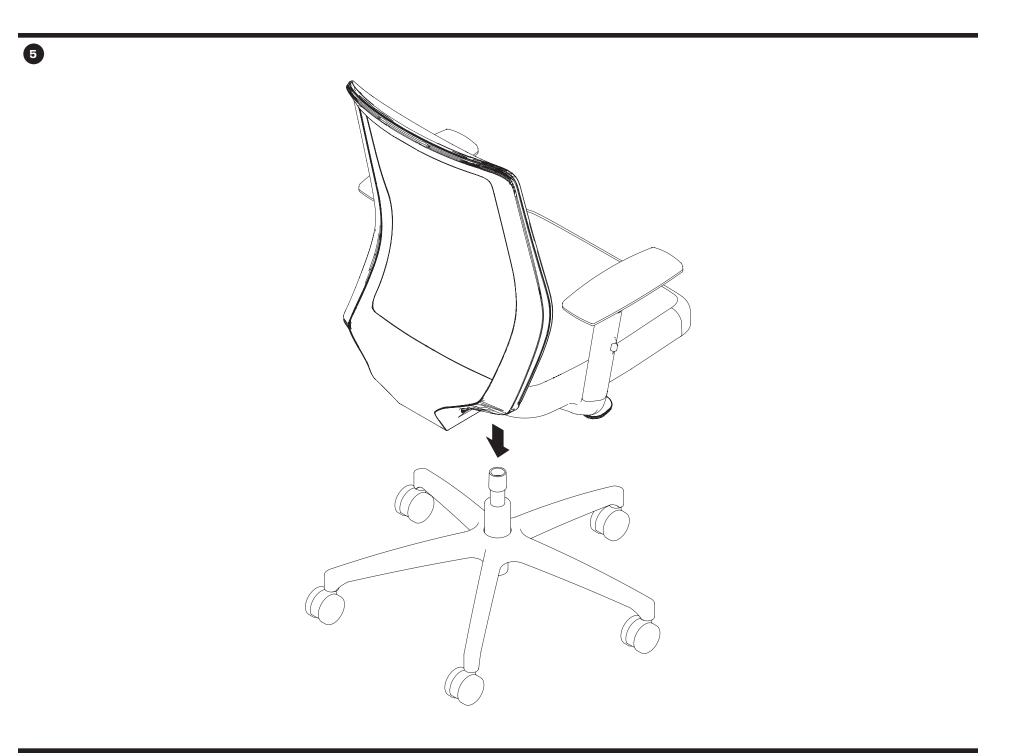



Note: Sit in the chair to ensure the connection between the gaslift and control is secure.

6

SEAT ADJUSTMENTS

1 SEAT HEIGHT ADJUSTMENT

Adjust the seat height by lifting your weight out of the chair and pulling up on the paddle. Proper seat height is realized when the top of your legs are somewhat parallel to the floor.

2 BACK TILT LOCK ADJUSTMENT (4 POSITION)

Rotate lever upward to unlock back tilt, lean back or forward to your desired position, rotate lever down to lock.

3 SEAT DEPTH ADJUSTMENT

Pull up on paddle while shifting your weight forward to move your seat forward. Shift backward to move your seat back.

