


## **DF-520VS**

Outdoor bluetooth speaker

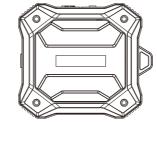

## The Operating Manual includes the use method and important matters needing attention Please check and keep it carefully

1 Important Notices

Do not drop, disassemble, deform, modify or insert any objects into this product as operating damage may result.

Please read the safety instructions carefully:

Do not attempt to repair, modify or disassemble the product yourself. This product does not contain any user-serviceable components and may void the warranty.

Do not place this product in to contact with any sharp objects as this may cause scratches and operating damage.

Do not attempt to replace the product battery, it is built-in and is not user changeable.

Observe all signs and displays that require an electrical device or RF radio product to be switch off in designated areas. Dispose of the product and the product's battery in accordance with local laws and regulations.

 
Do not place open flame source on near the product. Use the specialized adapter provided for charging.

Avoid using in damp or corrosive environment.

Do not touch metal or short circuit electrode.

## 2 Package included DF-520VS Speaker X1 User Manual / Warranty Card X1 USB Charging Cable X1 Climbing hook X1

3 Function Keys



2

③ Play/Pause (3) Play: 462 Short press Bluetooth mode: play / pause Call mode: answer and hang up

Long press In Bluetooth mode: Disconnect Bluetooth devices Next Track/ Volume " - "
 Short press for the volume decrease.
 Long press for next song.

(\$Charging indicator @Bluetooth indicator






8 9

Charging input

Battery

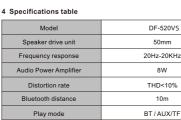

DC 5V-1A

1500mAh

	Product size		90*84*48 mm				
	Bluetooth version						
	3						
5 Solutions of common problems							
	The following table contains frequently asked questions and solutions Please read it carefully.						
	Problem		Solu	ution			
	Low voice or voiceless	Detection of Bluetooth device volume, adjust the volume to the appropriate location.;     Select the correct audio input channel; make sure all cables are properly connected;					
	Loudspeaker noise	Cables are properly connected;     Replace the other audio cables;     External output of the audio cable should free of noise.					
	No power or no charge	The adapter is properly connected to the host;     Check that the voltage and current of the power adapter meet the requirements.					
	Bluetooth connection matching failed	Check the sound is in the searching state (the Bluetooth pairing button flashes quickly).     Or reboot ,press the Bluetooth pairing button to switch;					
Audio input mode silent   check that the audio cable is properly co			s properly connected.				

Whether effective connection distance beyond the sound, or speaker and a Bluetooth device with obstacles.
 Try to replace another Bluetooth device for playback.


Music play Intermittent

4

Bluetooth speaker TWS function instruction

# 1. Simultaneously short press the button ① on the Speaker "A" and "B"; then, a sound "ding dong" will be heard and enter into the TWS pairing mode. 2. Open the "Bluetooth device" on the mobile phone and search for matching DF-520VS

 B Speaker



Note: if you can't sure whether the bluetooth speaker is connected to other devices, you can disconnect all the bluetooth connection related to the

A Speaker

Products	Warranty Commitment			
DF-520VS	12 Months Brand warranty			