 


# DRUMZZ

## THEATER

### DF-K10B

Outdoor bluetooth speaker

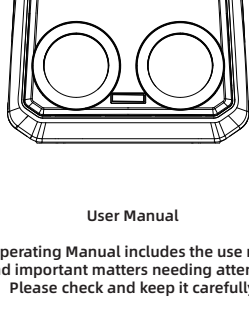

#### User Manual

The Operating Manual includes the use method and important matters needing attention. Please check and keep it carefully.

#### 一、Important information

Please read all instructions carefully and keep them properly before. Damage caused by non-compliance with the instructions is not covered by the warranty.

#### Safety

★ Be careful of electric shock or fire

Do not place this product and accessories near open flames or other heat sources, including direct sunlight. This product should be turned off before thunder and lightning.

★ Beware of short circuit or fire!

Before connecting this product to the power outlet, make sure that the power supply and voltage match the voltage value printed on the back or bottom of the product. If the voltage is different, do not connect this product to the power outlet. This product is made of recyclable high-performance materials and components.

Do not dispose of this product with other domestic garbage. Please know the local regulations on the classified collection of electronic and electrical products and batteries.

Proper disposal of these products helps to avoid potential negative impacts on the environment and human health.

Batteries contained in this product cannot be disposed of together with domestic garbage.

Please find out the local regulations on battery collection by classification. Proper disposal of batteries can help avoid potential negative impacts on the environment and human health.

#### 二、Packing list

DF-K10B Bluetooth Speaker X1

 
Operating Manual X1

USB Charging Cable X1

Aux cable x 1

- 1 -

### 三. Front function operation- (function key)

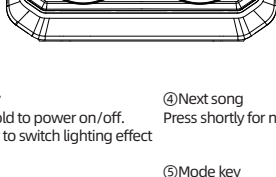

#### ① Power key

Press and hold to power on/off.  
Press shortly to switch lighting effect

#### ④ Next song

Press shortly for next song.

#### ② Last song

Press shortly for the last song

#### ⑤ Mode key

Press shortly to switch mode (Left to Right: BT, AUX, TF)  
Press and hold to enter TWS mode

#### ③ Power on

 
Press shortly  
Bluetooth Mode: Pause/Play  
Press and hold  
Bluetooth mode: Disconnect  
Bluetooth matching state

#### ⑥ Adjust the volume knob

Rotate the volume to the left-  
Rotate volume to the right +

- 2 -

### 三. Back Function Operation- (Function Key)

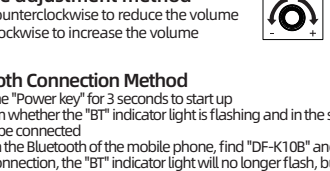

#### ① Mic

#### ② Reset hole

#### ③ USB Socket: Charging

#### ④ Charging indicator

#### ⑤ TF card socket

#### ⑥ AUX line socket

### 四、 Usage

 
 
 
#### Volume adjustment method

Rotate counterclockwise to reduce the volume  
Rotate clockwise to increase the volume



#### Bluetooth Connection Method

1. Press the "Power key" for 3 seconds to start up
2. Confirm whether the "BT" indicator light is flashing and in the state to be connected
3. Turn on the Bluetooth of the mobile phone, find "DF-K10B" and connect
4. After connection, the "BT" indicator light will no longer flash, but will be on for a long time



#### Note:

If the "BT" indicator is not flashing, it means that the device has been connected to another Bluetooth device. At this time, you can press and hold the "Power" to cancel the connected Bluetooth device for connecting other Bluetooth devices.

#### Light Changed

1. Press and hold the "Power key" for 3 seconds to start up
2. Press the "Power key" to change the lighting mode

- 3 -

### TWS

1. Press the "Power Key" for 3 seconds to start up two sets of "DF-K10B".
2. Confirm that the two "DF-K10B" are not connected to any other Bluetooth devices
3. One of the "DF-K10B" presses the "Mode key" for 3 seconds to switch to TWS mode. At this time, the "BT" indicator light and the "TWS" indicator light are flashing.
4. The other "DF-K10B" remains in "BT" mode and is not connected to any other Bluetooth devices.
5. Wait for two devices to match and connect automatically.
6. After the two "DF-K10B" TWS are successfully connected, turn on the Bluetooth of the mobile phone and find "DF-K10B" for Bluetooth connection

The "BT" and "TWS" indicator lights of Device 1 are flashing



 
The "BT" indicator of device 2 is flashing



After TWS matching is successful, the indicator lights of both devices will light up.


#### TF usage

1. Press and hold the "Power key" for 3 seconds to start up
2. Insert the TF card. The device will automatically enter TF playback mode.



#### AUX use

 
1. Press and hold the "Power key" for 3 seconds to start up
2. Insert one end of the matching 3.5 mm audio cable into the AUX hole of "DF-K10B" and another device at the other end.



- 4 -

#### Mic use

 1. Power on
2. Insert the Mic input cable and use it directly



#### Charging Method

1. Press and hold the "Power key" to turn off the power. Please do not charge when starting up
2. Plug in the attached USB charging cable on the input port, connect your USB adapter or the charging cable attached to the USB port of your computer, and plug the other side of it into the input port of the machine. During the charging process, the charging display lamp will turn on a red light and go out after charging.



### 四、 Specification List

Model No	DF-K10B
Speaker drive unit	3" *2
Frequency response range	25 - 16khz
Audio power amplifier	20W X 2
Distortion rate	THD < 1.0%
Bluetooth distance	10M
Playback Mode	BT/ AUX/TF/TWS
Charging input	DC 5V=2A
Battery specification	10000mAh lithium battery
Product size	265*118*259 mm
Bluetooth version	V5.0

- 5 -

### 五、 Fault Handling Method

The following table contains common problems and solutions. Please read it carefully.

Problem	Solution
---------	----------

The speaker has no sound	Try to turn up the volume; Please select the correct audio input channel; Please ensure that all cables are connected correctly
--------------------------	---

There is a noise in the speaker	cables are connected correctly; Please replace other audio cables; Please make sure that there is no noise in the output of the device outside the audio cable
---------------------------------	--

No electricity or charge	Please make sure that the adapter drinks the host correctly; If it cannot be charged, please check whether the voltage and current of the power adapter meet the demand.
--------------------------	--

Bluetooth pairing unsuccessful	Check whether the device is in pairing state (Bluetooth pairing flashes quickly). If not, please press Bluetooth pairing button to switch; Bluetooth pairing again after rebooting
--------------------------------	--

Audio input mode no sound	Please check that the audio cable is properly connected in place.
---------------------------	---

Bluetooth mode sound intermittent	Make sure that the connection distance between the host and the Bluetooth device is within 10 meters. Please make sure that there are no obstacles between the host and the Bluetooth device, or try to replace another Bluetooth device for playback
-----------------------------------	---

- 6 -

### Warranty

Products	Warranty commitment
DF-K10B	12 Months Brand warranty

- 7 -