



T-5X AIRCRAFT T-7X RIVETING T-9X HAMMERS

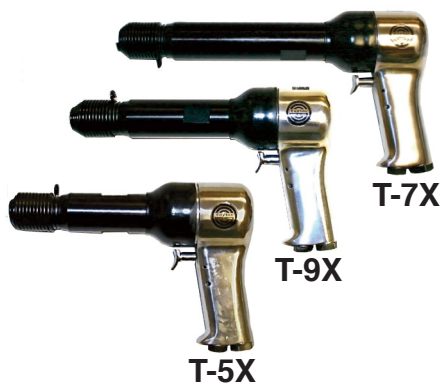

**OILING INSTRUCTIONS:
OIL AFTER EACH USE
WITH A FEW DROPS OF
AIRTOOL OIL THROUGH
THE AIR INLET. RUN FOR
1 SECOND TO COAT ALL
INTERNAL PARTS.**

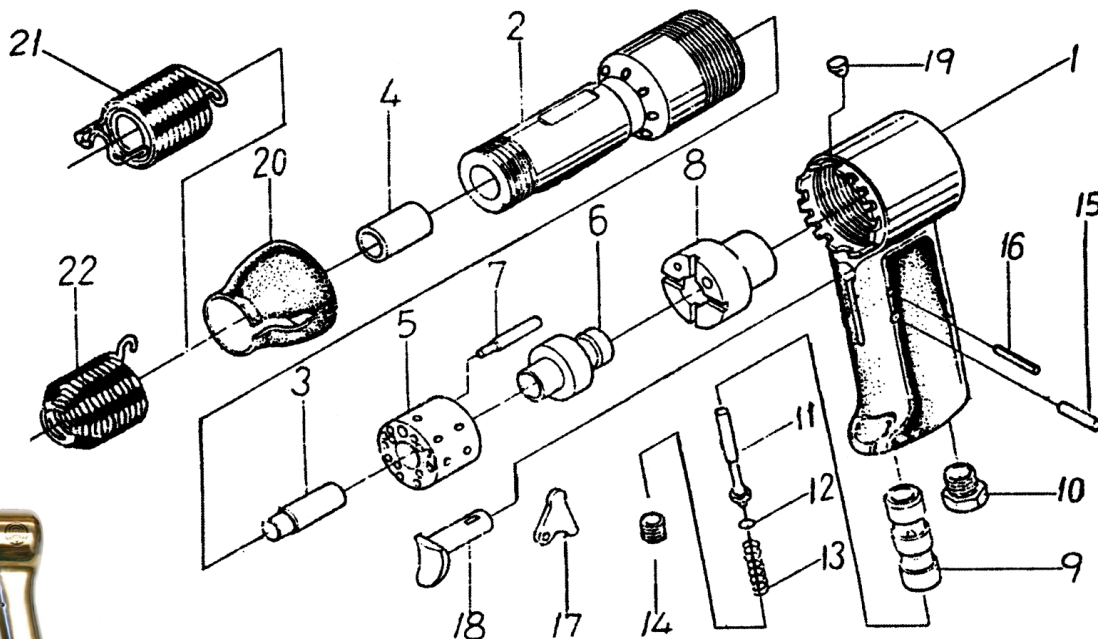

USE 90 PSI MAXIMUM

REF #	PART #	DESCRIPTION	QTY	REF #	PART #	DESCRIPTION	QTY
1	579X01A	COMPLETE HANDLE (INCLUDES PARTS #1,9,10,11,12,13, 14,15,16,17&18)	1	15	579X15	PIN	1
2	5X02	5X CYLINDER	1	16	579X16	PIN	1
2	7X02	7X CYLINDER	1	17	579X17	ASSIST LEVER	1
2	9X02	9X CYLINDER	1	18	579X18A	TRIGGER	1
3	579X03	579X PISTON	1	19	579X19	STOP PIN	1
4	579X04	BUSHING	1	20	579X20	EXHAUST COVER	1
5	579X05	VALVE BOX	1	21	T-6120	QUICK CHANGE SPRING	OPT
6	579X06	VALVE	1	22	T-6210	BEEHIVE SPRING	1
7	579X07	PIN	1			OPTIONAL EXTRAS	
8	579X08	VALVE SEAT	1	T-5710		MULTI POSITION REGULATOR	
9	579X09	THROTTLE BUSHING	1	T-7922		HOSE SWIVEL	
10	579X10	INLET BUSHING	1	T-7922R		HOSE SWIVEL W/ REGULATOR	
11	579X11	VALVE STEM	1	T-8004		AIRTOOL OIL - 4OZ.	
12	579X125	O-RING	1	579XG01A		GOOSENECK HANDLE	
13	79X13	SPRING	1				
14	579X14	PLUG	1				

505 N. Railroad Ave. 33435
P.O. Box 1117 33425
Boynton Beach, FL

FOR WARRANTY INFORMATION &
WARRANTY REGISTRATION VISIT

www.taylorpneumatic.com

Ph. (561)732-1111
Fax. (561)731-4412
Toll Free (800) 805-8665