


T-6356 MINI NEEDLE SCALER



OILING INSTRUCTIONS:
OIL AFTER EACH USE WITH A FEW DROPS OF AIRTOOL OIL THROUGH THE AIR INLET. RUN FOR 1 SECOND TO COAT ALL INTERNAL PARTS.

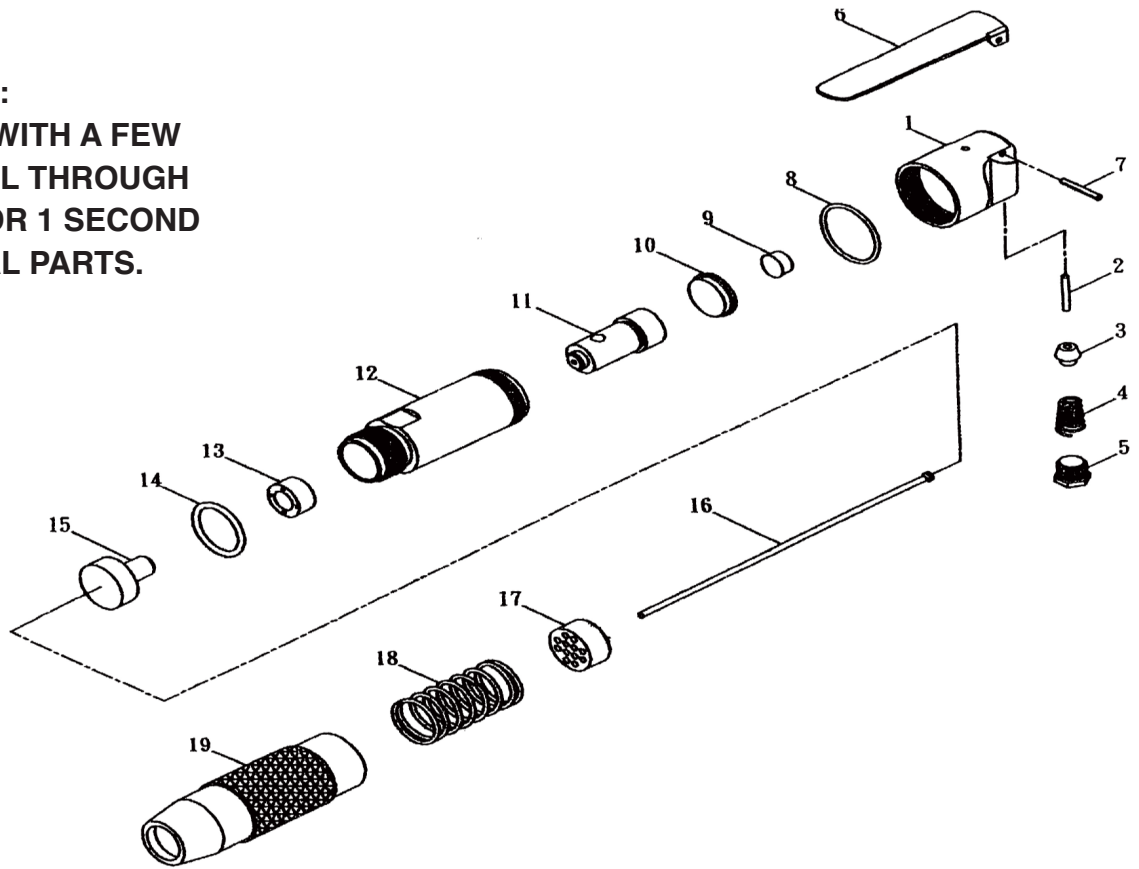

USE 90 PSI MAXIMUM

REF #	PART #	DESCRIPTION	QTY	REF #	PART #	DESCRIPTION	QTY
1	635601	BACK HEAD	1	13	635613	CHISEL BUSHING	1
2	635602	VALVE STEM	1	14	635614	O-RING	1
3	635603	VALVE SEAT	1	15	635615	NEEDLE DRIVER	1
4	635604	SPRING	1	16	T-635646	NEEDLES 3MM (12 PER SET)	1set
5	635605	THROTTLE CAP	1	17	635617	NEEDLE HOLDER	1
6	635606	LEVER	1	18	635618	SPRING	1
7	635607	SPRING PIN	1	19	635619	NEEDLE TUBE	1
8	635608	O-RING	1			OPTIONAL	
9	635609	RUBER CUSHION VALVE	1			REPAIR KIT	
10	635610	CAP	1		T-6356RK	INCLUDES: 2,3,4,5,13,14,15,	
11	635611	PISTON	1			16,17,18	
12	635612	CYLINDER	1				

505 N. Railroad Ave. 33435
 P.O. Box 1117 33425
 Boynton Beach, FL

FOR WARRANTY INFORMATION &
 WARRANTY REGISTRATION VISIT
www.taylorpneumatic.com

Ph. (561)732-1111
 Fax. (561)731-4412
 Toll Free (800) 805-8665