


T-6796L & T-6796L-6

1" SUPER DUTY IMPACT WRENCH

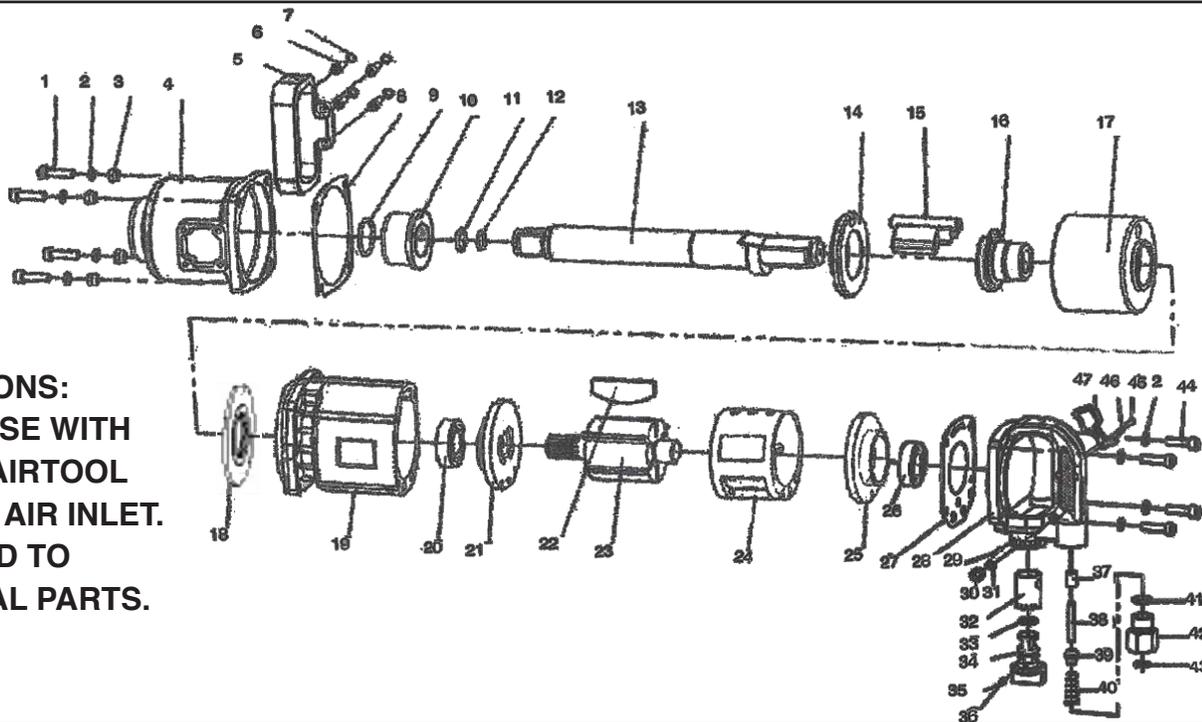

OILING INSTRUCTIONS:
OIL AFTER EACH USE WITH
A FEW DROPS OF AIRTOOL
OIL THROUGH THE AIR INLET.
RUN FOR 1 SECOND TO
COAT ALL INTERNAL PARTS.

USE 90 PSI MAXIMUM

REF #	PART #	DESCRIPTION	QTY	REF #	PART #	DESCRIPTION	QTY
1	6796L01	CAP SCREW	4	24	6796L24	CYLINDER	1
2	6796L02	SPRING WASHER	8	25	6796L25	REAR END PLATE	1
3	6796L03	NUT	4	26	6796L26	BEARING	1
4	6796L04	HAMMER CASE	1	27	6796L27	REAR COVER GASKET	1
5	6796L05	D HANDLE	1	28	6799L27A	HANDLE ASSEMBLY	1
6	6796L06	HEX SCREW	4	29	6796L29	PIN	1
7	6796L07	SPRING WASHER	4	30	6796L30	HEX SCREW	1
8	6796L08	HAMMER CASE GASKET	1	31	6796L31	O-RING	1
9	6796L09	O-RING	1	32	6796L32	VALVE BUSHING	1
10	6796L10	BUSHING	1	33	6796L33	O-RING	1
11	6796L11	SOCKET RETAINING RING	1	34	6796L34	FORWARD AND REVERSE VALVE	1
12	6796L12	O-RING	1	35	6796L35	BALL	1
13	6796L13	ANVIL LONG	1	36	6796L36	SPRING	1
13A	6796L13A	ANVIL SHORT (NOT SHOWN)	1	37	6796L37	THROTTLE BUSHING	1
14	6796L14	HAMMER BUSHING	1	38	6796L38	THROTTLE VALVE PIN	1
15	6796L15	HAMMER	1	39	6796L39	THROTTLE VALVE	1
16	6796L16	CAM	1	40	6796L40	OINLET SPRING	1
17	6796L17	HAMMER CAGE	1	41	6796L41	O-RING	1
18	6796L18	WASHER	1	42	6796L42	AIR INLET	1
19	6796L19	HOUSING	1	43	6796L43	AIR INLET SCREEN	1
20	6796L20	BEARING	1	44	6796L44	HEX SCREW	4
21	6796L21	FRONT END PLATE	1	45	6796L45	PIN	1
22	6796L22	ROTOR BLADES (SET OF 6)	1set	46	6796L46	PIN	1
23	6796L23	ROTOR	1	47	6796L47	TRIGGER	1

505 N. Railroad Ave. 33435
P.O. Box 1117 33425
Boynton Beach, FL

FOR WARRANTY INFORMATION &
WARRANTY REGISTRATION VISIT

www.taylorpneumatic.com

Ph. (561)732-1111
Fax. (561)731-4412
Toll Free (800) 805-8665