


T-7605 Scaling Hammer

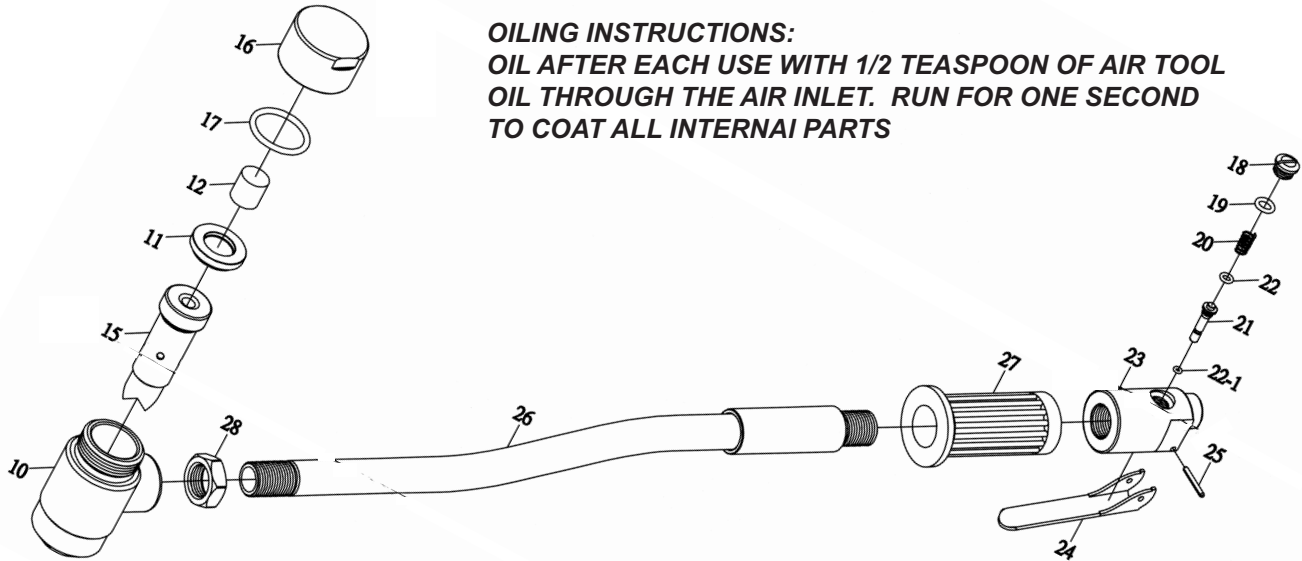

OILING INSTRUCTIONS:
OIL AFTER EACH USE WITH 1/2 TEASPOON OF AIR TOOL OIL THROUGH THE AIR INLET. RUN FOR ONE SECOND TO COAT ALL INTERNAL PARTS

USE 90 PSI MAXIMUM

Ref #	Part #	Description	Qty.	Ref #	Part #	Description	Qty.
10	760510	Cylinder	1	21	760521	Valve Stem	1
11	760511	Valve Cap	1	22	760522	O-Ring	1
12	760512	Spacer	1	22-1	760522-1	O-Ring	1
15	760515	Piston	1	23	760523	Valve Body	1
16	760516	Cylinder Head	1	24	760524	Throttle Lever	1
17	760517	O-Ring	1	25	760525	Spring Pin	1
18	760519	Valve Cap	1	26	760526	Tube	1
19	760517	O-Ring	1	27	760527	Handle Grip	1
20	760520	Valve Spring	1	28	760528	Lock Nut	1

505 N. Railroad Ave. 33435
 P.O. Box 1117 33425
 Boynton Beach, Florida

SEE OUR CATALOG
 at
www.taylorpneumatic.com

Ph. (561) 732-1111
 Fax (561) 731-4412
 Toll Free 800-805-8665