


# T-7616 Air Scribe

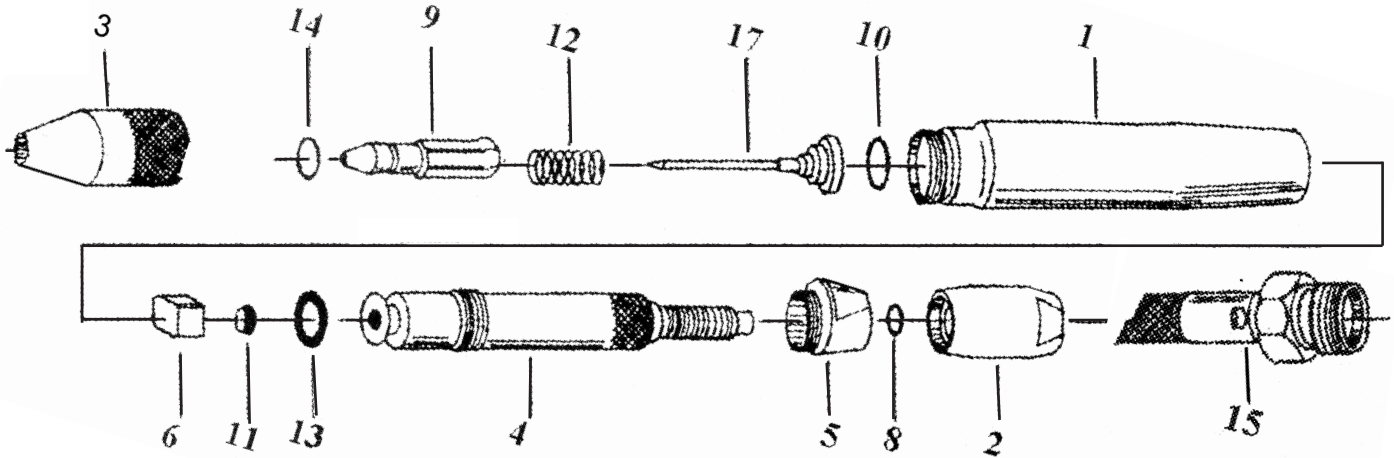

**OILING INSTRUCTIONS: OIL AFTER EACH USE WITH A FEW DROPS OF AIRTOOL OIL THROUGH THE AIR INLET. RUN FOR 1 SECOND TO COAT ALL INTERNAL PARTS**



**USE 90 PSI MAXIMUM**

Ref #	Part #	Description	Qty.	Ref #	Part #	Description	Qty.
1	761601	Body	1	10	761610	O-Ring	1
2	761602	Adjustment Nut	1	11	761611	Seal	1
3	761603	Nose	1	12	761612	Spring	1
4	761604	Throttle Valve	1	13	761613	O-Ring	1
5	761605	Ring Nut	1	14	761614	O-Ring	1
6	761606	Valve Seat	1	15	761615	Air Hose	1
8	761608	O-Ring	1	17	T-761617	Carbide Tip	1
9	761609	Bushing	1				

505 N. Railroad Ave. 33435  
 P.O. Box 1117 33425  
 Boynton Beach, Florida

FOR WARRANTY INFORMATION &  
 WARRANTY REGISTRATION VISIT  
[www.taylorpneumatic.com](http://www.taylorpneumatic.com)

Ph. (561) 732-1111  
 Fax (561) 731-4412  
 Toll Free 800-805-8665