


# T-7761 1/4" Straight Screwdriver

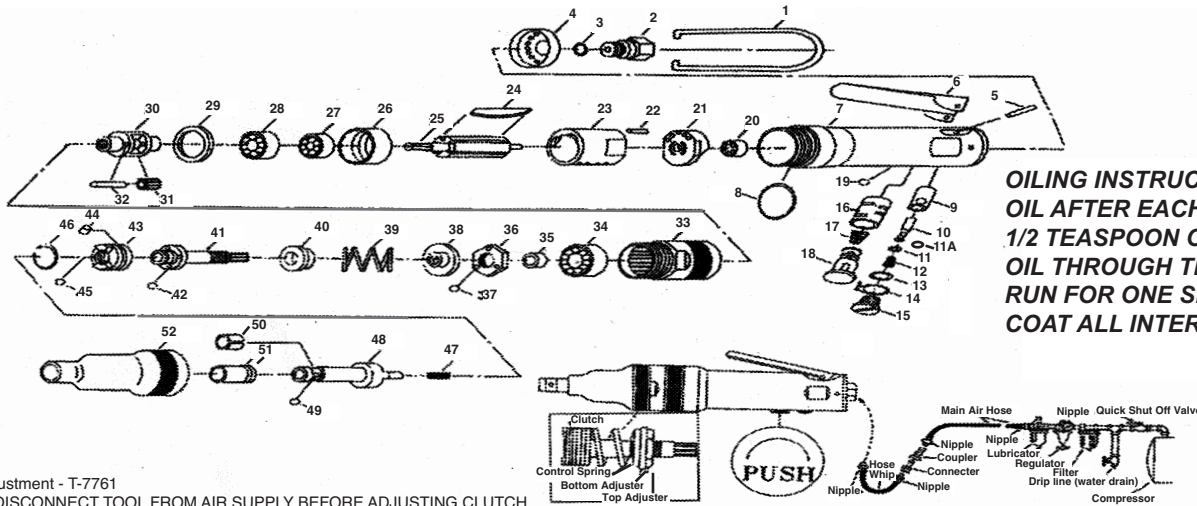

**OILING INSTRUCTIONS:**  
**OIL AFTER EACH USE WITH**  
**1/2 TEASPOON OF AIRTOOL**  
**OIL THROUGH THE AIR INLET.**  
**RUN FOR ONE SECOND TO**  
**COAT ALL INTERNAL PARTS**

### Clutch Adjustment - T-7761

ALWAYS DISCONNECT TOOL FROM AIR SUPPLY BEFORE ADJUSTING CLUTCH

To adjust clutch, remove part #52 clutch housing (left hand threads). Clutch assembly can be removed in one unit (part # 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46 and 47). Be careful not to lose #35 that is sandwiched between the clutch and gear housing. #47 spring is inside of #41. Two wrenches are supplied with each tool. Wrench with splined hole attaches to spline on part #41. Use the second wrench to tighten or loosen part #36, which will increase or decrease the torque output. Compressing the spring #39 will increase the torque and decompressing the spring will decrease the torque. After adjusting the clutch, reassemble to original location and reinstall part #52. Be sure that #35 & #47 are still in place when reassembling. Always keep clutch free from dirt.

### USE 90 PSI MAXIMUM

Ref #	Part #	Description	Qty.	Ref #	Part #	Description	Qty.
1	776101	Hanger	1	28	776128	Bearing	1
2	776102	Air Inlet	1	29	776129	Washer	1
3	776103	O-Ring	1	30	776130	Planet Cage	1
4	776104	Exhaust Cover	1	31	776131	Planet Gear	2
5	776105	Lever Pin	1	32	776132	Planet Pin	2
6	776106	Switch Lever	1	33	776133	Internal Gear	1
7	776107	Rotor Case	1	34	776134	Bearing	1
8	776108	O-Ring	1	35	776135	Collar	1
9	776109	Bushing	1	36	776136	Adjust Nut	1
10	776110	Valve Stem	1	37	776137	Steel Ball	3
11	776111	O-Ring	1	38	776138	Adjust Nut Seat	1
11A	776111A	O-Ring	1	39	776139	Clutch Spring (light)	1
12	776112	Valve Spring	1	39	7761AH39	Clutch Spring (heavy)	1
13	776113	O-Ring	1	40	776140	Clutch Spring Seat	1
14	776114	Reverse Retainer	1	41	776141	Clutch Spindle	1
15	776115	Valve Screw	1	42	776142	Steel Ball	14
16	776116	Bushing	1	43	776143	Dog	1
17	776117	Reverse Spring	1	45	776145	Steel Ball	15
18	776118	Reverse Valve	1	46	776146	Dog Retainer	1
20	776120	Bearing	1	47	776147	Center Spring	1
21	776121	Rear End Plate	1	48	776148	Anvil	1
22	776122	Pin	1	49	776149	Ball	1
23	776123	Cylinder	1	50	776150	Steel Ball Collar	1
24	776124	Rotor Blade (5 per set)	1 set	51	776151	Bushing	1
25	776125	Rotor	1	52	776152	Clutch Case Nut	1 set
26	776126	Front End Plate	1	53	776199	Wrench Set (2) (not shown)	1
27	776127	Bearing	1				

505 N. Railroad Ave. 33435  
P.O. Box 1117 33425  
Boynton Beach, Florida

SEE OUR CATALOG  
at  
[www.taylorpneumatic.com](http://www.taylorpneumatic.com)

12/15TPTC /all rights reserved /COPYRIGHT 2015 / final

Ph. (561) 732-1111  
Fax (561) 731-4412  
Toll Free 800-805-8665