


T-7780 Nailer



OILING INSTRUCTIONS:

OIL AFTER EACH USE WITH 1/2 TEASPOONS OF AIRTOOL OIL THROUGH THE AIR INLET. RUN FOR ONE SECOND TO COAT ALL INTERNAL PARTS

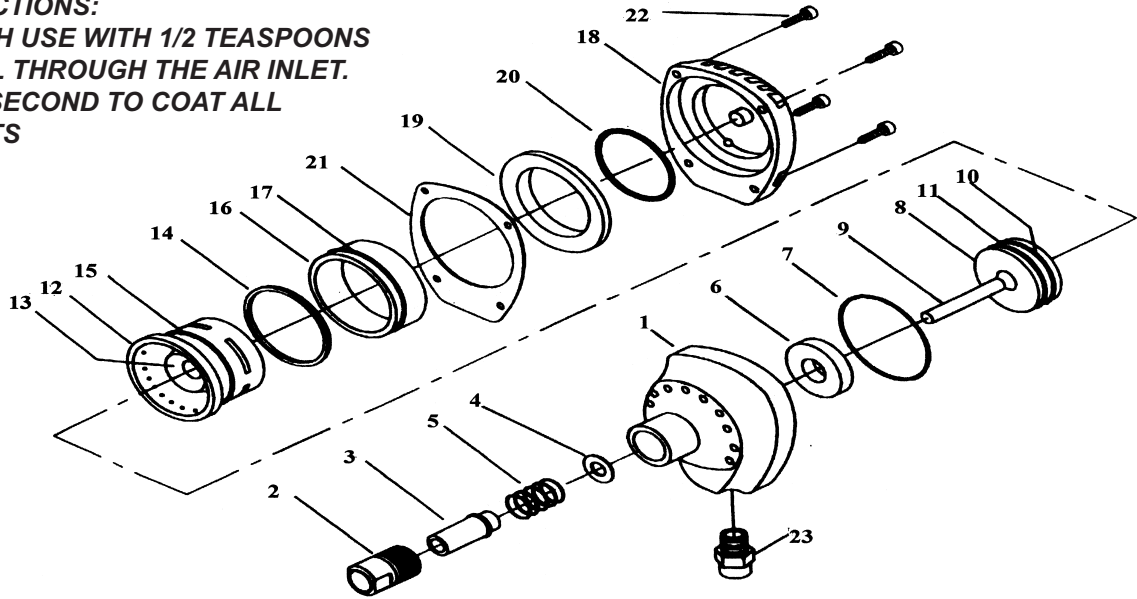

USE 90 PSI MAXIMUM

Ref #	Part #	Description	Qty.	Ref #	Part #	Description	Qty.
1	778001	Body	1	13	778013	Cylinder Cover	1
2	778002	Guide Box	1	14	778014	Rubber Ring	1
3	778003	Guide Bushing	1	15	778015	O-Ring	1
4	778004	Spring Washer	1	16	778016	Valve	1
5	778005	Spring	1	17	778017	O-Ring	1
6	778006	Damping Rubber	1	18	778018	Cover	1
7	778007	O-Ring	1	19	778019	Valve Packing	1
8	778008	Piston	1	20	778020	O-Ring	1
9	778009	Piston Rod	1	21	778021	Gasket	1
10	778010	O-Ring	1	22	778022	Screw	4
11	778011	O-Ring	1	23	778023	Air Inlet	1
12	778012	Cylinder	1	24	778024	Hex Wrench (not shown)	1

505 N. Railroad Ave. 33435
P.O. Box 1117 33425
Boynton Beach, Florida

SEE OUR CATALOG
at
www.taylorpneumatic.com

Ph. (561) 732-1111
Fax (561) 731-4412
Toll Free 800-805-8665