


# T-7797L 1" Impact T-7797L-6 Wrench

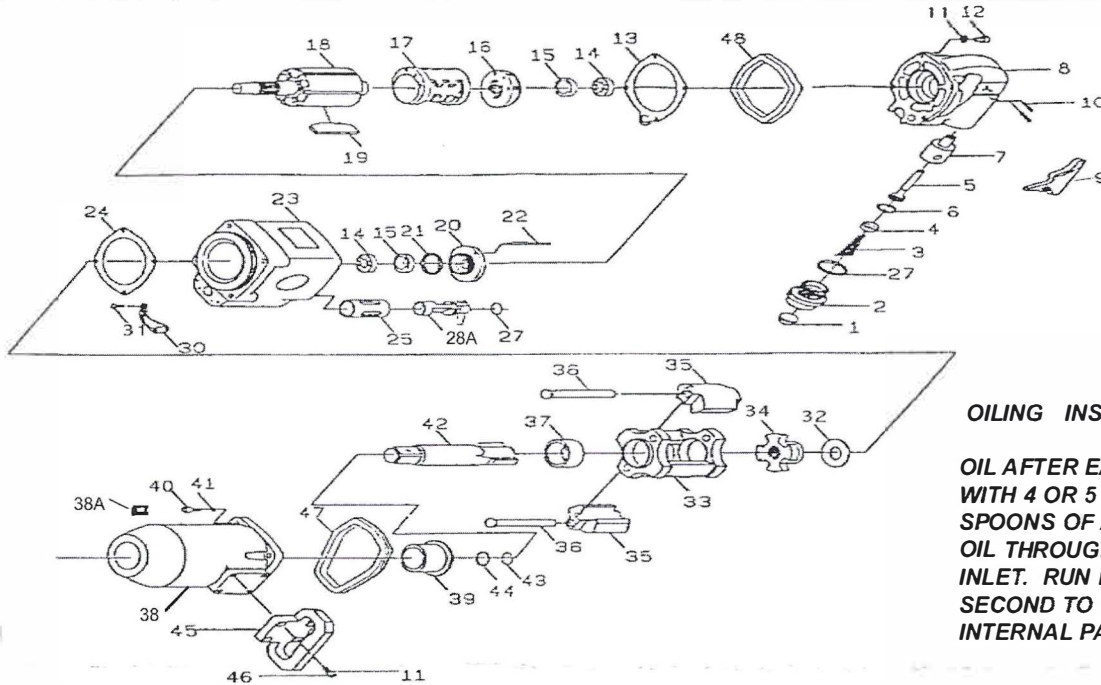

### OILING INSTRUCTIONS:

**OIL AFTER EACH USE WITH 4 OR 5 TABLE-SPOONS OF AIRTOOL OIL THROUGH THE AIR INLET. RUN FOR ONE SECOND TO COAT ALL INTERNAL PARTS.**

### USE 90 PSI MAXIMUM

Ref. #	Part #	Description	Qty.
1	7797L01	Screen	1
2	7797L02	Hose Adapter	1
3	7797L03	Spring	1
4	7797L04	Retainer	1
5	7797L05	Throttle Valve	1
6	7797L06	"O" Ring	1
7	7797L07	Brass Bushing	1
8	7797L08	Throttle Housing	1
9	7797L09	Trigger	1
10	7797L10	Pin	2
11	7797L11	Spring Washer	8
12	7797L12	Screw	4
13	7797L13	Gasket	1
14	7797L14	Bearing	2
15	7797L15	Oil Seal	2
16	7797L16	Rear Plate	1
17	7797L17	Cylinder	1
18	7797L18	Rotor	1
19	7797L19	Rotor Blade (6 per set)	1 set
20	7797L20	Front Plate	1
21	7797L21	"O" Ring	1
22	7797L22	Spring Pin	1
23	7797L23	Motor Housing	1
24	7797L24	Gasket	1

Ref. #	Part #	Description	Qty.
25	7797L25	Bushing	1
27	7797L27	"O" Ring	1
28A	7797L28A	Reverse Lever	1
30	7797L30	Exhaust Deflector	1
31	7797L31	Screw	4
32	7797L32	Spacer	1
33	7797L33	Clutch Cage	1
34	7797L34	Cam	1
35	7797L35	Clutch Dog	2
36	7797L36	Clutch Pin	2
37	7797L37	Flange Bushing	1
38	7797L38	Front Housing	1
38A	7797L38A	Oil Plug Screw	1
39	7797L39	Bushing	1
40	7797L40	Screw	4
41	7797L41	Spring Washer	4
42	7797L42	2" Anvil	1
42	7797L-642	6" Anvil	1
43	7797L43	"O" Ring	1
44	7797L44	Retaining Ring	1
45	7797L45	Side Spade Handle	1
46	7797L46	Screw	4
47	7797L47	Rubber Guard	1
48	7797L48	Rubber Guard	1

505 N. Railroad Ave.  
P.O. Box 1117  
Boynton Beach, Florida 33435

**SEE OUR CATALOG**  
at  
[www.taylorpneumatic.com](http://www.taylorpneumatic.com)

PH. 561-732-1111  
FAX 561-731-4412  
Toll Free 800-805-8665

07/13 TPTCDPT  
all rights reserved  
COPYRIGHT 2013  
final