

T-7825N


1/4" RATCHET WRENCH

T-7826N

3/8" RATCHET WRENCH



**OILING INSTRUCTIONS:
OIL AFTER EACH USE
WITH A FEW DROPS OF
AIRTOOL OIL THROUGH
THE AIR INLET. RUN FOR
1 SECOND TO COAT ALL
INTERNAL PARTS.**

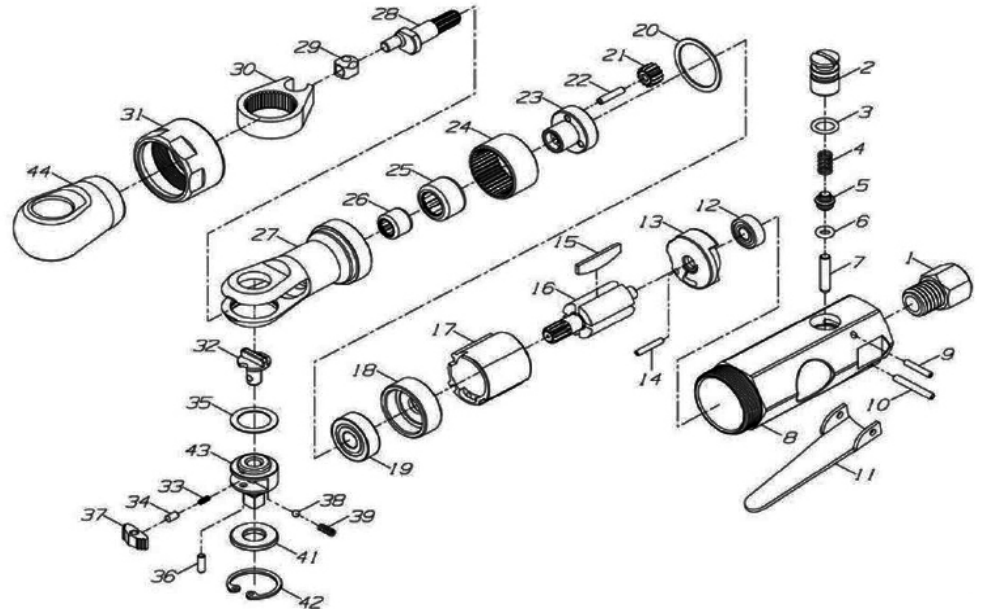

*ALWAYS KEEP RATCHET HEAD CLEAN & AWAY FROM SAND AND DIRT. FAILURE TO DO SO MAY VOID THE WARRANTY.

USE 90 PSI MAXIMUM

REF #	PART #	DESCRIPTION	QTY	REF #	PART #	DESCRIPTION	QTY
1	7825N01	AIR INLET	1	24	7825N24	INTERNAL GEAR	1
2	7825N02	REGULATOR	1	25	7825N25	NEEDLE BEARING	1
3	7825N03	O-RING	1	26	7825N26	NEEDLE BEARING	1
4	7825N04	SPRING	1	27	7825N27	RATCHET HOUSING	1
5	7825N05	VALVE BUSHING	1	28	7825N28	CRANK SHAFT	1
6	7825N06	O-RING	1	29	7825N29	DRIVE BUSHING	1
7	7825N07	VALVE	1	30	7825N30	YOKE	1
8	7825N08	HANDLE	1	31	7825N31	HECK LOCK NUT	1
9	7825N09	PIN	1	32	7825N32	REVERSE BUTTON	1
10	7825N10	PIN	1	33	7825N33	SPRING	1
11	7825N11	LEVER	1	34	7825N34	LOCK PIN	1
12	7825N12	BALL BEARING	1	35	7825N35	WASHER	1
13	7825N13	REAR END PLATE	1	36	7825N36	PAWL PIN	1
14	7825N14	PIN	1	37	7825N37	RATCHET PAWL	1
15	7825N15	ROTOR BLADE (4)	1set	38	7825N38	STEEL BALL	2
16	7825N16	ROTOR	1	39	7825N39	SPRING	2
17	7825N17	CYLINDER	1	41A	7825N41	THRUST WASHER (1/4")	1
18	7825N18	FRONT END PLATE	1	41B	7826N41	THRUST WASHER (3/8")	1
19	7825N19	BALL BEARING	1	42	7825N42	RETAINING RING	1
20	7825N20	WASHER	1	43A	7825N43	1/4" ANVIL	1
21	7825N21	GEAR	3	43B	7826N43	3/8" ANVIL	1
22	7825N22	GEAR PIN	3	44	7825N44	BOOT	1
23	7825N23	GEAR CARRIER	1				

505 N. Railroad Ave. 33435
P.O. Box 1117 33425
Boynton Beach, FL

SEE MORE OF OUR CATALOG AT
www.taylorpneumatic.com

Ph. (561)732-1111
Fax. (561)731-4412
Toll Free (800) 805-8665

JUNE 2020 / ALL RIGHTS RESERVED / COPYRIGHT 2020