


T-7838B Economy Sealant Cutter

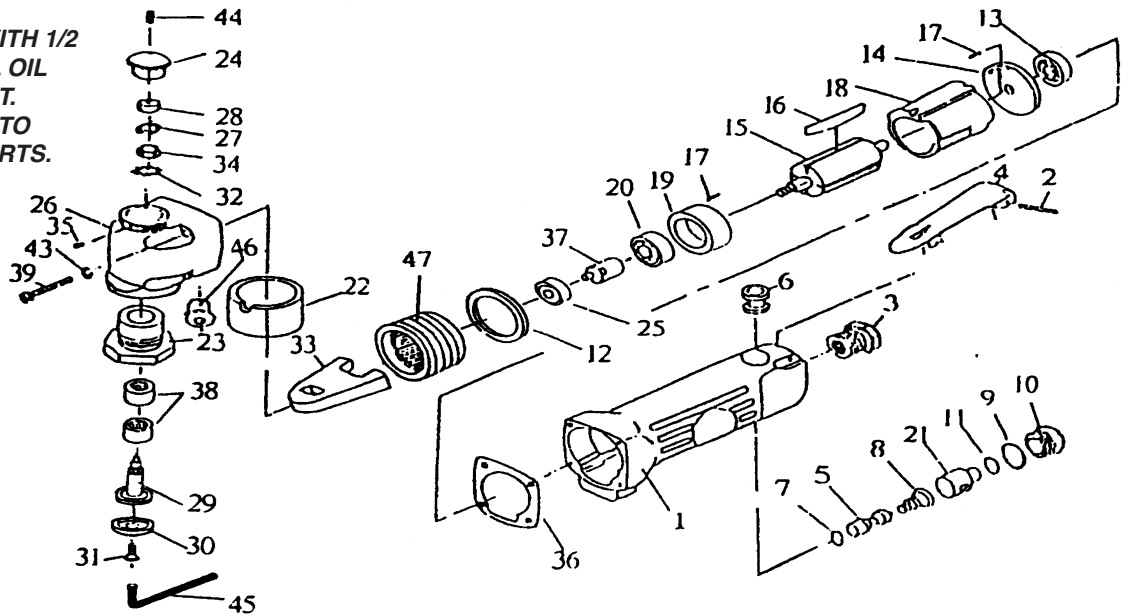

OILING INSTRUCTIONS:
OIL AFTER EACH USE WITH 1/2 TEASPOON OF AIRTOOL OIL THROUGH THE AIR INLET. RUN FOR ONE SECOND TO COAT ALL INTERNAL PARTS.



USE 90 PSI MAXIMUM

Ref #	Part #	Description	Qty.	Ref #	Part #	Description	Qty.
1	7838B01	Motor Housing	1	23	7838B23	Clamp Nut	1
2	7838B02	Pin	1	24	7838B24	Back Cover	1
3	7838B03	Air Inlet	1	25	7838B25	Bearing	1
4	7838B04	Throttle Lever Assembly	1	26	7838B26	Head	1
5	7838B05	Valve Stem	1	27	7838B27	Retainer Ring	1
6	7838B06	Bushing	1	28	7838B28	Bearing	1
7	7838B07	O-Ring	1	29	7838B29	Work Spindle	1
8	7838B08	Valve Spring	1	30	7838B30	Washer	1
9	7838B09	O-Ring	1	31	7838B31	Screw	1
10	7838B10	Throttle Valve Plug	1	32	7838B32	Lock Washer	1
11	7838B11	O-Ring	1	33	7838B33	Oscillator	1
12	7838B12	Washer	1	34	7838B34	Nut	1
13	7838B13	Bearing	1	35	7838B35	Set Screw	1
14	7838B14	Rear End Plate	1	36	7838B36	Gasket	1
15	7838B15	Rotor	1	37	7838B37	Crank Shaft	1
16	7838B16	Rotor Blades (4 per set)	1 set	38	7838B38	Needle Bearing	2
17	7838B17	Pin	2	39	7838B39	Cap Screw	4
18	7838B18	Cylinder	1	43	7838B43	Spring Washer	4
19	7838B19	Front End Plate	1	44	7838B44	Set Screw	1
20	7838B20	Bearing	1	45	7838B45	Hex Key Wrench	1
21	7838B21	Air Regulator	1	46	7838B46	Grease Fitting	1
22	7838B22	Spacer	1	47	7838B47	Retainer	1

505 N. Railroad Ave. 33435
P.O. Box 1117 33425
Boynton Beach, Florida

SEE OUR CATALOG
at
www.taylorpneumatic.com

Ph. (561) 732-1111
Fax (561) 731-4412
Toll Free 800-805-8665