


# T-8779RD14 (1/4") T-8779RD38 (3/8") Pistol Grip Drill



## OILING INSTRUCTIONS:

OIL AFTER EACH USE WITH A FEW DROPS OF AIRTOOL OIL THROUGH THE AIR INLET. RUN FOR ONE SECOND TO COAT ALL INTERNAL PARTS

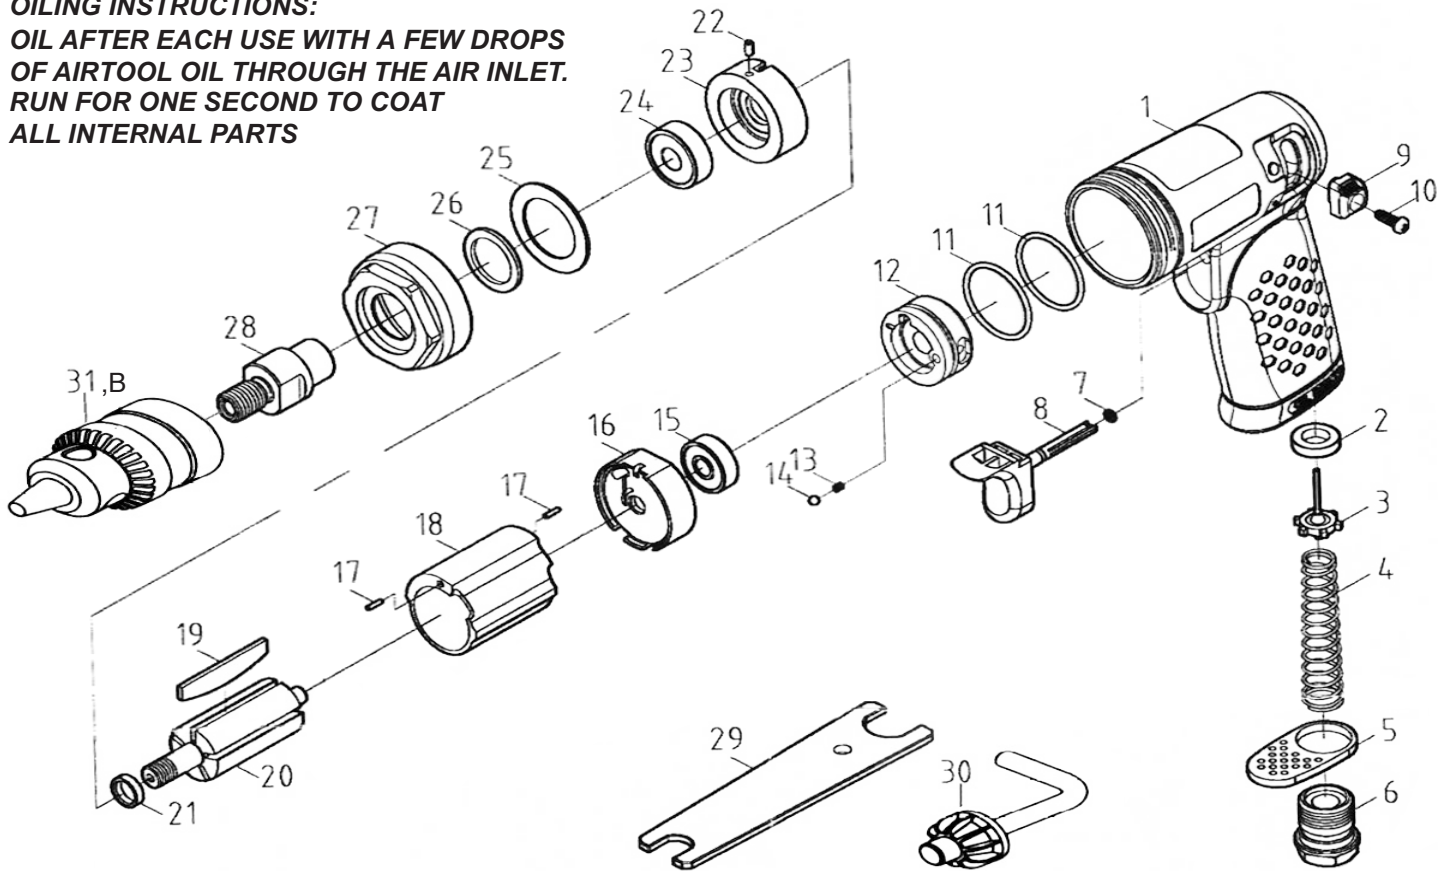

### USE 90 PSI MAXIMUM

Ref #	Part #	Description	Qty.	Ref #	Part #	Description	Qty.
1	8779R01	Housing	1	17	8779R17	Pin	2
2	8779R02	Valve Seat	1	18	8779R18	Cylinder	1
3	8779R03	Valve	1	19	8779R19	Rotor Blade (set of 5)	1 set
4	8779R04	Valve Spring	1	20	8779R20	Rotor	1
5	8779R05	Exhaust Deflector	1	21	8779R21	Washer	1
6	8779R06	Air Inlet	1	22	8779R22	Pin	1
7	8779R07	O-Ring	1	23	8779R23	Front End Plate	1
8	8779R08	Trigger	1	24	8779R24	Bearing	1
9	8779R09	Regulator Knob	1	25	8779R25	Washer	1
10	8779R10	Screw	1	26	8779R26	Felt	1
11	8779R11	O-Ring	2	27	8779R27	Clamp Nut	1
12	8779R12	Rear Plate Spacer	1	28	8779R28	3/8"-24 Adaptor	1
13	8779R13	Spring	1	29	8779R29	Wrench	1
14	8779R14	Steel Ball	1	30	T-7788-B	Chuck Key	1
15	8779R15	Bearing	1	31	T-7788-A	3/8" Drill Chuck	1
16	8779R16	Rear End Plate	1	31B	T-7888-A	1/4" Drill Chuck	1

505 N. Railroad Ave. 33435  
P.O. Box 1117 33425  
Boynton Beach, Florida

For Warranty Information &  
Warranty Registration Visit  
[www.taylorpneumatic.com](http://www.taylorpneumatic.com)

1122 TPTC /all rights reserved /COPYRIGHT 2022 / final

Ph. (561) 732-1111  
Fax (561) 731-4412  
Toll Free 800-805-8665