


T-9947R

1/4" INDUSTRIAL DIE GRINDER

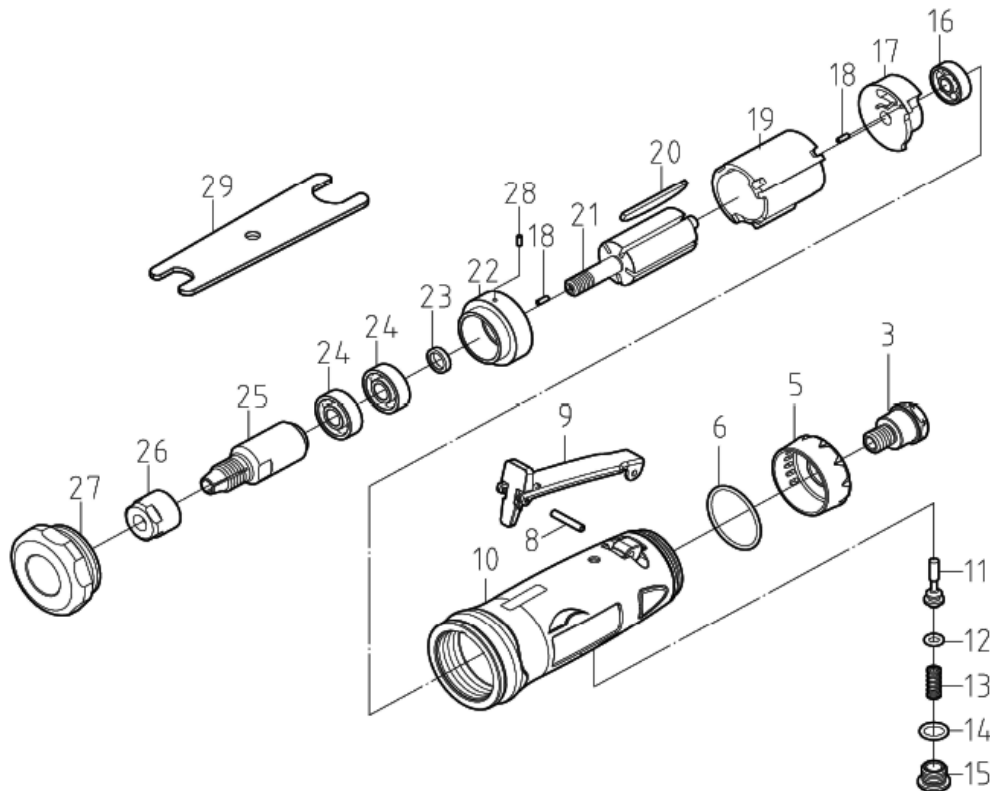

OILING INSTRUCTIONS:
OIL AFTER EACH USE
WITH A FEW DROPS OF
AIRTOOL OIL THROUGH
THE AIR INLET. RUN FOR
1 SECOND TO COAT ALL
INTERNAL PARTS.



USE 90 PSI MAXIMUM

REF #	PART #	DESCRIPTION	QTY	REF #	PART #	DESCRIPTION	QTY
3	9947R03	AIR INLET	1	18	9947R18	SPRING PIN	2
5	9947R05	EXHAUST DEFLECTOR	1	19	9947R19	CYLINDER	1
6	9947R06	O-RING	1	20	9947R20	BLADE (5)	1set
8	9947R08	SPRING PIN	1	21	9947R21	ROTOR	1
9	9947R09	LEVER	1	22	9947R22	FRONT PLATE	1
10	9947R10	HOUSING	1	23	9947R23	SPACER	1
11	9947R11	PIN VALVE ROD	1	24	9947R24	BALL BEARING	2
12	9947R12	O-RING	1	25	9947R25	COLLET FOUNDATION	1
13	9947R13	SPRING	1	26	9947R26	COLLET NUT	1
14	9947R14	O-RING	1	27	9947R27	LOCK NUT	1
15	9947R15	SCREW	1	28	9947R28	PIN	1
16	9947R16	BALL BEARING	1	29	9947R29	WRENCH	2
17	9947R17	REAR PLATE	1				

505 N. Railroad Ave. 33435
P.O. Box 1117 33425
Boynton Beach, FL

SEE MORE OF OUR CATALOG AT
www.taylorpneumatic.com

JUNE 2020 / ALL RIGHTS RESERVED / COPYRIGHT 2020

Ph. (561)732-1111
Fax. (561)731-4412
Toll Free (800) 805-8665