


T-9958

1/4" INDUSTRIAL DIE GRINDER



OILING INSTRUCTIONS:
OIL AFTER EACH USE
WITH A FEW DROPS OF
AIRTOOL OIL THROUGH
THE AIR INLET. RUN FOR
1 SECOND TO COAT ALL
INTERNAL PARTS.

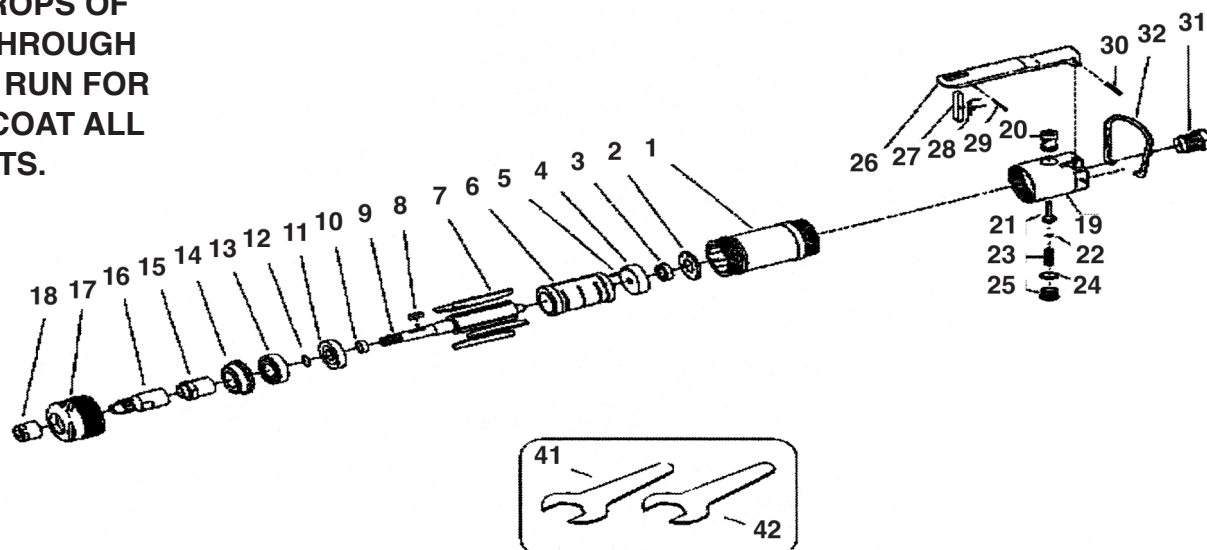

USE 90 PSI MAXIMUM

REF #	PART #	DESCRIPTION	QTY	REF #	PART #	DESCRIPTION	QTY
1	995801	HOUSING	1	19	995819	THROTTLE VALVE BODY	1
2	995802	BEARING COVER	1	20	995820	VALVE BUSHING	1
3	995803	BEARING	1	21	995821	THROTTLE VALVE ROD	1
4	995804	BACK END PLATE	1	22	995822	O-RING	1
5	995805	ROLL PIN	1	23	995823	THROTTLE VALVE SPRING	1
6	995806	CYLINDER	1	24	995824	PACKING	1
7	995807	ROTOR BLADE (4 PER SET)	1set	25	995825	CAP	1
8	995808	KEY	1	26	995826	LEVER	1
9	995809	ROTOR	1	27	995827	SAFETY LOCK-OFF	1
10	995810	SPACER	1	28	995828	LOCK SPRING	1
11	995811	FRONT END PLATE	1	29	995829	PIN	1
12	995812	WASHER	1	30	995830	PIN	1
13	995813	BEARING	1	31	995831	INLET BUSHING	1
14	995814	MUFFLER	1	32	995832	HANGER	1
15	995815	CHUCK COLLAR	1	33	995833	HOUSING COVER	1
16	995816	COLLET BODY 1/4"	1	41	995841	WRENCH	1
17	995817	EXHAUST COVER	1	42	995842	WRENCH	1
18	995818	COLLET NUT	1				