

Fig.3

Replacing LED module (Fig. 3)

The LED module can be replaced by a qualified electrician without cutting of wire and without damage to any decorative element to which the fixture is attached. See installation steps for more details (Fig.3.)

- a. Shut off power. Remove the three mounting screws (DD) from the side of the canopy (A).
- b. Disconnect the wire by removing wire nuts. Take the whole fixture down to the working table.
- c. Disconnect the wire of the driver by removing wire nuts. Remove the set screws (HH) from the barrel (GG).
- d. Press the wire restraints (B) onto the canopy (A) to release the cables (C) out from the canopy (A).
- e. Remove the screws (II), and remove the acrylic diffuser (D) from the heat sink and LED module (E).
- f. Reverse steps a-e for installing the new LED module.
Note: The LED module should be provided by a specified supplier.

