


ASSEMBLY & INSTALLATION INSTRUCTIONS

A688

Henry Outdoor Dining Pendant 364210

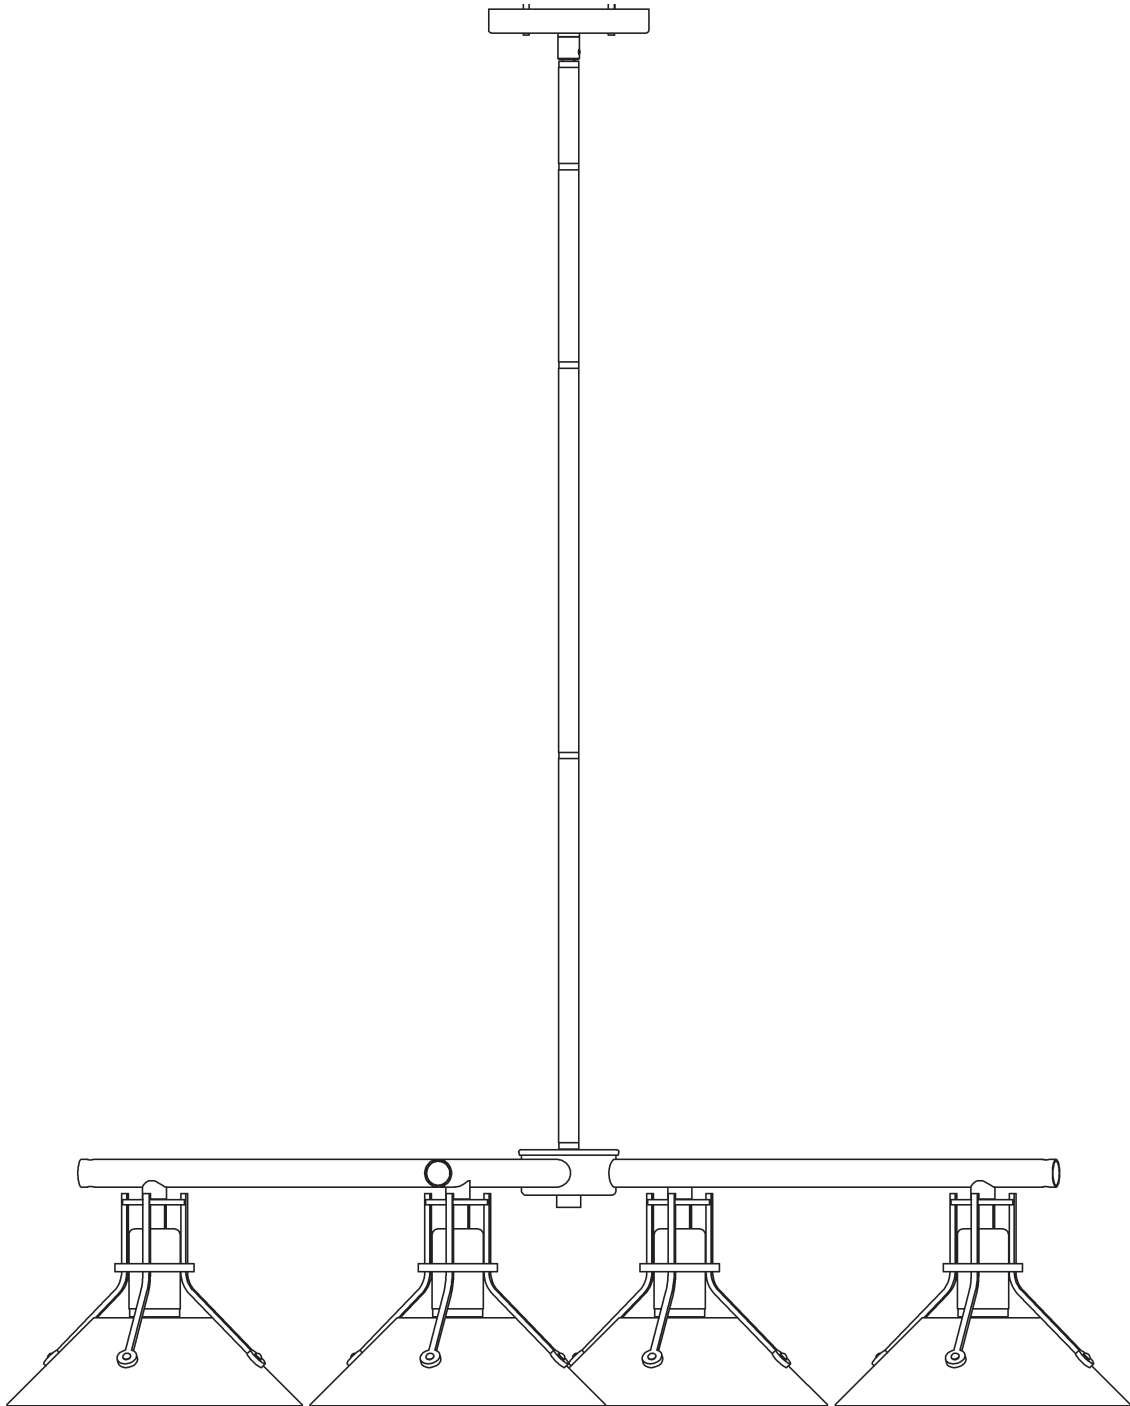

Component Parts

- A** **Fixture Body**
- B** **Fixture Coupling**
- C** **Canopy**
- D** **Crossbar**
- E** **Ground Screw**
- F** **Threaded Stud (2)**
- G** **Knurled Ball (2)**
- H** **3" Fixture Pipe (1)**
- I** **6" Fixture Pipe (1)**
- J** **12" Fixture Pipe (2)**
- K** **Single Pipe Coupling (1)**
- L** **Double Pipe Coupling (3)**
- M** **Gasket**



ASSEMBLY & INSTALLATION INSTRUCTIONS

A688

Henry Outdoor Dining Pendant 364210

CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*

Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

Please Note: After installation extra hardware and accessories are possible due to our kits are used on multiple products and options.

To Install Fixture (Figure 1)

CAUTION: BE SURE POWER IS OFF AT THE MAIN BREAKER BOX PRIOR TO INSTALLATION.

1. Carefully unpack the fixture from the carton.
2. Feed supply wires through the center of the crossbar. Using two machine screws (not provided), fasten the crossbar (C) to the electric box.

Note: A new electric box comes with screws. When replacing a fixture, retain the existing screws for use with the new fixture.

3. Thread studs (F) through appropriate holes in crossbar (D) to match holes in canopy (C).
4. Locate fixture pipes (H, I, J), fixture (A) and couplings (K & L). Couplings are shipped threaded into the pipes (H, I, J). Unthread couplings from the pipes.
5. Provided are multiple fixture pipes in three different lengths. Choose the combination that will achieve the overall height desired. Refer to the table below to determine the pipes required to reach the desired overall height. Once you have determined the components necessary, feed the wires that exit the fixture coupling (B) through the individual components. Wires will slip easier through loose components than through pipes and couplings that are pre-assembled.

		Overall Height of Fixture										
		13.0"	16.0"	19.2"	22.0"	25.2"	28.2"	31.4"	34.2"	37.4"	40.4"	43.6"
# of Pipes Required	3" Pipe (H)	1		1		1		1		1		1
	6" Pipe (I)		1	1			1	1			1	1
	12" Pipe (J)				1	1	1	1	2	2	2	2

6. Apply a drop of the supplied thread locking compound to the internal threads of fixture coupling (B) and pipe couplings (K, L). Thread pipes (H, I & J) and pipe couplings (K, L) together. The single pipe coupling (K) will thread on the end of the pipe that will be attached to the canopy (C).

Note: Application of the thread locking compound is necessary to prevent the stem from loosening during regular maintenance and cleaning of the fixture. Be certain to apply the compound.

7. Feed wires that exit the fixture coupling (B) through the fixture pipe assembly. Thread fixture pipe assembly on to the fixture coupling (B).
8. Feed wires through the canopy (C).

ASSEMBLY & INSTALLATION INSTRUCTIONS

A688

Henry Outdoor Dining Pendant 364210

9. Thread canopy (C) onto fixture pipe assembly.
10. Raise fixture (A) close to ceiling.
11. Using suitable wire connectors (not provided) connect fixture wires to supply (white to white and black to black). Attach a pigtail lead to the crossbar ground screw (E). Connect all ground wires (bare copper or green to bare copper or green).


CAUTION: MAKE SURE WIRE CONNECTORS ARE TWISTED ON SECURELY, AND NO BARE WIRE IS EXPOSED.

12. Slide canopy (C) over threaded studs (F) and push firmly to ceiling, making sure that no wires are pinched between canopy (C) and ceiling. Fasten with knurled balls (G). Be sure studs (F) are fully seated in the knurled balls (G).
13. Install gasket (M) around top of bulb (not included).
14. Screw bulb into socket and press gasket (M) up to touch fixture. Repeat for remaining bulbs/sockets
15. Restore electricity at main breaker.

ASSEMBLY & INSTALLATION INSTRUCTIONS

A688

Henry Outdoor Dining Pendant 364210

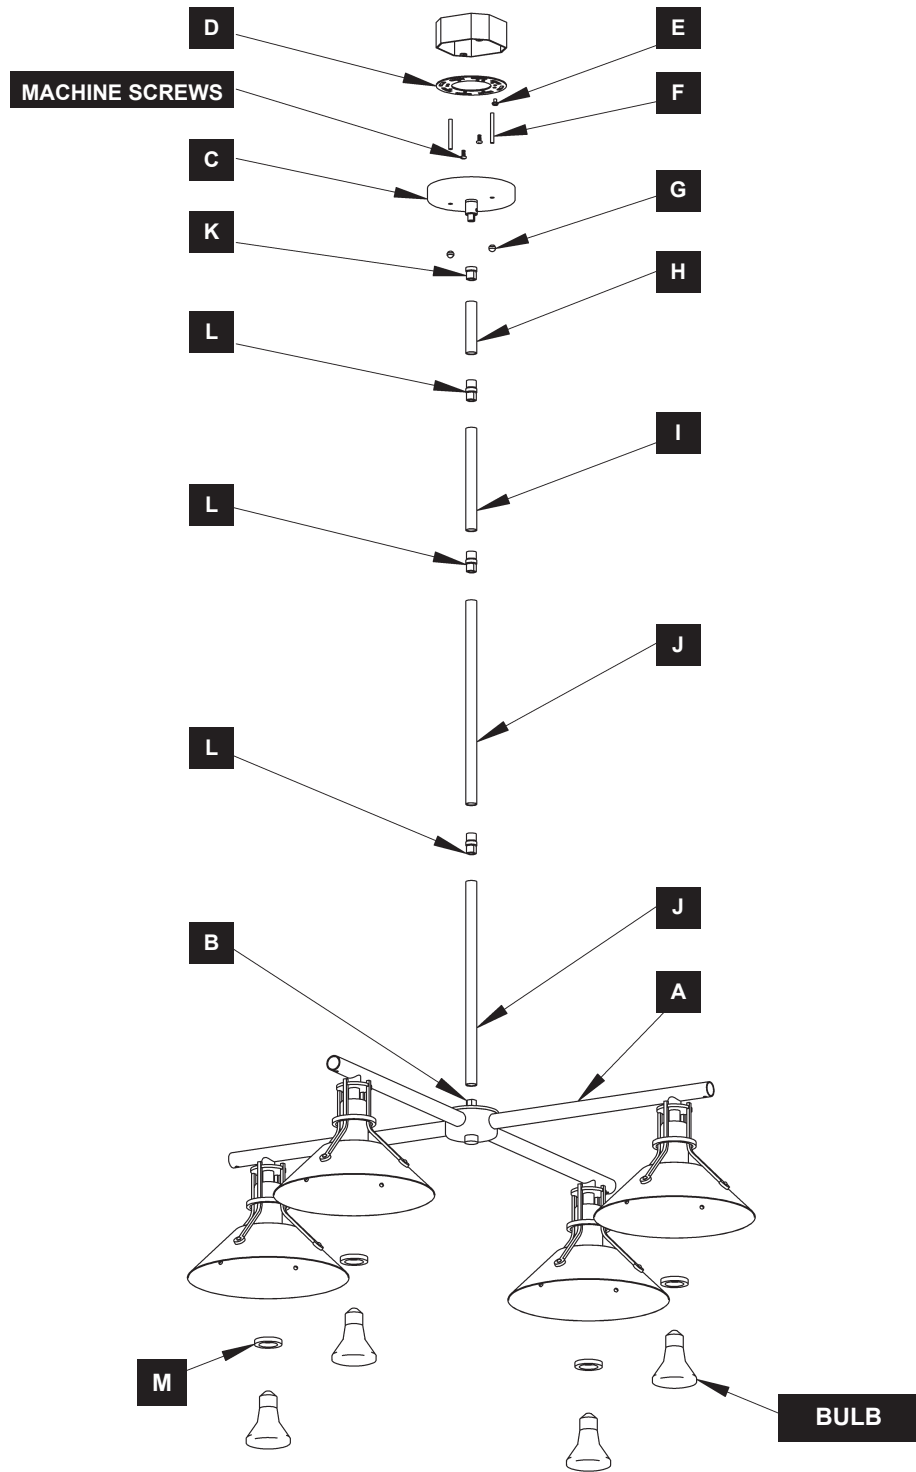

(Figure 1)

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!

* *Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.*