

INSTALLATION INSTRUCTION
InvisiLED® Wireless Remote Controller
LED-TO24-WS

WAC LIGHTING
Responsible Lighting®

KEY SPECIFICATIONS:

 
Overall dimensions: 4 1/8" x 2 3/8" x 5/8" (105mm x 61mm x 17mm)

Power Supply: Requires Two AAA batteries

Operating Range: 75ft Max (if there are no obstructions between the Wireless controller and master controller)


This remote control is designed for indoor and outdoor INVISILED® Palette tape light series, and is compatible with WAC LED-TC-CTR-MSD and LED-TO24-CM.

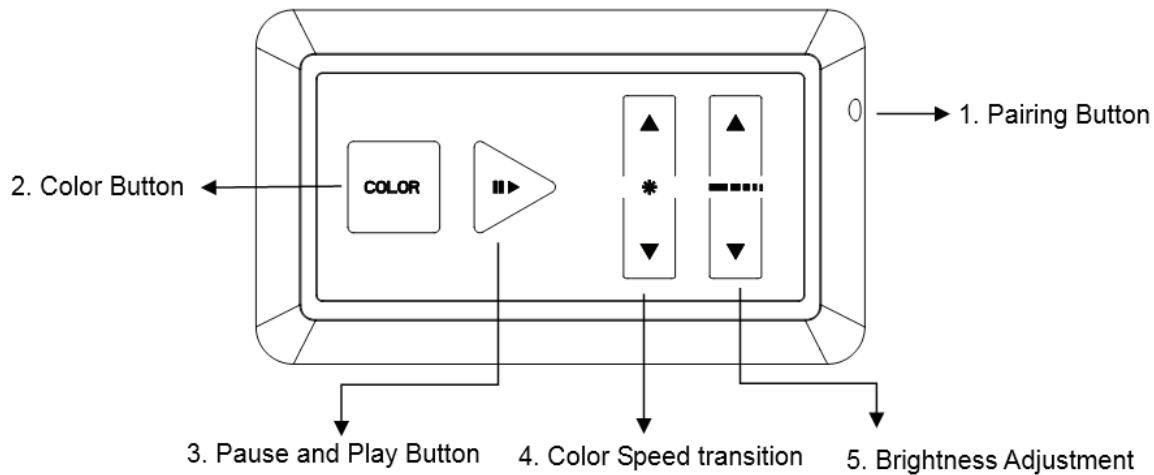

Remote Control Push Buttons


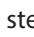


1. Pairing Button: To sync the wireless controller to the master controller; unplug the power to the master controller unit. Use a push pin or small screwdriver to press the pairing button on the side of the remote. A red indicator light inside the pairing button hole will start blinking. There is a 15 second interval in which the master controller unit power shall be plugged in. After which the light stops blinking and the sync is successful. If the light doesn't blink and remains continuously lit, repeat the above steps. If the sync is successful, there will be no need to sync again. Once the controller is powered on, allow a few seconds for the network to initialize before operating the remote.

2. Color Button: Push the "COLOR" button to switch between RGB light and white light.

3. Pause and Play Button: Pushing the  button fixes the color of the INVISILED® Palette at any point during the color transition. Pressing again resumes the cycle.

4. Color Speed transition: Push the  (faster) and  (slower) buttons in the * column to adjust the color transition speed of the INVISILED® tape light. There are 10 steps for the transition speed. When the speed reaches its maximum or minimum level, these buttons are invalid.


5. Brightness Adjustment Button: Push the  (up) and  (down) buttons in the ----- column to adjust the total brightness of the INVISILED® tape light. There are 10 steps for the brightness level; the dimming range is from 100% to 0. Dim to 0 to turn power off.

WAC Lighting
www.waclighting.com
Phone (800) 526.2588 • Fax (800) 526.2585


Headquarters/Eastern Distribution Center
44 Harbor Park Drive • Port Washington, NY 11050
Phone (516) 515.5000 • Fax (516) 515.5050

Western Distribution Center
1750 Archibald Ave • Ontario, CA 91761
Phone (800) 526.2588 • Fax (800) 526.2585


1. BATTERY INSTALLATION

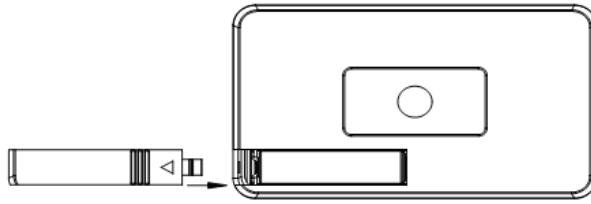

 2. Remote control should be operated close to master controller (within 75ft).

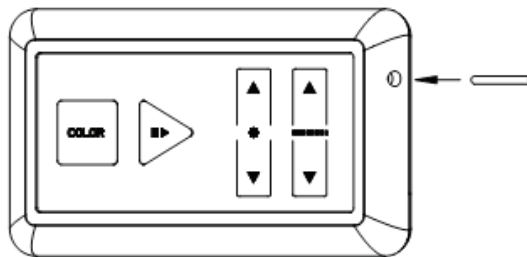

 3. Wall bracket mounting:

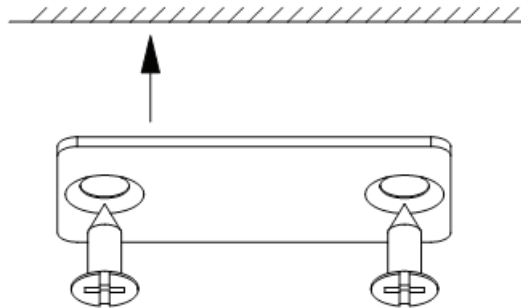

4. The back of the remote control magnetically mounts to the wall bracket.

