


This product supports dimming

**Caution- The max wattage for this fan is 300w. Lamps exceeding this wattage could damage the control and receiver.**

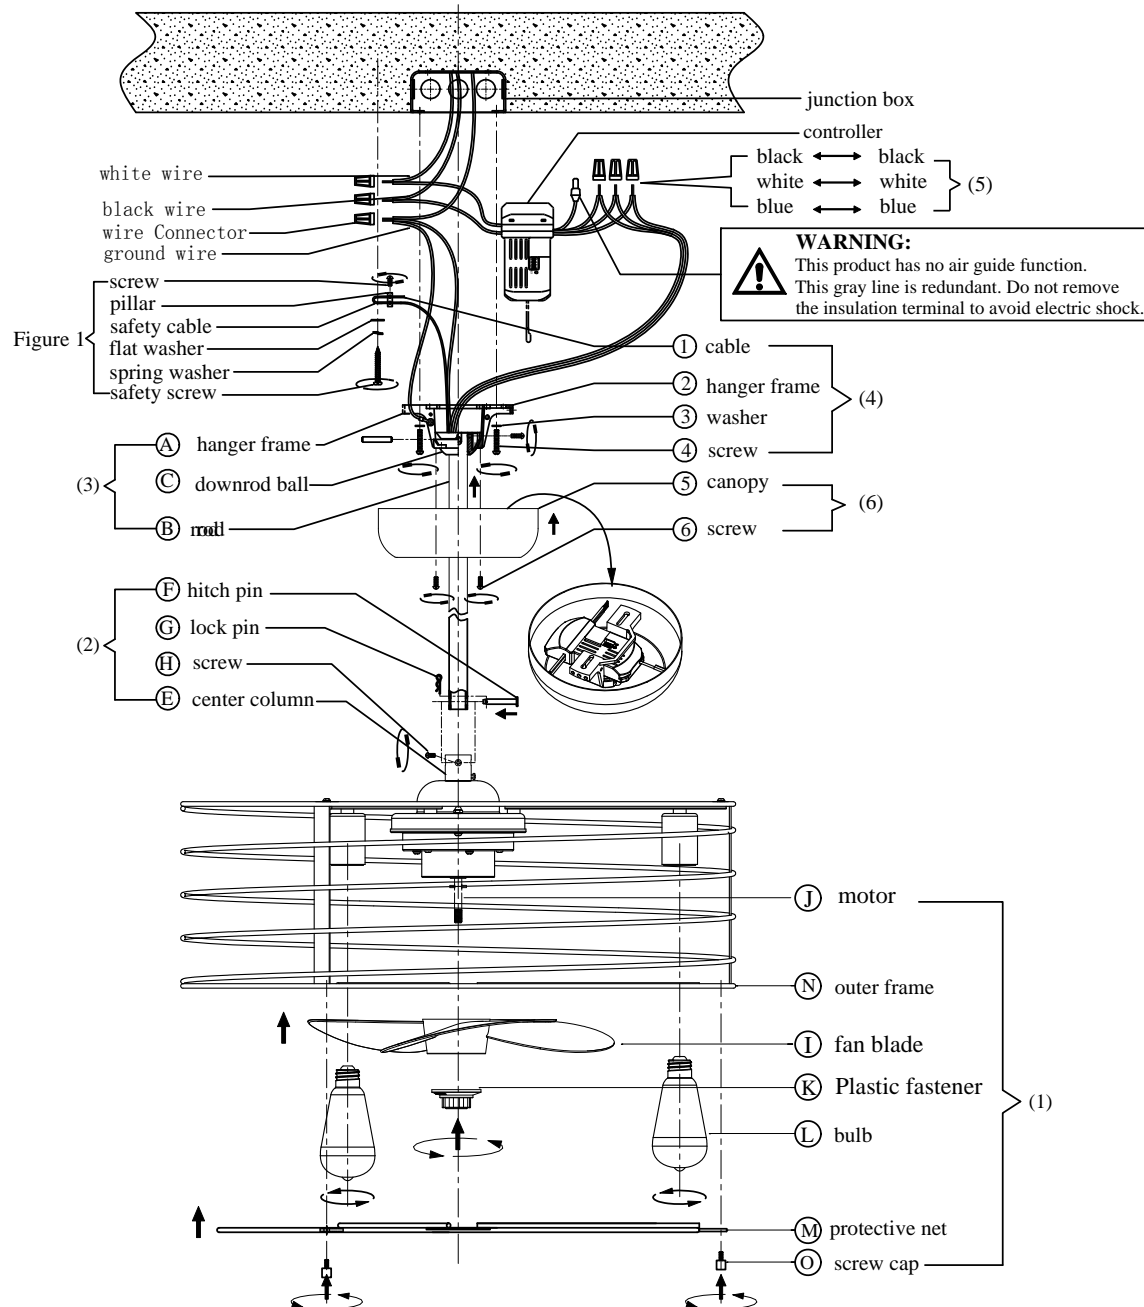

**CEILING FAN LIGHT**  
**READ AND SAVE THESE INSTRUCTIONS**

**CAUTION:**

1. Be certain that no bare wire strands are exposed outside of the wire connectors
2. Disconnect power at main circuit breaker to prevent possible injury from electrical shock.
3. To reduce the risk of fire, electric shock, or personal injury, mount to outlet box marked and use mounting screws provided with the outlet box.
4. Warning - to reduce the risk of electric shock, this fan must be installed with an isolating wall control/switch
5. Warning - to reduce the risk of fire, electric shock, or personal injury, mount to outlet box marked acceptable for fan support of 22.7 kg or less, and use mounting screws provided with the outlet box

**ASSEMBLY & INSTALLATION INSTRUCTIONS**

**Notice:**

1. This product contains chemicals known to the state of California to cause cancer, birth defects and / or other reproductive harm. Thoroughly wash hands after installing, handling, cleaning, or otherwise touching this product.
2. Before using this product and doing maintenance, please read these instructions carefully and save them for future use.
3. This product is suitable for use with solid-state speed controls
4. The installation is to be in accordance with the national electrical code, ANSI/NFPA 70 and local codes.
5. After being wired, the ungrounded wire and grounded/grounding wire must be separated in two side of the outlet box
6. The splices, after being made, should be turned upward and pushed carefully up into the outlet box.
7. The remote controller is suitable for ceiling fan use.
8. This unit is packed completely for ceiling fan use.

Disconnect the power before installation.

Use and Installation:

Remove all fixture components and the parts bag from the carton.

- 1: (I) The groove of the fan blade is aligned with the bolt on the (J) motor shaft, and then (K) Plastic fastener is used to screw into the middle axis of the motor to tighten and fix the fan blade.  
Turn the light bulb (L) into the lamp holder, (M) align the installation hole of the bottom protective net to (N) the outer frame tooth hole and tighten it with (O) screw cap.
- 2: Pass fixture, safety cable (1) and canopy (5) through the rod (B), place the rod into the center column (E), align the holes at the bottom of the rod with the center column and carefully insert hitch pin (F) through, then insert the lock pin (G) through the holes near the end of the hitch pin. Tighten the screws (H) with provided tool.
- 3: Secure the hanger bracket (A) to the junction box with the screws (4) and washers (3), then place the downrod ball (C) into the hanger bracket.
- 4: An additional safety support is provided to prevent the fan from falling. Secure the safety cable to the ceiling joist with screw and washer, as illustrated in Figure 1.
- 5: Connect main power wire from junction box with the wires of the controller, black with black, white with white and attach fixture ground wire and ground wire from outlet box with wire nut. Connect the output wires from controller and fixture wires with wire connector, colors: black with black, white with white, blue with blue.
- 6: Secure the canopy to hanger bracket with screws (6).

# Manual of Fan Remote Controller


This unit is mainly for fan and its lighting function. function. This product has an FCC ID certificate. Adopted frequency: 304MHz. Please turn off the power first, then refer to the manual for installation instruction.

## 1. Setting up the remote

The wireless control is designed to operate both the light and speed of the fan. The remote uses a 3V battery. Remove the remote's back cover and insert the battery. Please make sure the battery is inserted in the right direction or the remote may not function. The battery's smooth surface is printed with "+" on the positive electrode and installed in the clip slot of the shrapnel upwards. If the keystroke indicator does not light, it means that the battery direction is wrong or the battery has no power.

Remove the battery from the remote if you do not plan to use the remote for a long time.

The code for the controller and remote must be the same. You can manually adjust the code as seen below.

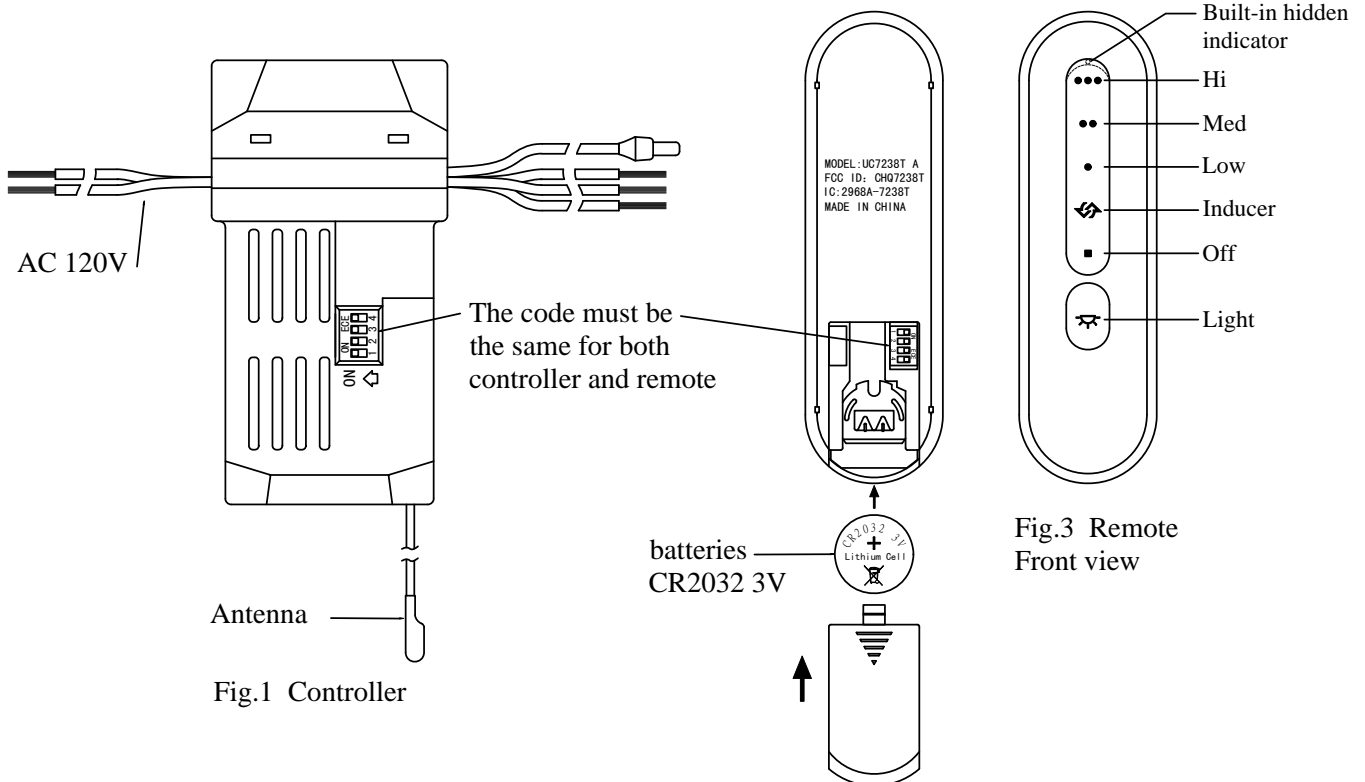

## 2. Operating instructions



- A. Turn on power and press (light) key on the remote to turn on the lights. Press the key again to turn off.. Press this key for a long time to turn the light to the brightest or darkest.



- B. (Four speed buttons) These are the four keys for adjusting fan speed.



- C. Press (Inducer) to turn on the inducer . Press it again to turn off this function.(This product does not support this feature)