


## ASSEMBLY INSTRUCTIONS

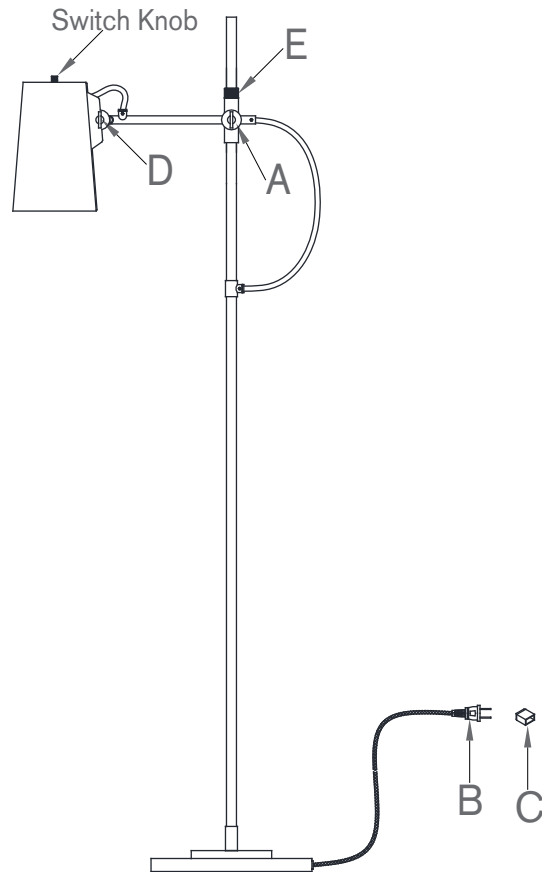

## Benton Adjustable Floor Lamp

Item # RL1450

### NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

1. Carefully remove all parts from the carton.
2. Insert the specified light bulb (not included) into socket.
3. Remove plastic cover (C) from electrical plug (B).
4. Plug lamp into wall outlet.

### ADJUSTMENT INSTRUCTIONS

1. Loosen adjustment key (A)
2. Adjust the lamp arm to desired angle.
3. Tighten adjustment key (A).
4. Loosening (D) to adjust shade to desired angle.
5. Loosen ring (E) to adjust the arm to desired height.
6. Tighten ring (E).

# RALPH LAUREN

