 


Assembly Manual v1.1

Z-AXIS LIFTING DEVICE

 




CONTENTS

Main Body






Sliding Plate

X1 Fixing Plate X1

 Ortur Laser Master 2





 


 












Ortur Laser Master 2 S2











M3x20mm

Screws

5mm

M3x10mm Screws

Self-tapping Screws

Not all parts will be used, there are parts that are not needed for different models of machines.

 


X2

M3 T Nuts

Aufero Laser 2

M3x10mm Screws



M3x16mm

Screws

X2


Limit Plate

X2

Aufero Laser 2


Assembly Steps

1

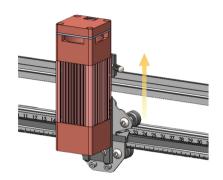


Remove the laser module



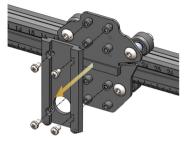

Remove the slide rail

 

3

Remove the slider

