


Assembly Manual v1.1

Z-AXIS LIFTING DEVICE

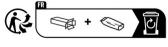




CONTENTS

Main Body




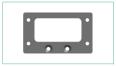

Sliding Plate

X1 Fixing Plate X1

Ortur Laser Master 2

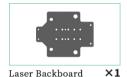















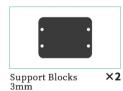

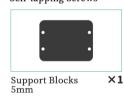

Ortur Laser Master 2 S2











M3x20mm

Screws

5mm

M3x10mm Screws

Self-tapping Screws

Not all parts will be used, there are parts that are not needed for different models of machines.




X2

M3 T Nuts

Aufero Laser 2

M3x10mm Screws

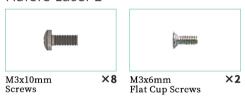

M3x16mm

Screws


X2


Limit Plate

X2


Ortur Laser Master 2 S2

Assembly Steps (NOTE: The working area of the machine will be shortened to X390 x Y380 due to the addition of the Z-axis Lifting Device.)

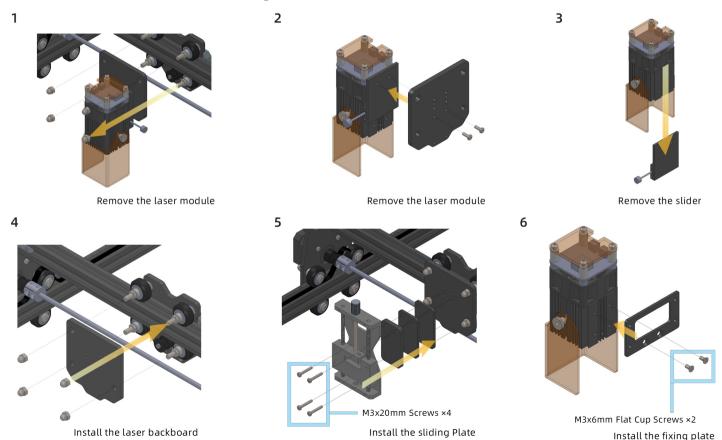

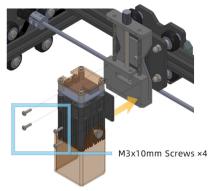


Install the laser module with the fixing plate to the sliding plate

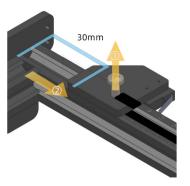

9

8

Loosen the screw, move the Y limit switch back 30 mm, and then tighten the screw to fix it

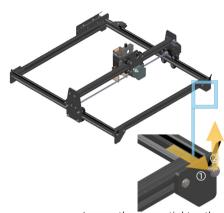

Loosen the screw, tighten the timing belt, and then tighten the screw to fix it