 


ACEKOOL

Blender BC7

—
INSTRUCTION MANUAL

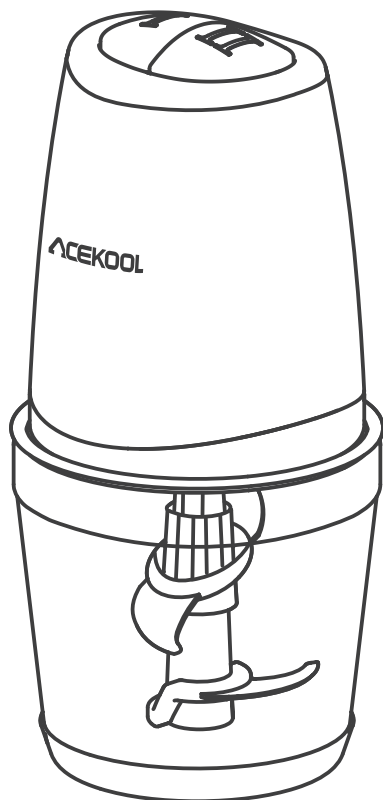

Thanks for your order. Please read the user manual thoroughly before using the product and keep this user manual for your future reference.

CONTENTS

■ Specifications	01
■ Important Safety Information	01
■ Product Description	02
■ Installation	03
■ Operating Instructions	04
■ Approximate Running Times	04
■ Attentions	05
■ Troubleshooting Guide	06

Specifications

Voltage: 120V~
Frequency: 60Hz

 
Power: 300W
Capacity: 0.6L

Important Safety Information

When using this electrical appliance please follow these basic safety precautions:


- Read all instructions before operating.
- Ensure that the voltage set on the machine corresponds to the supply of electricity in your country.
- If there is a problem, remove the main plug from the wall outlet.
- Do not operate the appliance with a damaged cord or plug if the appliance malfunctions or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
- Do not connect this product to a timer to avoid dangerous situations.
- To protect against electrical shock, do not immerse cord, plug, or appliance itself in water or other liquids.
- Do not put your fingers or any sharp object when the device is running, causing damage to the product and/or injury.
- When using the product, please use the original accessories provided by the manufacturer.
- If the power supply cord is damaged, it must be replaced by the manufacturer, a service agent, or similarly qualified persons in order to avoid fire hazard.
- After the device is finished using, please remove the motor unit once it stops completely all blades do not operate any more.
- Do not let children play with the appliance. This appliance is not intended for use by persons with reduced physical sensory or mental capabilities or lack of experience and knowledge, unless they use the appliance under the supervision of a person responsible for their safety.
- For home use only. Not for commercial use.
- Store appliance in a dry place away from sunlight.
- After removing the sleeve of blade, please remove the motor unit directly to avoid cutting the consumer when using it again.

Product Description

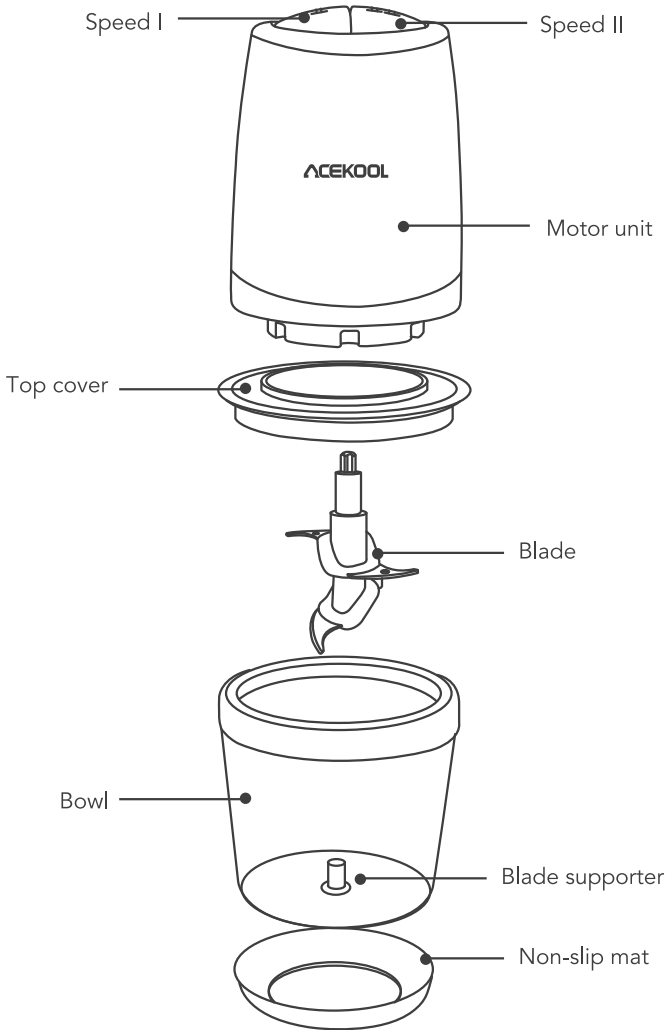


Installation

 
- 1 Take the machine out of the box.

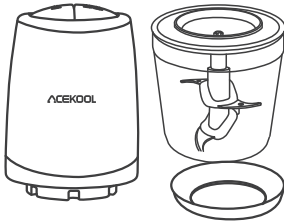

 
- 2 Take the lid off. Take out the knife.

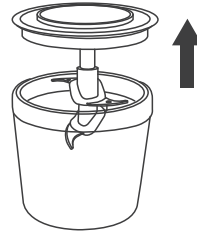

 - 3 Remove the Knife sleeve with care, and then throw it into the trash.

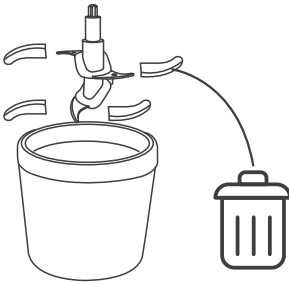


- 4 Put the ingredients into the bowl.

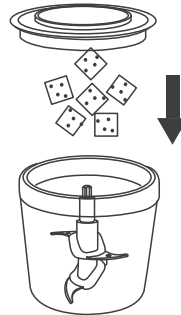 

- 5 Cover the top cover and attach the non-slip mat to the bottom of the glass bowl.



 - 6 Cover the motor unit, plug in the power and start beating.

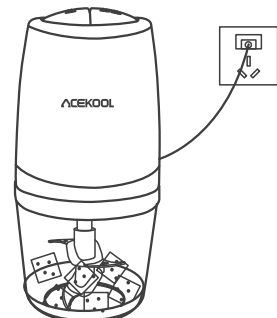

Operating Instructions

- Before use, clean the bowl, blade and top cover.
- Take off the bowl and top cover from the motor unit.
- Place the blade on the blade supporter.
- Please make sure that the blade is on the blade supporter before you put food into the glass jar.
- Place the glass jar on the motor unit and make sure they are in correct position.
- Insert plug into wall outlet and switch on the power.
- Hold the motor unit with your hand and press the button to start the machine running. Release the button to stop the machine running.

CAUTION: In order to prolong useful life of the machine, never run it more than 30 seconds per time. Stop the device for 120 seconds before using it again.

- After you let go of the button to run the machine and wait until the blade stops rotating before removing the bowl from the motor unit.
- The Blades are very sharp. In order to avoid injury, please take out the blades first and then take out the food.

CAUTION: To protect bowl against heat deformation and leak, do not put hot water or food which the temperature is higher than 70°C.

Approximate Running Times

Ingredients	Qty. Max.	Processing Time Approx.
Beef	200 Grams. (Cut to 20 x 20 x 50mm)	20-30 Seconds
Garlic	150 Grams.	10-20 Seconds
Hot peppers	150 Grams.	10-20 Seconds
Carrots	150 Grams.	10-20 Seconds
Parsley	300 Grams.	10-20 Seconds
Liquids	150 Grams.	20-30 Seconds

Attentions

- Do not use AC power over than 120V, otherwise there is a risk of electric shock or fire.
- Use a single socket with standard 6A or more. If the socket is shared with other appliances, it may cause abnormal heat or fire.
- Unplug device when it is not in use.
- Do not use iron objects to scratch the machine.
- The product cannot be used to process hard foods such as: meat with bones, coffee beans, black pepper, or ice.
- The blades are very sharp. Please hold the top part of the blade supporter directly rather than the blades when you remove it. For safety, please wear gloves to disassemble the blades from the blade supporter.
- The bowl can only withstand temperatures of 0°C-50°C. Do not put the bowl into the microwave or put the food beyond the temperature range into the bowl.
- Before you put food into the bowl, confirm that the blade is in position. If the blade is not running or running slowly, pull out the plug and check whether there is any obstruction. Take out the obstruction before plugging the device back in.
- Never run the appliance for more than 30 seconds continuously. After running for 30 seconds, stop for 2 minutes. The machine should be stopped for 15 minutes after using it for 3 time continuously. Wait for the motor to cool down before running again.
- The glass is easy to clean and the blade can be cleaned with the brush. If the glass bowl needs to be washed in the dishwasher, please note that the temperature difference that the glass bowl bears is 50°C and its highest temperature does not exceed 70°C.
- Never immerse the motor unit or put it into water. Simply wipe it with a damp sponge.
- If the machine has not been used for a long time, please store this machine at a dry and well-ventilated place.

Troubleshooting Guide

If you find that the machine is not operating normally, please check the following items before sending it for repair:

Potential Problem	Probable Cause	Solution
The machine does not operate after power is on.	The top cover is not locked into place.	Adjust the top cover to make sure it's attached correctly.
The machine stops during use.	<ol style="list-style-type: none"> 1. The voltage is too low. 2. If the motor is overloaded, the power will cut off automatically. 	<ol style="list-style-type: none"> 1. Check power supply for compliance with rated voltage. 2. Pull plug of power supply out of outlet, wait for the motor to cool down (about 30 min), then use it again.
There is smell at the first use.	Normal situation for new machine.	If the device has been running for a long time and it still has smell, please send it back to us.
The machine is unusually vibrating or noisy.	<ol style="list-style-type: none"> 1. The blade is not in the correct place. 2. The machine do not put on stable surface. 3. The voltage is too high. 4. The ingredients exceed over the max filling level. 	<ol style="list-style-type: none"> 1. Take out all the ingredients and put blade in place. 2. Put the machine on stable surface. 3. Check power supply for compliance with rated voltage. 4. Remove the plug from the outlet then take out the extra ingredients.

ACEKOOL

— Make Life Easier —

Model: BM-205

Email: support@acekool.vip

Website: <https://www.acekool.vip>

Made in China

