


**ACEKOOL**

# Hair Dryer HB1

INSTRUCTION MANUAL

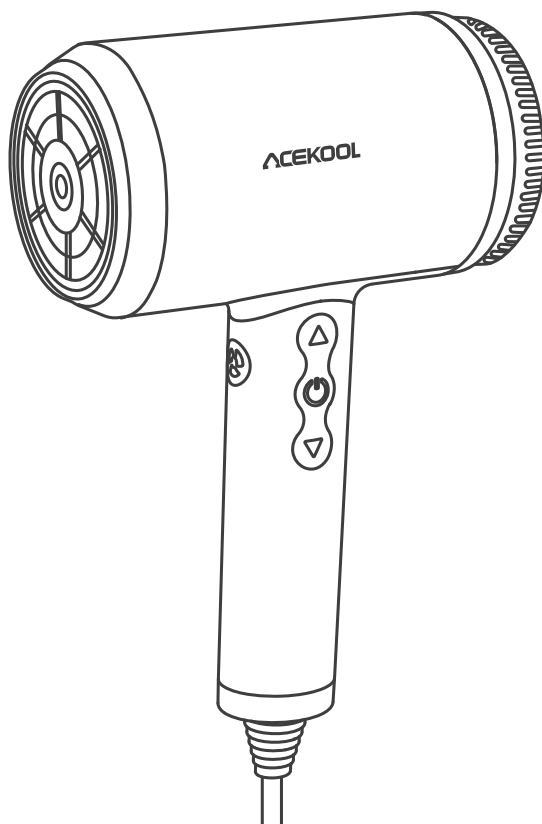

Thanks for your order. Please read the user manual thoroughly before using the product and keep this user manual for your future reference.

# CONTENTS

■ Technical Specifications.....	01
■ Product Description .....	01
■ Instructions for use .....	02
■ Maintenance .....	03
■ Troubleshooting .....	03
■ Important safety instructions .....	04


## Technical Specifications

Rated voltage: AC 100-127V, 50/60Hz  
Size: 218\*76\*123mm

Rated power: 1200-1600W  
Product Category: Type II

Temperature: 50°C~99°C Stepless Thermostat Temperature Controller  
Wind speed: 50% ~ 99% Stepless Speed Regulator

## Product Description

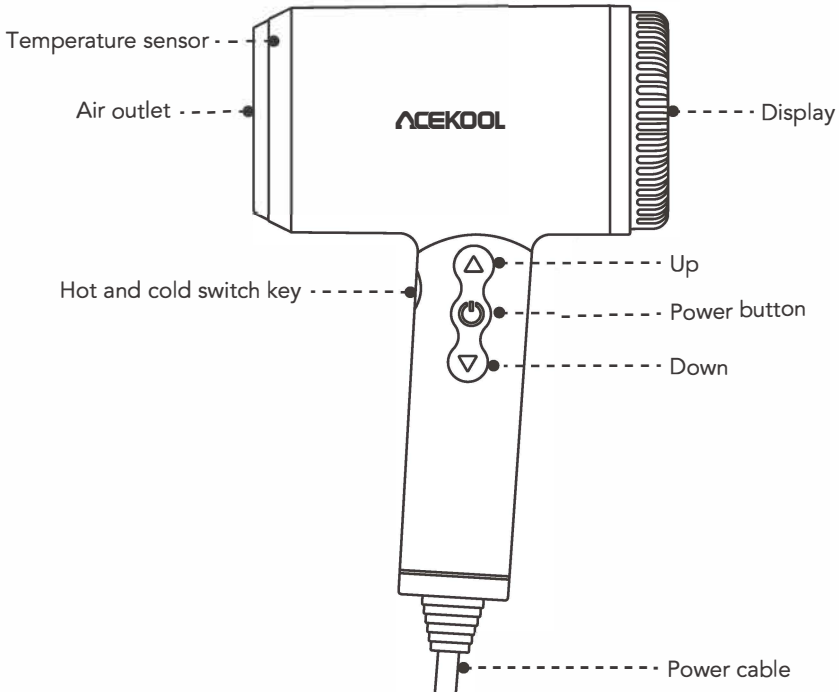

### Attention:

- Do not allow your hair to be with in 10cm of the inlet so as to avoid it getting caught or causing an accident.
- For safety purposes, when finished using hairdryer, immediately unplug from the power source.

## Instructions for use

### 1 Power On

To turn on the appliance, simply hold down power button for about 1.5 seconds. Once on, it will return to last-used settings.

### 2 Temperature Adjustment

After booting, if it is not already in temperature mode, press the power button until you see temperature mode displayed. Use the "up / down" keys to adjust temperature (50°C~99°C). There is a temperature light that will start flashing once the appliance has reached the desired temperature. Once the temperature has been set, it will return to the temperature mode.

### 3 Wind Speed Adjustment

After booting, press down the power button once to move between a mode, keep going until you reach wind speed mode. Depending on last used settings, it may already be in wind mode. The wind indicator light will flash whilst adjusting, once adjustment is complete it will return to the temperature display state. When in wind mode, use the "up / down" keys to adjust to the desired wind speed (50% to 99%).

### 4 Status Display

**Cold wind:** The weather indicator remains on, the halo color changes according to temperature (blue for cold wind), the number indicates speed.

**Hot air:** The weather indicator remains on, the halo color changes according to temperature (50-70 is yellow, 71-99 is red), the number indicates speed.

### 5 Hot and cold switch key

Once the appliance has been switched on, press the cold/hot briefly to switch between temperatures.

### 6 After Use

After use, turn off and unplug from power source. Place the appliance on an insulated surface until it cools. Store the appliance in a safe, dry, and clean place.

## Maintenance

- Do not attempt to repair, disassemble, or modify the hair dryer yourself.
- Do not use cleaning products such as paint thinner, benzene, alcohol, etc. Doing so may cause the main unit to malfunction, crack, and discolor. Instead, use a wrung-out cloth to clean.
- In case of damage to cord or plug, remove immediately and get in contact with appliance service center.
- Immediately remove from power supply should you smell a burning odor, or see sparks. Get in contact with service center for appliance.

## Troubleshooting

Types of malfunctions that may occur and how to deal with them:

Malfunction	Possible Causes	Solution
The appliance does not switch on when you press the power button.	The power plug is loose or not connected properly	Check that the plug is securely plugged in.
The display window flashes E0 error.	The appliance is overheating due to something blocking the air inlet or outlet vents.	Remove any obstructions around the air vents.
The display window flashes UL error.	Power supply voltage is lower than 180V.	Make sure that you are in a place that receives the appropriate voltage.
The display window flashes UH error.	The power supply voltage is higher than 280V.	Make sure that you are in a place that receives the appropriate voltage.
Whilst using, the appliance heats up, you can see a glowing red, and there is an odor of burning.	Motor or control board failure.	Stop using it immediately and send it to a professional repair center for repair.

Malfunction	Possible Causes	Solution
When in use, abnormal vibration occurs.	Motor failure or damage to the fan blades.	Stop using it immediately and send it to a professional repair center for repair.
The power cord is overheating.	Motor or control board failure.	Stop using it immediately and send it to a professional repair center for repair.

## Important safety instructions



To avoid possible malfunction, electric shocks, injury, fire, death, or damage to equipment or property, please be sure to observe the following safety precautions. If the following instructions are not followed, it may cause fire, burns, short circuiting or electric shocks.

- **Warning:** Do not use this appliance near bathtubs, showers, sinks or other containers filled with water.
- Do not use the hair dryer when your hands are wet. Do not place or store the hair dryer near anywhere where it could get wet including, near sinks, or other places filled with liquids, or in a high humidity environment.
- Before connecting the to a power supply, please check whether the output voltage of the power supply is consistent with the rated voltage marked on the appliance.
- Please check the power cord regularly. If the power cord or plug is damaged or hot, stop using it immediately.
- Never leave the hairdryer unattended whilst activated. Always leave the hairdryer unplugged when not in use.
- Do not use the hair dryer near gas or other flammable products, such as, volatile agents, paint thinners, sprays, etc.
- Please do not use thinners, benzene and other solvents to clean the hair dryer.
- Avoid dropping the hair dryer or subjecting the hair dryer to strong impacts.
- Please properly dispose of the packaging bag of this product to avoid accidents such as suffocation of infants and young children. Please keep the hair dryer out of the reach of children. Children and any one with certain impairments should be supervised when using this product.

- Please don't let children play with this product.
- This hair dryer is for domestic use only.
- Do not pull or put heavy pressure on the power cord, keep it away from the surface of heated objects, and do not wrap the power cord around the hairdryer when storing.
- Do not disassemble the product. Improper dis-assembly may cause electric shock or fire.
- Please keep your hair more than 10 cm away from the air inlet when using it. Please pay attention to the directions for the hair dryer and do not bring the air outlet too close to your hair. Please keep a distance of more than 3 cm between the air outlet and your hair.

**Hazardous Substances in Product:**

Parts	Hazardous substances					
	Pb	Hg	Cd	Cr (VI)	PBB	PBDE
Product body	✗	○	○	○	○	○
Power cord	○	○	○	○	○	○
Accessories	○	○	○	○	○	○

Pb: Lead      Hg: Mercury      Cd: Cadmium      Cr (VI): Hexavalent chromium  
 PBB: Polybrominated biphenyls      PBDE: Polybrominated biphenyls

This manual is written in accordance with the provisions of SJ/T 11364.

- Indicates that the content of the hazardous substance in all homogeneous materials of the part is below the limit requirement specified in GB/T 26572.
- ✗ Indicates that the content of the hazardous substance in at least one of the homogeneous materials of the part exceeds the limit requirement of GB/T 26572.

# ACEKOOOL

— Make Life Easier —

Model: BL-H01D

Email: support@acekool.vip

Website: <https://www.acekool.vip>

Made in China

