 
QUICK & EASY

INSTALLATION







SEPARATE THE ROOF FRAME FROM THE UNIT. SINCE ALL OF THE MATERIALS ARE CONTAINED IN THE UNIT, REMOVE IT ALL PRIOR TO INSTALLATION.



BASED FROM THE WALL PANEL LAYOUT, INSTALL ALL THE EXTERNAL WALL PANELS INCLUDING THE WINDOW.



REMOVE ALL THE PACKAGING STEEL SHEETS FROM THE UNIT. INSTALL ALL THE CORNER COLUMNS TO BASE FRAME IN A LOOSE MANNER.



INSTALL THE DOOR FRAME AND TIGHTEN ALL THE BOLTS CONNECTING THE CORNER COLUMNS TO BASE FRAME AND ENSURE THE CLAMPING OF WALL PANELS TO EACH OTHER.



PLACE THE ROOF FRAME TO THE UNIT. MAKE SURE THAT THE PANELS ARE SEATED ON THE SLOT OF ROOF FRAME.



INSTALL THE DOOR LEAF AS WELL AS THE MEPS AND ALL OF THE FINISHINGS AS REQUIRED.



INSTALL ALL THE STUD COLUMNS AS SHOWN IN THE COLUMN LAYOUT INCLUDING THE LIFTING LUGS.