



Sports Camera Sunglasses User Manual



CAUTION: Denotes the risk of injury

Use occasion: Please strictly abide by relevant national laws and regulations, and do not use this product for any illegal purposes, otherwise you will be responsible for the consequences.

About the battery: As the use time increases, the battery working time will be shortened. If it has not been used for a long time, please fully charge it before use.

File security: This product is not a professional storage device, and does not guarantee the integrity and safety of the internal storage files. Please immediately back up your important files on a computer or other storage device.

Working temperature: -5°C—40°C.


Working humidity: 20%-80%, please do not put the product in a humid working environment, the product does not have the waterproof function.

Shooting illuminance: Please use it in an environment with sufficient light. Do not direct the camera to a strong light source such as the sun to avoid damage to the optics.

Cleaning requirements: Do not use it in an environment with excessive dust density to prevent the lens and other parts from being contaminated with dust and affecting the imaging effect. The lens can be wiped gently with lens cleaning paper or glasses cloth to keep it clean.

Other matters: This product is a precision electronic product, please do not subject it to strong impact or vibration; do not use it under a strong magnetic field or electric field.

1. Part Names

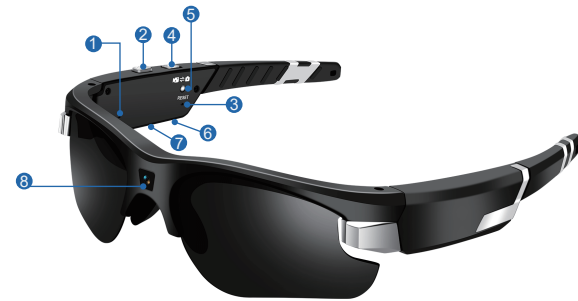

- ① Work indicator light
- ② ON/OFF Button/Start Recording button/Photography button
- ③ Charging indicator light
- ④ Video recording/Photography switch button
- ⑤ Reset button
- ⑥ USB interface
- ⑦ Micro SD
- ⑧ High-definition camera

2. Operating instructions



POWER ON:

Long press the "ON/OFF" button for about 3 seconds, the blue light will flashes once, then stays on, the device vibrates once at the same time. It means the glasses camera standby.



VIDEO MODE:

Toggle the switch to the video position, then short press the "ON/OFF" button once, the blue light flashes quickly 3 times and then flashes slowly, the device vibrates once at the same time. It means the glasses camera starts recording. Then short press the "ON/OFF" button once, the blue light flashes quickly 3 times and then stays on, and the device vibrates once. the device automatically saves the file and stops recording, and it is on standby.

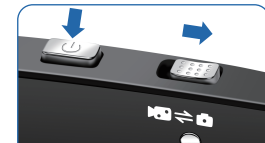


PHOTO MODE:

Toggle the switch to the photo position, then short press the "ON/OFF" button once, the blue light will flashes once and then stays on, the device vibrates once at the same time. The photo has been taken and saved on the Micro SD card.



WATCH VIDEO AND PHOTO:

Connect the glasses to your computer directly, no need to take out the Micro SD card. Open the "Sport DV" folder, your videos and photos will be there.



POWER OFF:

Long press the "ON/OFF" button for about 3 seconds. The blue light flashes once and then goes off.




RESET :

If the device does not work under normal conditions, crashes, or cannot record video, please press the reset button to reset.

SETTING THE DATE, TIME:

- (1) Open the "TIME" file on the glasses disk.
- (2) The setting format is: 2021.01.01 00:00:00 Y 3
- (3) The format meaning is "Year. Month. Day. Hours: Minutes: Seconds
- (4) "Y" can be changed to "N", it means display the date and time on your videos, Yes? Or Not?
- (5) "3" means your video will save as many 3 minutes videos. It can be changed to "3" to "6".
- (6) Save the "TIME" file after you finish the setting. Then record a new video, the setting will be effected on the new video.

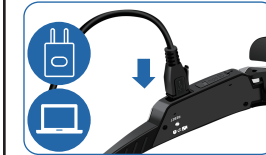

CHARGING:

Connect the glasses to your phone charger or computer with USB cable. Please charge it for about 2 hours before the first time use. The indicator light is red when it's charging, going off after full charged.

3. Related parameters

Item	Related parameters
Video format	MP4
Video encoding	H.264
Video resolution	1920*1080
Video frame rate	30FPS
Picture format	JPG
Pixels	3264*2448
Image ratio	4:3
Support system	Win7/WinMe/WinXP/Win2000/Vista/Mac Os10.5
Charging voltage	DC-5V
Interface type	Micro USB
Storage support	MicroSD (TF)
Battery Type	Lithium Ion Battery
Product size	170mm*171mm*48mm
Product weight	61g
Battery time	1.5 Hours

Note: 64GB, 128GB, 256GB memory cards must be formatted by a formatting tool before they can be used.

1. First download the formatting tool :<http://www.diskgenius.com> and install.
2. Connect the device to the computer, open the formatting tool, select the removable disk,
3. Click the "Format" menu on the interface, and the operation interface will pop up on the right side.
4. Select FAT32 in "File System",
5. Select the default 64KB in "cluster size",
6. Click "Format" again, and you can use it after formatting is complete

4. Questions

Symptoms	Possible Causes	Solution
Unable to turn on	Low battery	Recharge
	Crash	Reset
Automatic turn off	Low power	Recharge
The device cannot be recognized by the computer	Broken line	Replace with a new data cable
	Computer Bios is broken	Set up USB
	The motherboard does not support USB interface	New motherboard driver
Data cannot be stored	The memory card is full	Remove video file
Turn off automatically after truning on	Low battery	Recharge
	The memory card is full	Remove video file

Contact us
 Email: support@mingsung.com
 Phone: +1(920)241-3031

5. PACKAGE CONTENT



- ① Glasses +32GB Mircro SD card
- ② USB cable
- ③ Manual
- ④ Cloth
- ⑤ Glasses box