



EcoPebble Pro

Models: GDI-EXPP301...307






Quickstart Guide

- 1 Open Waterproof Cap on the back of your EcoPebble Pro.
- 2 Turn on the Main Power Switch.
- 3 On the Top Panel, **PRESS & HOLD** the Standby Power Button  to power on your EcoPebble Pro. Listen for the announcement, “Power on, pairing ready;” and look for the LED Party Lights behind the grill to flash Blue.
- 4 Search your Bluetooth Connection on your Smart Device, and select, **ECOXGEAR**. Listen for the announcement, “Bluetooth Connected.”
- 5 Pair & Play


Power and Connectivity Operations

BUTTON	FUNCTION	ACTION	VOICE PROMPT	LED STATUS INDICATOR	NOTES
	Power On	Press and Hold	Power on. Pairing ready.	Flashing Blue	
	Power Off	Press and Hold (approx. 2 seconds)	Power off.	Off	
	Bluetooth Pairing	Short-Press	Pairing ready.	Flashing Blue	This function also allows you to disconnect from your current device and reinitiate Bluetooth pairing.
	Bluetooth Paired		Bluetooth connected.	Solid Blue	
	Auto Turn Off		Power off.		If the EcoPebble Pro is not paired with any device, unit will Auto Turn Off in 3 minutes.
	Wirelessly Pairing Two EcoPebble Pro Speakers	Short-Press	Pairing speakers.	Flashing Blue	You can wirelessly pair two EcoPebble Pro speakers by pressing the Pairing Button on either speaker.
	Wirelessly Paired		Connection successful. Speakers paired.	Solid Blue	
	Master Power On/Off	Turn the Master Power Switch On / Off			Standby Power Button function will NOT operate when the Master Power Switch is set to the OFF position. Master Power Switch under the waterproof cap must be set ON for Standby & your EcoPebble Pro to operate.


Audio Operations

BUTTON	FUNCTION	ACTION	VOICE PROMPT	LED STATUS INDICATOR	NOTES
	Play / Pause	Short-Press			
	Increase Volume	Short-Press			
	Decrease Volume	Short-Press			
	Next Track	Short-Press			
	Previous Track	Short-Press			
	Play Aux-In Audio	Connect External Audio Device with an Aux Cable			

Phonecall Operations

BUTTON	FUNCTION	ACTION	VOICE PROMPT	LED STATUS INDICATOR	NOTES
	Answer Incoming Call	Short-Press			
	Reject Incoming Call	Press and Hold (approx. 2 seconds)			
	Hang Up	Short-Press			
	Activate Voice Assistant	Press and Hold (approx. 2 seconds)			<ul style="list-style-type: none"> • Once activated, the Speakerphone Mic on your speaker will hear your voice commands and transfer them to the voice assistant on your device (Siri, Hey Google, etc.). • Before using the Answer or EcoTalk functions, your device must be connected to the EcoPebble Pro via Bluetooth. • Not all devices have voice assistant functionality; refer to your device for details.

Party Light Operations

BUTTON	FUNCTION	ACTION	VOICE PROMPT	LED STATUS INDICATOR	NOTES
	LED On/Off	Press and Hold (approx. 2 seconds)			
	LED Cycle Forward	Shortpress			Cycle through the 21 Party Light Modes.
	LED Cycle Back	Double-Click			Cycle back to the previous Party Light Mode.

Party Light LED Light Effect Modes (21)

LED LIGHTING EFFECT		LED LIGHTING EFFECT	
1	Bluetooth Pairing Status	12	Slow Color-Changing LED Dance
2	Colorful Rotation	13	Six-LED Crossfade
3	Four-Segment, Double-Color Jump	14	Solid Red
4	Colorful Fading	15	Solid Green
5	Three-Color Rotation	16	Solid Blue
6	Gradient Rotation	17	Solid Yellow
7	Four-LED Crossfade	18	Solid Purple
8	Eight-LED Crossfade	19	Solid Cyan
9	Music Sync 1 – Vertical Flashing to Beat with Color Changing LEDs	20	Solid White
10	Music Sync 2 – Four-Sided Alternating Spectrum	21	Rotating Flashing
11	Quick Color-Changing LED Dance		

Battery Status

FUNCTION	VOICE PROMPT	LED STATUS INDICATOR	NOTES
Battery Low	Battery Low.		Use the included USB-C Charging Cable.
Charging		Red	LED Status Indicator located next to Charging Port, under Waterproof Cap.
Fully Charged		Green	LED Status Indicator located next to Charging Port, under Waterproof Cap.