



EcoRoam 100

User Guide | Models: GDI-EXRMX100...120

Control Buttons & Operations

On / Off

 
PRESS & HOLD the Power Button  for 3-5 seconds to turn it On / Off.

Play / Pause

Press  once to pause & play song tracks.

PRESS & HOLD  to disconnect Bluetooth connection.

Refer to **Bluetooth Pairing & Audio** for details.

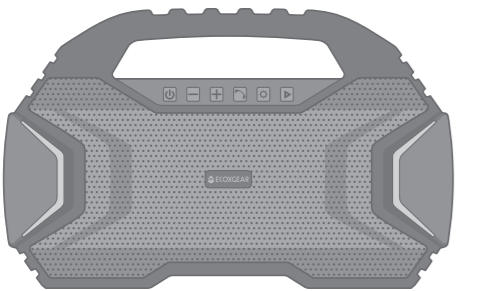



Track Selection

PRESS & HOLD  for previous track selection.

PRESS & HOLD  to advance the track selection.

Speaker Volume

Press  once to decrease the volume. Press  once to increase the volume.


Phone Calls

Press  once to answer incoming mobile calls and once again to hang up.

PRESS & HOLD  to reject incoming mobile calls.

Party Lights

Once turned on, the EcoRoam 100 automatically enters Party Lights Music Sync mode.

Press  once to cycle through additional Party Light Modes.

Wireless Pairing of Two Speakers

This functionality is **ONLY** available with two EcoRoam 100 speakers. Refer to **Wireless Stereo Connection of Two Speakers** for details.

Power and Connections



Input

Fully charge your EcoRoam 100 **BEFORE** you power on for best performance. Connect the USB INPUT to the supplied USB micro cable and AC-DC adapter to a power source to charge your EcoRoam 100.

When charged, **PRESS & HOLD** the Power Button to power On / Off the EcoRoam 100.

RECOMMENDATION: Use the USB micro cable and AC-DC adapter included with the EcoRoam 100 for optimal performance.

Audio AUX-IN

Connect an audio device using the supplied 3.5mm audio cable as an alternative to a Bluetooth connection to your EcoRoam 100. After the AUX-IN cable is plugged in, the LED indicator will shine solid **GREEN**.

NOTES: Track Selection must be controlled from the audio device when connected to the AUX-IN connection.

Output

Connect to the USB Output (5V, 1A) port to charge your personal device. Use the USB cable included with your personal device.

Charge time is approx. 1-2 hrs. from low to full for most Smartphones; however, charge times will vary depending on the device being charged, the device's battery specifications, and the device features. In some instances your personal device may not indicate if charge is in process.

CAUTION: Do **NOT** charge if unit and/or connections are wet or damp.

TF Card

Insert your TF card into the TF Card reader as an alternative to a Bluetooth connection to your EcoRoam 100. After the TF Card is inserted, the speaker will start playing music and the LED indicator will shine solid **GREEN**.

Bluetooth Pairing & Audio

Connecting With Bluetooth: Connect To Your Smart Device & Play Audio

When your EcoRoam 100 is turned on, the LED light on the front will flash **BLUE**, indicating the unit is powered on and ready to pair. The unit shall also emit tones when powered on.

Turn on your Smartphone's Bluetooth. Set the Smartphone to pairing mode. Available Bluetooth connections shall appear. Select 'ECOXGEAR' from the list

of discovered devices on your Smartphone. Wait a few seconds until the connection is completed.


When the ECOXGEAR selection is made and the Bluetooth connection is complete, your EcoRoam 100 will emit tones and the LED indicator will turn solid **BLUE**. Once connected, select and play your desired audio.

Your EcoRoam 100 should sync & wirelessly pair with most Bluetooth enabled devices. The unit remembers the last device paired and will automatically search for previous connections when the speaker is turned on or when a device comes back into Bluetooth range. If a connection is dropped, the speaker will look to re-establish that connection. If Bluetooth is turned off on your Smartphone, the EcoRoam 100 may not automatically look for the device.

RECOMMENDATION: If you are not familiar with Bluetooth pairing for your Smartphone or other Smart-Device, refer to the User Guide for your Smartphone to learn how to add and pair a new device (EcoRoam 100 for instance) to your Smartphone using Bluetooth.

 
Bluetooth Pairing & Connections

Once paired, should you have an issue switching between Bluetooth connections on current or new devices, open the Bluetooth Section within the device currently connected to the EcoRoam 100 and delete the ECOXGEAR Bluetooth selection from your phone. The EcoRoam 100 will then be available to pair & connect to an alternate "ECOXGEAR" Bluetooth connection.

To disconnect the speaker, you can also **PRESS & HOLD** . The speaker will emit tones once it has disconnected from your Bluetooth device.

NOTE: After 10 minutes of inactivity and no Bluetooth connection with a device, the EcoRoam 100 will automatically power off to conserve power. The Auto Power Off feature does **NOT** work in Aux-In or TF Card mode.

Wireless Stereo Connection of Two Speakers

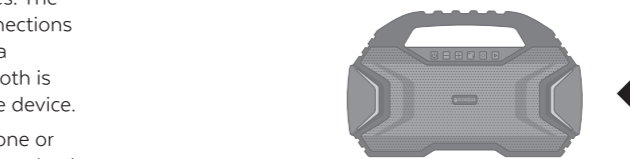

First Time Pairing Two Speakers

When you have two EcoRoam 100 speakers and want to wirelessly pair them for stereo sound, power on the two units.

Next, **DOUBLE-CLICK** the Play Button  on both speakers. They will emit tones to indicate that two-speaker pairing has been initiated.

Wait approximately 3-10 seconds for the units to pair. When paired, the speakers emit tones and the LED indicator light will turn solid **BLUE** on one unit, while the LED indicator on the other unit will flash **BLUE**.

Pair the first speaker to your phone by selecting 'ECOXGEAR' from the list of discovered Bluetooth devices on your Smartphone. Once connected, the flashing **BLUE** LED indicator will turn solid, and the speaker will emit tones.

Auto Re-Pairing of the Same Two Speakers

Power on the two EcoRoam 100 units. Wait approximately 3-5 seconds and speakers will automatically re-pair to each other. The speakers will emit tones and the LED Indicator light will turn solid **BLUE** on one unit, while the LED indicator on the other unit will flash **BLUE**. If your phone is on and within range, the speakers will automatically reconnect to it. The flashing **BLUE** LED indicator will turn solid, and the speaker will emit tones.

To un-pair two paired speakers, **DOUBLE-CLICK** the Play Button  on either speaker. Both speakers will emit tones.

 
NOTE: This functionality is **ONLY** available with two EcoRoam 100 units with a distance of up to 15ft from each other. It only works when using Bluetooth as your audio source.

Important: Maintaining Waterproofness

Your EcoRoam 100 is only waterproof when the **BACK CAP** is properly closed. In order to properly close the cap, be sure the cap fits flat and flush along the edges with the back panel.

Specifications

Unit Dimensions

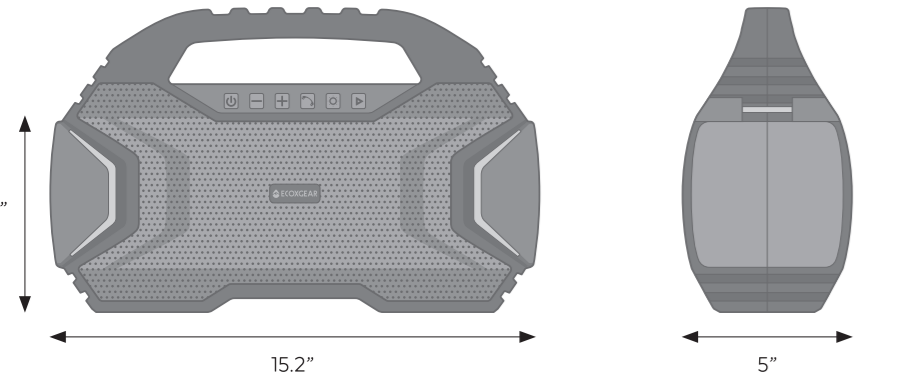

Unit Weight

6 lbs 8 ounces

Output Power

2x 15W Stereo Speakers

S/N Ratio

90dB +/- 3dB

Power Source

7.4V, 4000mAh Lithium Battery

USB Input

5V, 2.1A

USB Output

5V, 1A

Frequency Range

20Hz-18,000Hz

Play Time

15+ hours from full charge at 75% volume level

Charging Options

USB to adapter or computer

Charging Time

Approximately 5 hours

Bluetooth

Bluetooth® 4.1; Up to 30 ft / 10 m

Pairing Speakers

Two-Unit Wireless Pairing;
Up to 15 ft / 5 m between paired speakers

Recommended Storage (Battery) Temperature

59°F / 15°C

Waterproof / Dust Rating

IPX5

TROUBLE SHOOTING:

EcoRoam 100 speaker “locks up,” does not play audio, and/or will not connect to Bluetooth.

It is uncommon for your EcoRoam 100 to “lock up”; however, the unit can be reset by inserting and pressing a pin into the AUX-IN connection.

FCC STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1.) This device may not cause harmful interference, and
- 2.) This device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: reorient or relocate the receiving antenna, increase the separation between the equipment and receiver, connect the equipment into an outlet on a circuit different from that to which the receiver is connected, consult the dealer or an experienced radio/TV technician for help.

RF WARNING STATEMENT:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

IC STATEMENT:

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- 1.) This device may not cause interference, and
- 2.) This device must accept any interference, including interference that may cause undesired operation of the device.

PRODUCT USE AND PROTECTION:

Read and follow all instructions. Use only as intended.

The ECOXGEAR Bluetooth speakers are intended to be used indoors or outdoors. The speaker has been tested to IPX5 waterproofing standards, which means that they are splashproof. However, the unit and USB cable are **NOT** waterproof.

Always make sure the cap(s) / cover(s) are clean, free from sand or debris, and correctly fitted. The speaker will only meet IPX5 ratings if all rubber seals, gasket(s) and cover(s) / cap(s) are in place. If you notice a muffling of audio after submersion, gently shake the unit to clear excess water. If your speaker is exposed to salt water, clean it thoroughly after use with fresh water.

The USB cables, power adapters, and the unit with an improperly fitted cap are **NOT** waterproof.

To prevent fire or shock, do **NOT** attempt to charge this unit if it is wet or you suspect water has entered the unit. In this situation, please return the unit to Grace Digital for a free assessment. If we have found that the unit has carried water, we will repair or replace the unit free of charge.

SAFETY ADVISORY & WARNING:

Read and follow all instructions. Use only as intended.

- CAUTION: Do **NOT** open to repair. A qualified technician must carry out repair work.
- ATTENTION: Do **NOT** charge while the unit is wet. Towel dry the unit **AND** make sure all connections are dry **BEFORE** plugging in the charging connector. Failure to do so may result in electrical damage to the unit and may void the warranty.

WARNING: EcoRoam 100 has a built-in Lithium battery. The battery must **NOT** be used in or near an open heat source or excessive heat.

WARNING: Danger of explosion if battery is incorrectly replaced.

ATTENTION: Do **NOT** dispose of in a landfill. Contact Grace Digital at www.gracesupport.com or a certified recycling agent to dispose of the unit.

ATTENTION: AC adapter is a device forming a part of the main plug therefore an AC adapter can always be readily disconnected from AC socket-outlet.

PROPOSITION 65

WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov

SAFETY:

This product has a limited life span of use and should be replaced when it shows obvious signs of wear.

Do not modify or remove any original component parts of the speaker. Doing so could cause damage to the unit allowing water to ingress. A unit with water ingress should not be charged due to potential risk of fire or shock.

Do not attempt to mount the unit except with the approved ECOXGEAR mounts. Doing so could cause damage to the unit allowing water to ingress. A unit with water ingress should not be charged due to potential risk of fire or shock.

Please exercise care and good judgment when using your ECOXGEAR speaker. Audio levels should be appropriate to your environment, comply with all local regulations, and always ensure that you can hear and be aware of any potential hazards around you.

You should always

- 1.) Use the ECOXGEAR speaker in accordance with any music or noise rules and regulations.
- 2.) Properly seal the ECOXGEAR prior and after each use when in humid or water environments to avoid water damage to the internal components. Salt water / air is particularly corrosive. Always make sure that the gaskets are sealed when in salt water environment and the unit properly rinsed off after use.

3.) Properly clean the ECOXGEAR and ensure the gaskets have no sand, dirt or water on them prior to storage or removing the back cover.

4.) Store your unit with all caps properly sealed to avoid long term internal moisture damage inside your unit.

5.) Completely dry and clean your ECOXGEAR prior to attempting to charge the unit.

6.) Return the ECOXGEAR to Grace Digital if you suspect water ingress into the unit or if the unit has experienced a severe impact that may have affected the integrity of the unit to take on water.

You should never

- 1.) Never charge your ECOXGEAR if you suspect water has entered the device. Charging a device with water inside could be potentially hazardous and cause fire or a spark.
- 2.) Never use your ECOXGEAR if you have dropped it or thrown it against a hard surface which may have destroyed the integrity of the speaker, housing, or gaskets. In the event of a severe impact to your unit please return the unit to Grace Digital to review for potential damage.
- 3.) Never open the auxiliary door in a water environment. This could cause water to ingress into the unit which could potentially be hazardous and cause a fire or a spark.
- 4.) Never connect a device to the auxiliary input jack when in a water environment. The auxiliary jack should only be used in a dry environment.
- 5.) Never attempt to fix, repair your ECOXGEAR unit. Please send it back to Grace Digital for any assessments and repairs.

CARE, MAINTENANCE & PRECAUTIONS:

- 1.) The unit is splashproof only when the cap is properly closed.
- 2.) Close the cap properly before use. If the unit is in a wet environment without the cap properly closed, water may enter into the unit and void your warranty.
- 3.) Dry unit completely before opening the cap. Do **NOT** open the cap if wet or in a wet environment.
- 4.) Do **NOT** apply excessive force to any surfaces of the unit.
- 5.) Do **NOT** use or store the unit in places with high temperature.

6.) **AVOID** prolonged exposure to ultraviolet radiation (UV sunlight) and strong magnetic fields.

7.) Periodically check the rubber seal for premature wear.

8.) Periodically clean the rubber with a soft moist cloth and ensure no objects such as dirt, hair, sand are on the rubber cap. Do **NOT** use any oily solvent or chemicals for cleaning.

9.) Wipe off the unit using a cloth and tap water if exposed to salt or swimming pool water.

10.) Power and / or charge the built-in rechargeable battery for portable use by connecting the USB cord to a computer USB connection or to an AC outlet using the AC-to-USB cord 5V, 2.1A power adapter intended for use with the unit.

11.) Noise and audio distortion may occur when the batteries are nearing end of charge.

12.) Do **NOT** remove the built-in battery. Do **NOT** remove the grill covers.

LIMITED MANUFACTURER'S WARRANTY:

EcoRoam 100 is covered by a 3 year limited warranty that covers defects in workmanship and / or materials for a period of 3 years from original purchase date. This warranty does not apply to any products which have been abused, neglected, modified or used for a purpose other than the one for which they were manufactured. Please refer to the above care and maintenance instructions for suggested care details. The warranty is valid only for the original owner who purchases the unit from an authorized dealer. Transfers do not qualify for warranty protection. Grace Digital reserves the right to replace any out-of-stock or discontinued product with a comparable product. Discontinued products may not be available for warranty replacement. Any contents are **NOT** covered by the limited manufacturer's warranty. Warranty terms may be revised without notification at the discretion of the manufacturer. Please visit www.ecoxgear.com for additional product & warranty information.



EcoRoam 100 by ECOXGEAR, a division of Grace Digital Inc., San Diego, California.
Designed and Engineered in the USA. Made in China.

Patent Pending.