10' Outdoor Event Tent

Top cover Set-up



2





Remove from bag

Place feet on stable ground

6

Lay canopy over top of frame




8

Align the canopy top over the frame corners and place Velcro on all 4 corners (none on top piece)

Make sure canopy is flush on hardware

Lift inside pole in center to extend frame completely

Secure top with tabs

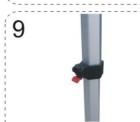

Lift the 2 adjacent outer legs and slide outthe inner legs until the snap button locks into the hole in the outer leg



Repeat on opposite legs; Make sure to dotwo legs at a time. Minimum of two people recommended.



Spin winder in the center of the frame to completely tighten tent



Full wall Set-up



Apply fullwall to top Velcro strip inside canopy



3

Half wall Set-up

Secure to side poles with Velcro strips (x4 per pole)

Attach one halfwall bracket Fullwall application is complete to one tent pole







Attach second halfwall bracket to opposite tent pole



Attach each side of pole to pole collar; Secure with Velcro strip (x3)

