

Manufacture: Bonsen Electronics Limited

No. 11, Lunpinchong Industrial Zone, Houjie Town, Dongguan City, Guangdong Province, China, postal code 523941.


L: 1-866-211-9344

Made in China 20240412A1 E-400



AromaRoom Air Purifier

Model:E-400

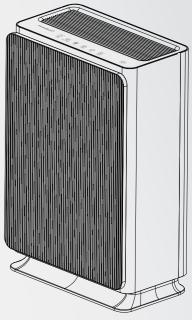


- Thank you for using the products protected by intellectual property rights.
- Before using this product, please read the operation manual carefully and keep it properly.

IMPORTANT

In order to prevent harm or damage to users or others, be sure to comply with the requirements as follows:

Warning/Attention

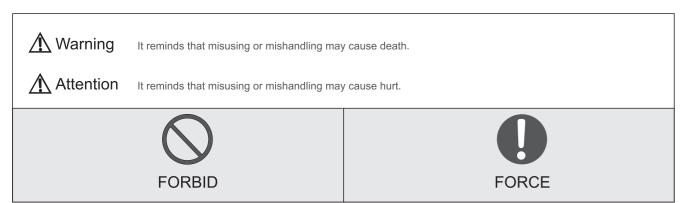

- This appliance has a polarized plug (one blade is wider than the other) .To reduce the risk of electric shock, this plug is intended to fit in a polarized socket only one way. If the plug does not fit fully in the socket, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
- Children aged 8 and above, as well as individuals with physical, sensory, or mental disabilities or those lacking experience and knowledge, must be aware of the dangers involved and use this equipment in a safe manner under supervision or guidance. Children must not play with the equipment. Children must not clean and maintain the equipment without supervision.
- If the power cord is damaged, it must be replaced by the manufacturer, service agent or similarly qualified person to avoid danger.

IMPORTANT

/ WARNING

Please supervise your children and avoid them from touching or using machine.

Do not connect or disconnect the power with wet hand. It may cause a fire

because of heating or electric shock.

Do not disassemble, repair or rebuild.

It may cause fire or damage Please send it to the retailer for repair.

Do not use the overrun socket or wiring connector. Please use rated voltage.

It may cause fire.

Please insert the power plug into the socket completely.

It may cause a fire because of heating or electric shock. Do not use the damaged plug or loose socket.













Avoid any water on the surface of the appliance.

It may cause short circuit or electric shock.

The appliance must be disconnected from the power supply before cleaning or doing other maintenance.

Otherwise the appliance may start working in a sudden which may cause electric shock or hurt.

Do not insert any metal objects into the appliance. It may cause hurt or electric

shock

Do not repair it when the cord or plug is damaged.

It may cause short circuit. electric shock or fire. Please send it to the retailer for repair.

If there is dust on the plug, it could weaken the insulation and even cause a fire.

Take out the plug and clean it with dry cloth.

Please unplug the power plug from the socket if it is not used for a long













FORCE

AVOID WET

DISCONNECT POWER

IMPORTANT



ATTENTION

Do not turn on the device power when using insecticides indoors.

Insecticides may be stored in the device and sprayed out during normal operation. This can be harmful to health.

Please ventilate completely after applying insecticide before turning on the device.



Please hold the plug instead of the cord when unplug the power.

Otherwise it may cause a short circuit, breaking of the cord, electric shock or fire.



Do not use in the room with ampblack such as kitchen.

It may cause hurt because the machine is not a ventilator.

Do not blow any flammable substances or burning cigarettes into the device.

It may cause fire.


Do not use in wet or hot environments such as bathrooms.

It may cause electric leakage, electric shock, or fire.




Keep away from alcohol, organic solvents, or pesticides.

It may cause electric leakage, a short circuit, electric shock, injury, or fire.

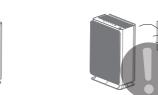

Please ensure timely ventilation when using this device indoors with an open flame.

Otherwise, it may cause carbon monoxide poisoning, as the machine is not a ventilator.

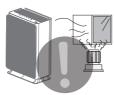

Please remove the plug from the socket under the following conditions:

- If all switches do not work.
- If the power cord or plug abnormally becomes hot.
- If there is any peculiar smell, exceptional noise, or vibration.
- If there is any other abnormality or failure.

If the power cord is damaged, please send it to the retailer, service center or technician for repair. Do not attempt to change or repair it yourself.

PRODUCT TECHNICAL

PURIFICATION TECHNICAL

The composite filter is composed of pre-filter, HEPA and activated carbon.

Pre-filter can filter large particles and ensure proper timing for HEPA usage.

HEPA can effectively remove PM2.5 up to 99.99%.

Activated carbon made from porous coconut using modern biological carbonization synthesis technology has stronger adsorption capacity and can effectively remove smoke and formaldehyde.


VISABLE AIR QUALITY

	Indicator Color	(U) Green	(U) Yellow-Green	(U) Red
Air Quality	Air Quality	Very Good	Moderate	Bad
Indicator Chart	Auto Mode Fan Speed	1	2	3
	PM2.5 range reference value	0-70 ug/m³	71-110 ug/m³	> 110 ug/m³

Auto Mode: Optimize fan speed based on real-time air quality.

Note: This is a reference value range. It is necessary to clean the dust on the sensor position regularly every month according to the instructions to avoid affecting the value.


PURIFICATION PROCESSING

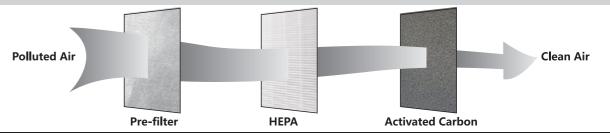

COMPONENT INTRODUCTION

DIAGRAM OF THE OUTLOOK


DIAGRAM OF UNIT

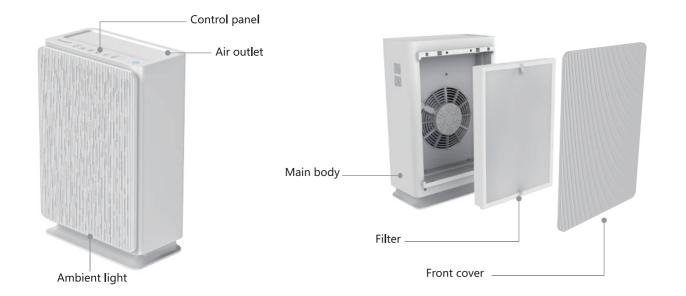

COMPONENT INTRODUCTION

OPERATION PARTS


Diagram of Control Panel

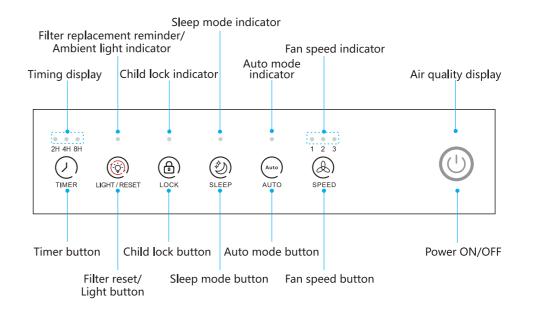

CAUTIONS BEFORE OPERATING

PLACEMENT

- Please keep the machine's air inlet and outlet at least 30cm away from the wall and home furniture.
- ◆ Avoid placing the machine near any heat source outlet.

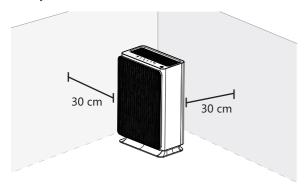

FILTER REPLACEMENT REMINDER

◆ If the "Light/Reset ② " button light turns red, it indicates that the filter's lifetime (2160 hours) has expired. Please replace the filter with a new one. After replacing the new filter, press and hold the "Light/Reset ② " button for about 3 seconds, the light will turn off and the machine will work normally.

CAUTIONS BEFORE OPERATING

GETTING STARTED

- 1. Peel off the red sticker on the front cover of the machine.
- 2. Open the front cover. (Step1)
- 3. Take out the filter. (Step2)
- 4. Remove the protective bag of the new filter, and then install the new filter. (Step3)
- 5. Install the front cover and finish the filter replacement. (Step4-5)

Note: For filter replacement, please refer to Step 1, 2, 3, 4, and 5.




Step1: Remove the front cover with both hands




Step2: Take out the old filter and then install the new filter



Step3: Remove the protective bag of the new filter

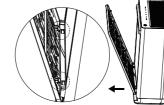

Step4: Install the bottom buckle of the baffle first

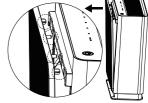

Step5: Reinstallation of fasteners above the baffle

OPERATION INSTRUCTION

HOW TO CONNECT THE POWER

 AC voltage: 120V~60Hz
 Please do not connect external power supply of different voltage to the machine by mistake, and insert the plug firmly into the power socket.



POWER SETTING

Power on/Standby

- 1. Plug in the power supply and all indicators light up for one second to perform a self-test. After the self-test is completed, it enters standby mode.
- 2. In the standby mode, all the indicator lights do not light up.
- 3. In the standby mode, press the on/off button to switch the machine on/off.
- 4. The machine will default into "Auto" mode when turned on. And it will automatically detect the ambient air quality and select the "Speed" level. The color of the outer ring of the power button will be adjusted according to the ambient air quality.



Standby



Power on

AUTO MODE SETTING

- In the startup mode, press the Auto Mode button to enter or exit "Auto" mode. And the machine will automatically detect the ambient air quality and select the "Speed" level. The color of the outer ring of the power button will be adjusted according to the ambient air quality.
- 1. In "Auto" mode, timing still takes effect.
- 2. Press the "Speed" button to directly turn off the "Auto" mode.



OPERATION INSTRUCTION

FAN SPEED SETTING

 Press the fan speed button to switch between "Low-1", "Medium-2" and "High-3" speeds.



CHILD LOCK SETTING

- Use the child lock to temporarily lock the control panel and deactivate all buttons.
- Press and hold "Lock" button for 3 seconds to unlock or lock the function.



TIMER SETTING

Press the "Timer" button to set the working time.
 There are 3 timer settings to choose from: 2 hours(2H),
 4hours(4H) and 8hours(8H). The timer function indicator lights will show the selected timer setting.



OPERATION INSTRUCTION

SLEEP MODE SETTING

- With the machine on, press the Sleep Mode button to turn on or off sleep mode.
- 1. In sleep mode, the timer is still active.
- 2. Press the "Auto" button or "Speed" button to turn off the sleep mode directly.
- 3. Press the "Light/Reset" button to turn on the indicator and ambient lights, and press it again to turn off all lights.



AMBIENT LIFHT SWITCH/FILTER REPLACEMENT REMINDER

- If the "Light/Reset" button light turns red, it indicates that the filter's lifetime (2160 hours) has expired. Please replace the filter with a new one.
- After replacing the new filter, press and hold the "Light/Reset" button for about 3 seconds, the light will turn off and the machine will work normally.




Number of operations	1	2	3
Demonstrate	Turn off the ambient light	Turn off all lights	Turn on a ll l ights


CLEAN AND CARE

Maintenance and cleaning methods



Please remove plug from the socket before cleaning and maintenance.

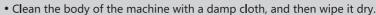

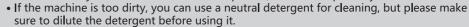

 Please do not use the solvents listed on the right for cleaning the machine, as it may result in deformation or discoloration.



CLEANING THE FILTER

- Clean the filter every 4 weeks. To improve efficiency and extend the life of the filter, please use a soft brush or vacuum cleaner hose to clean the filter and remove hair, dust, and large particles.

 Note: Avoid scrubbing, scraping, or vigorously brushing the filter. Do not use abrasive cleaning materials.
- How to clean the filter:
- 1. Turn off the air purifier.
- 2. Open the front cover.
- 3. Push the pre-filter's tabs outward and pull to remove the filter.
- 4. Clean the surface of the filter with a vacuum. [Figure 1]
- 5. Wipe the surface of the filter and the surface of the cover with a soft cloth.[Figure 2][Figure 3]



Figure 1





Figure 2 Figure 3

11 |

CLEAN AND CARE

Filter	When to Clean	How to Clean
Filter		Use a soft cloth or vacuum hose
Front cover	Every 4 weeks	Wash with water and mild detergent

When to change:

The table below provides an estimated filter life based on the number of hours of daily use with seven days per week operation.

Daily Use	6 hours	12 hours	24 hours
Fi l ter Life	12 months	6 months	3 months

Depending upon the conditions in your home, the filter may need to be changed more frequently. Using the air purifier in environments with tobacco smoke, candle burning, construction work, sanding projects, wood burning stove or fireplace smoke, or pets in the home may decrease the filter's life. The filter should be periodically checked for damage or blockage.

FAULT RESOLUTION

• If the machine can't work properly, please kindly check as follows before sending it for repair.

Problem	Checking methods	Possible solution
Do not work	Please check if the plug is disconnected from the socket.	Power plug should be plugged properly.
Do not work	Please check if the base cover is installed completely.	Recover the base cover correctly.
Odor can not be removed	 Is there a very strong odor in the environment in which it is used? (Note: Air should be purified continuously.) 	→ Please ventilate first, and then start the machine.
	◆ Does the lifetime of filters come to an end?	→ Please replace the filter with a new one.
High noise intensity	◆ Is the PE bag for filter removed?	→ Please take out filter and tear off PE bag.
	Does the lifetime of filters come to an end?	→ Please replace the filter with a new one.

If the problem still exists after the above inspections, please disconnect the power and send it for repair.

TECHNICAL PARAMETERS

PARAMETERS OF THE UNIT

Model No.	E-400	
Voltage Supply	120V~60Hz	
Power rating (W)	75W	
Net Weigh	4.3 kg	
Dimensions	320x 185x 490 (mm)	

FILTER PARAMETERS

Item name	Dimensions	Life Time
High efficiency composit filter H14	265x36x368 (mm)	2160H

WARRANTY

The warranty for this device is 12 months from the date of purchase. The warranty only covers material and manufacturing defects, but not transport damage, wear parts or damage to fragile filter components such as buttons or sealing rings.

The guarantee expires in case of improper handling, use of force and internal manipulations which are not carried out by our authorized service center. Your statutory rights are in no way limited by this warranty. The warranty period is not extended by repairs under the warranty. This also applies to replaced and repaired parts. The device has been manufactured with care and carefully checked before delivery.

Please keep your receipt as proof of purchase.

In case of warranty please contact our customer service:

support@aromaroomshop.com

ENVIRONMENT FRIENDLY DISPOSAL

Disposal:



Guideline 2012/19/EC concerns the handling, collection, recycling, and disposal of electrical and electronic equipment and their components, commonly referred to as Waste Electrical and Electronic Equipment (WEEE).

The crossed symbol on a rubbish container indicates that the machine or device is not allowed to be disposed of, but must be handed over to an appropriately equipped collection point for proper recycling or disposal.

Direttive:



The packaging materials have been selected for their environmental friendliness and ease of disposal, making them recyclable. Dispose of packaging materials that are no longer needed in accordance with applicable local regulations.

FCC statement:



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.