


## Boost solenoid vent hose

*Installation required : The vent hose connect the boost solenoid to the air box*

**Step 1 - Remove the fuse box located at the back of the intercooler and unbolt the boost solenoid bracket**



**Step 2 - Connect the vent hose to the solenoid (do not forget the clamp supplied) and follow the same path as the blow off valve hose in direction of the air box**

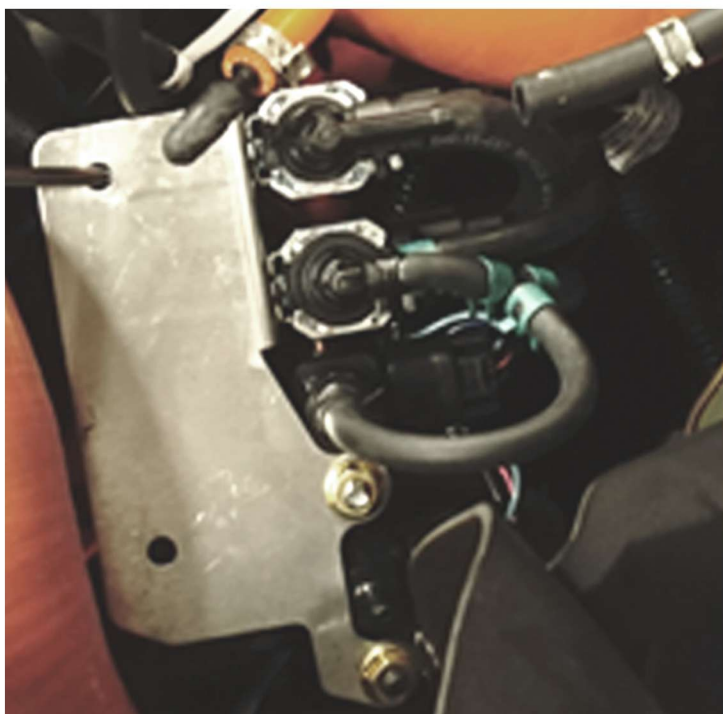

**Step 3 - Remove the red rubber plug from the back of the air box to connect the other end of the hose to this inlet (do not forget the clamp supplied)  
Make sure you have properly reinstalled the supports and the fuse box**

