



MOUNTING

The ChangeMaker has three (3) plugged holes in the left-hand side of the Case for optional mounting. A drill, a ¼" drill bit will be required along with sufficient hardware appropriate to your application and tools for this hardware. A mounting template for drilling holes is provided.

1. To Mount:

a. Secure the template to the mounting surface once you have made sure that nothing will obstruct the drilling

of holes or the placement of bolts.

b. Drill holes. Discard Template.

c. Unlock and open the Front Door.

d. Pull Coin Hopper Assembly forward.

e. Remove the three (3) Plugs by pushing them out from inside the Body.

f. Attach the ChangeMaker to surface with hardware appropriate to your application.

g. Slide Coin Hopper Assembly back in and reconnect cable.

