

# TRONXY



user's manual

# X5SA-PRO

Installation Manual

Thank you for choosing TRONXY products!

We will serve you whole heartedly!



**Please read the instruction carefully**



**Please visit [tronxy.com](http://tronxy.com) for more information**



**TEL: +86-755-89968500**



**Relevant information is stored in  
SD card, please check**



د البيع عب : support@tronxy.com

판매 후 서비스 : support@tronxy.com

Servicio postventa: support@tronxy.com

Serviço pós-venda: support@tronxy.com

After- sale service: support@tronxy.com

アフターサービス: support@tronxy.com

Service nach dem Verkauf: support@tronxy.com

Послепродажное обслуживание: support@tronxy.com



X5SA Pro Install  
video QR Code



Aftersale contact  
QR Code



Facebook QR Code

# Pay attention

## Please read this instruction carefully and follow the safety instruction.



When the 3D printer is working, it will produce high temperature. Do not touch working parts or extruder directly. After printing, the working part may still be in the high temperature state. Please wait patiently for the working parts and the print model to cool down before removing the model from the print platform.



Please use the 3D printer in a spacious and well-ventilated environment.



The recommended ambient temperature for 3D printers is 8° c-40 °C, and the humidity is 20%-80%. Using outside this range may bring bad printing effects.



In case of emergency, could turn off the power of the 3D printer directly.



3D printers contain working parts that move at high speeds, so be wary of pinching your hands.



When removing the model from the print platform, be careful not to swipe sharp objects at your finger.



Assemble the 3D printer or polish the model. suggest Wear goggles.



Please pay attention to the protection of 3D printer against rain and moisture.



Keep children away from the machine when it running It is not recommended to run a 3D printer when left unattended.

# Catalogue

<b>1. Machine parameter .....</b>	<b>1</b>
<b>2. Introduction to machine structure .....</b>	<b>2</b>
<b>3. Packing list .....</b>	<b>3</b>
<b>4. Installation instructions .....</b>	<b>4</b>
<b>5. Interface operation and printing .....</b>	<b>18</b>
<b>6. Slice software .....</b>	<b>21</b>
<b>7. Fault cause analysis .....</b>	<b>24</b>

# 1. Machine parameter

## Print parameters

<b>Print principle:</b>	FDM (Fused deposition molding)
<b>Print size:</b>	330× 330×400 (mm3)
<b>Print accuracy:</b>	0.1-0.4 mm
<b>Positioning accuracy:</b>	X/Y 0.00625mm , Z 0.00125mm
<b>Nozzle quantity:</b>	1
<b>Nozzle size:</b>	0.4 mm
<b>Print speed:</b>	20~100mm/s (suggest 60mm/s)
<b>Moving speed:</b>	100mm/s
<b>Filament:</b>	PLA, TPU, ABS, wood, pc,HIPS, wooden filament etc.

## Temperature parameters

<b>Environmental temp:</b>	8°C - 40°C
<b>Nozzle temp:</b>	Max275°C
<b>Heat bed temp:</b>	support

## Software

<b>Slice software:</b>	Cura
<b>Input format:</b>	.STL .OBJ
<b>Output format:</b>	GCode
<b>Connection:</b>	TF card, USB cable(Suitable for skilled users)


## Power supply

<b>Power input:</b>	110V/220V AC, 50/60Hz
<b>Power output:</b>	24V/15A DC

## Physical parameter

<b>Machine size:</b>	570mm×605mm×655mm
<b>Machine weight:</b>	~14.5kg

## 2. Introduction to machine structure

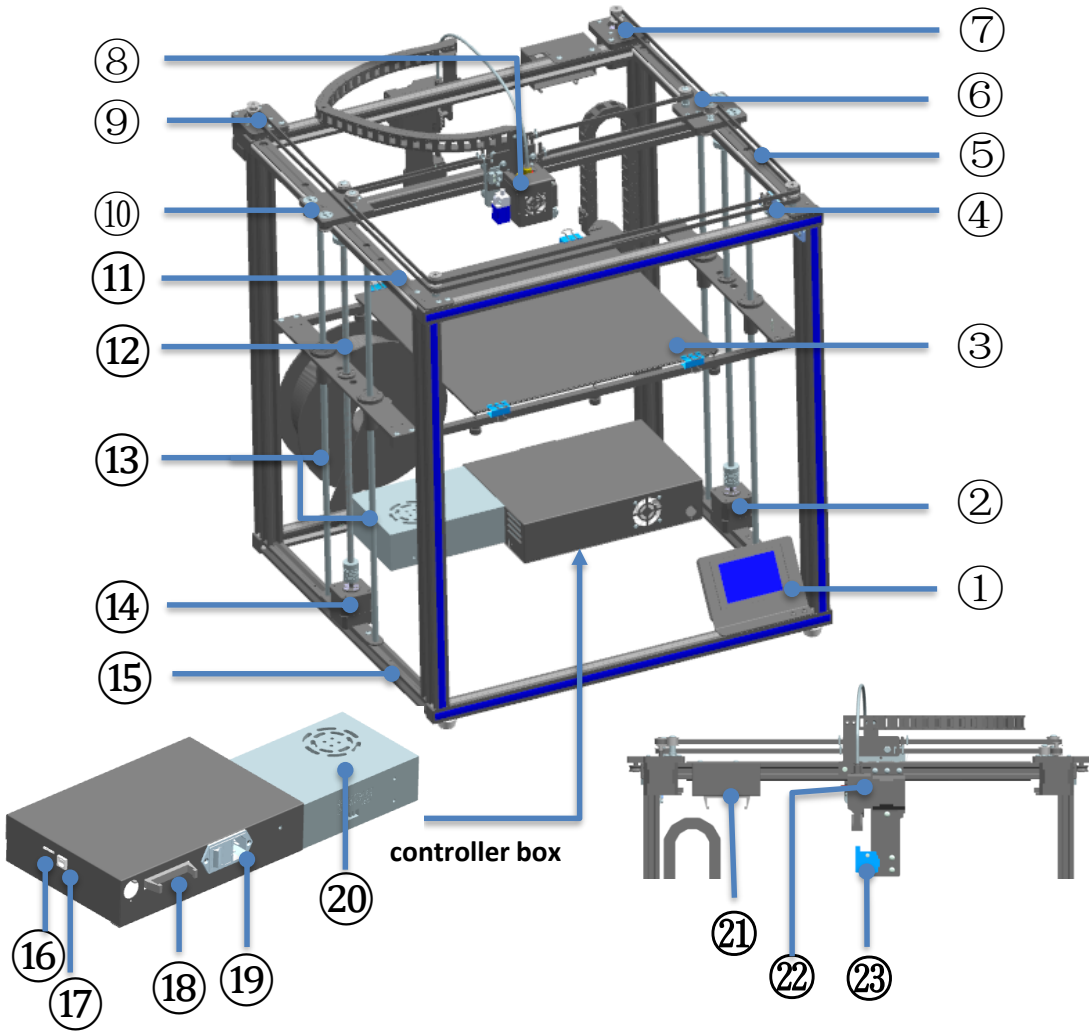

1.Touch screen	2.Z1motor	3.Heatbed	4.Y axis switch
5.Y-right guide rail	6.Y-right sliding parts	7.Xmotor	8.extruder head
9.Ymotor	10. Yleft sliding parts	11. Y-left guide rail	12.lead screw
13.polish rod	14.Z2motor	15.aluminum frame	16.TF interface
17.USB interface	18. Cable outlet	19.power switch	20.power supply
21.switch lines box	22.Titan extruder	23.filament run-out detection	

### 3. Packing list









				
2040aluminum profiles 530mm 4pcs	2020aluminum profiles 530mm4pcs 460mm2pcs	OSG External double axis guide rail -Y axis 460mm 2pcs	OSG External double axis guide rail -X axis 480mm 1pcs	polished rod 528MM 4pcs lead screws 453MM 2pcs
				
beams/footlock 2pcs	left and right sliding parts	print head	left /right belt pulley parts	X/Y axis motors
				
Zaxis motor parts	Titan extruder	component bag 1pcs	controller & touch screen	belt bag
				
filament (Color random)	power line	seal (Color random)	aluminum plate with balck sticker	heat bed
				
screws bag 4pcs	shovel (Color random)	USB cable	Tools bag	reader+TFcard
			<b>After receiving the goods, please check the accessories according to the packing list. If you have any questions, please contact customer service.</b>	
YZswitch parts 1pcs	filament run out detection parts 1pcs	drag chain parts 1pcs		




# 4. Installation instructions


## Step 1: base frame assembly

Assembly material specification and quantity:



			
aluminum 1 20*20*530 4pcs	aluminum 2 20*20*460 2pcs	aluminum 3 20*40*530 4pcs	foot pad Φ20*12 4pcs
			
screws RM4*8 4pcs	gasket M4 4pcs	boat nuts M4 4pcs	screws RM5*25 12pcs

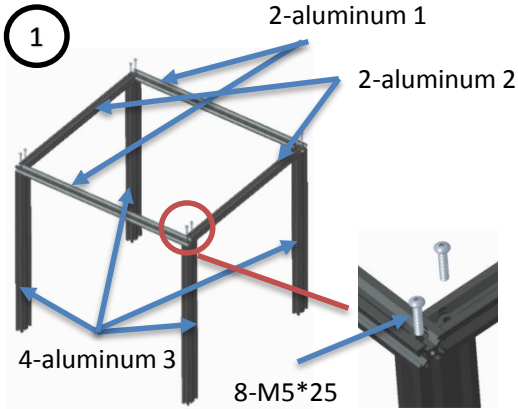

Note: do not lock the screw to facilitate subsequent adjustment.

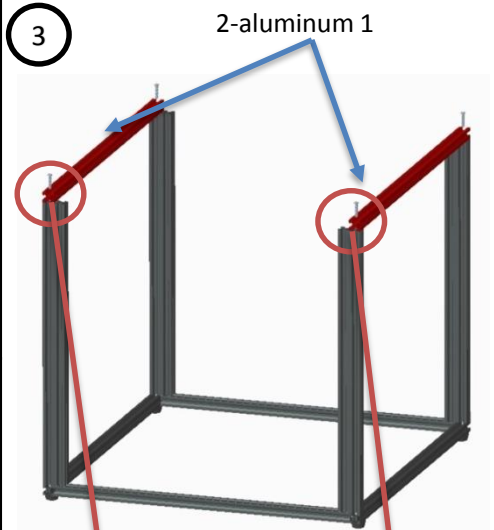
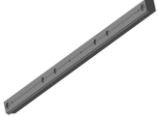
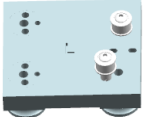


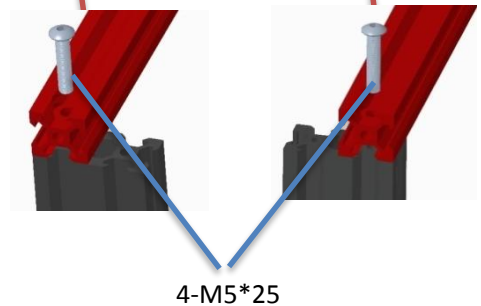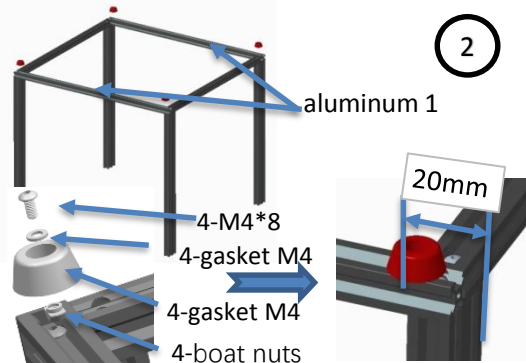

Assembly tips for M4 ship nut: first align the M4 nut with the aluminum profile slot, put it into the aluminum profile slot, use a screwdriver to reverse loosen, release the M4 ship nut over the aluminum profile slot, and then tighten it forward.



## Step 2: Sliding plate assembly

Assembly material specification and quantity:


				
base frame 1pcs	Y axis guide rail 20*20*460 2pcs	left sliding parts 1pcs	right sliding parts 1pcs	screws RM5*25 4pcs

1. Take out the Y axis guide rail and put it into the left and right sliding parts respectively, as shown in the figure.

2. Note the direction of the slide. The front of the slide should be on the same side as the counterbore of the guide, as shown in the figure.


Screw RM5\*25 do not lock tight the Y axis guide rail, which is convenient for subsequent adjustment

1

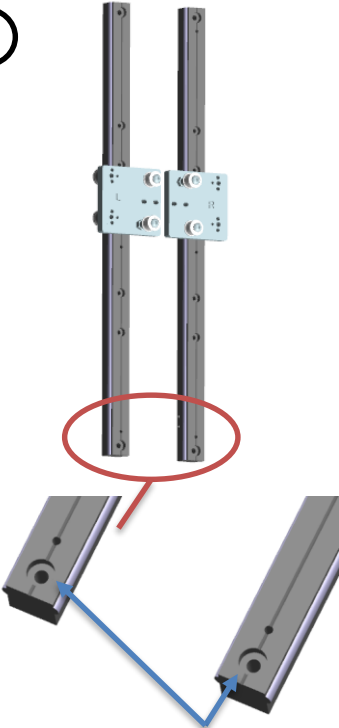





Pay attention the direction of the counterbore

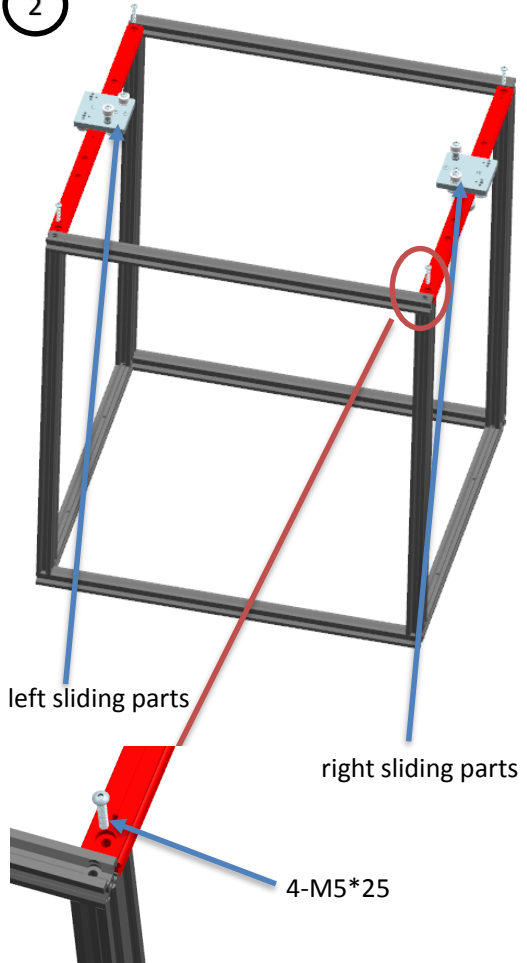
2




### Step 3: X-axis installation

Assembly material specification and quantity:

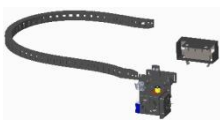				
basic frame 1pcs	X axis guide rail parts 1pcs	Print head parts 1pcs	screws RM4*20 6pcs	

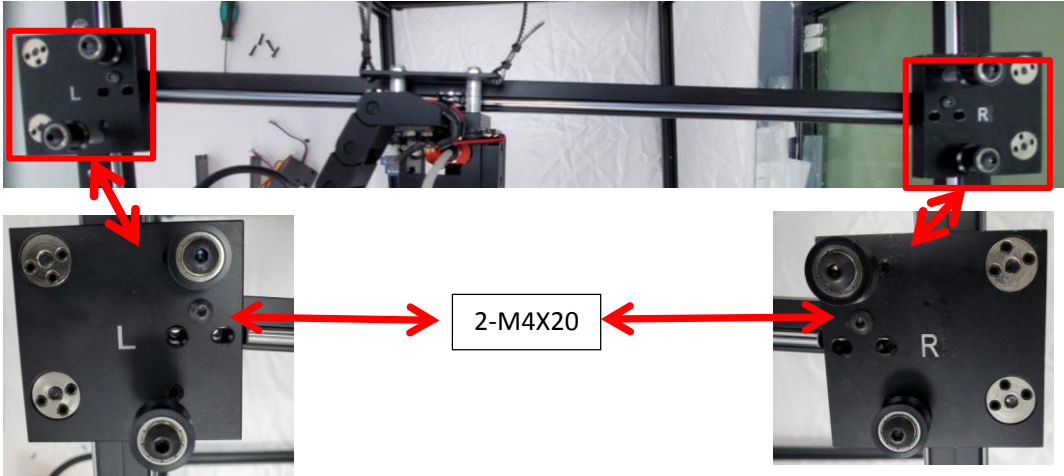



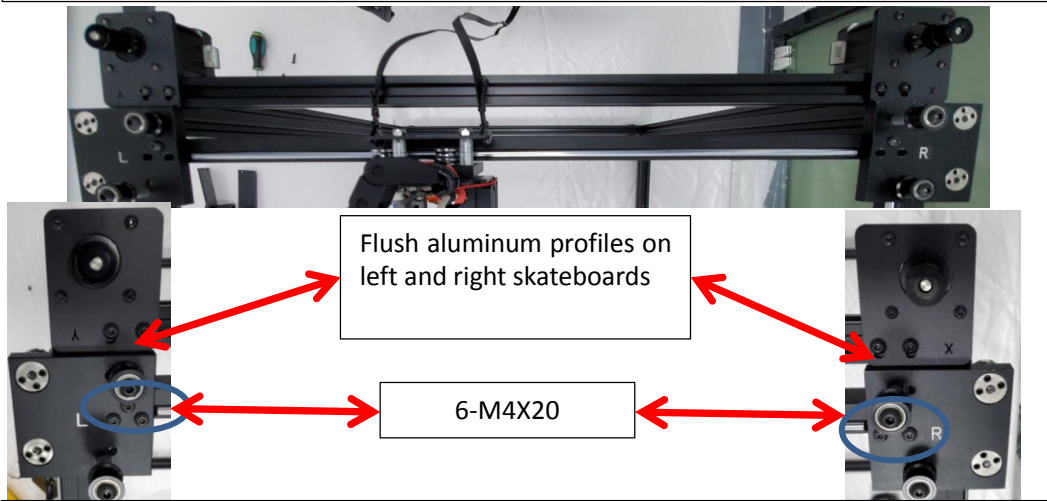


**1. First install the guide rail to the machine according to the instructions, use M4X20 to fix the X-axis guide rail, but do not lock tightly for subsequent adjustment**




**2. Manually pull the Y axis to align the left and right skateboards on the aluminum profile at the rear as shown. Finally, tighten the 6-M4X20 screw, and then move the Y axis back and forth to check if there is a stuck**

## Step 4: Print head assembly

Assembly material specification and quantity:

				
basic frame 1pcs	X axis guide rail parts 20*18*480 1pcs	Print head parts 1pcs	drag chain plate 1pcs	screws RM4*20 4pcs


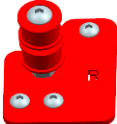
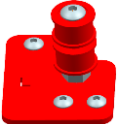


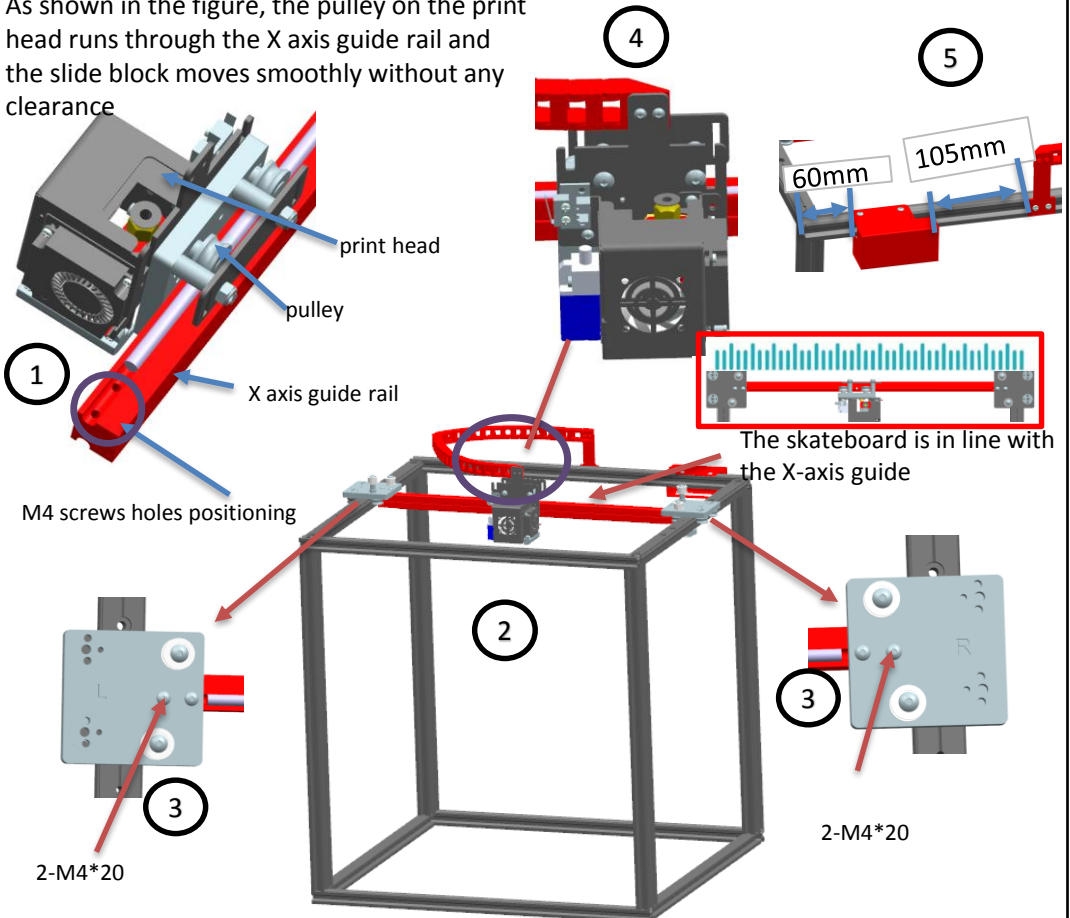As shown in the figure, the pulley on the print head runs through the X axis guide rail and the slide block moves smoothly without any clearance



1. Insert the print head into the X-axis guide rail, pay attention to the direction of the M4 screw hole, as shown in Figure 1.
2. Insert the X-axis rail assembly into the alignment hole of the chassis, and tighten the screw RM4\*20 without locking it, as shown in Figure 2.
3. Move the left and right sliders to confirm that the X-axis rail assembly moves flexibly after locking the RM4\*20 screw.
4. After adjustment, lock the screw of RM5\*25 on the Y-axis guide and move the X-axis guide assembly again. Repeat the adjustment to ensure that the slide is flexible and has no gap after the locking screw.


# Step 5: XY axis motors and wheels assembly

Assembly material specification and quantity:

				
basic frame parts 1pcs	right wheel parts 1pcs	left wheel parts 1pcs	X motor 1pcs	Y motor 1pcs

1. Lock and fix the assembled parts in the position as shown in the figure

Assembly tips for M4 ship nut: first align the M4 nut with the aluminum profile slot, put it into the aluminum profile slot, use a screwdriver to reverse loosen, release the M4 ship nut over the aluminum profile slot, and then tighten it forward

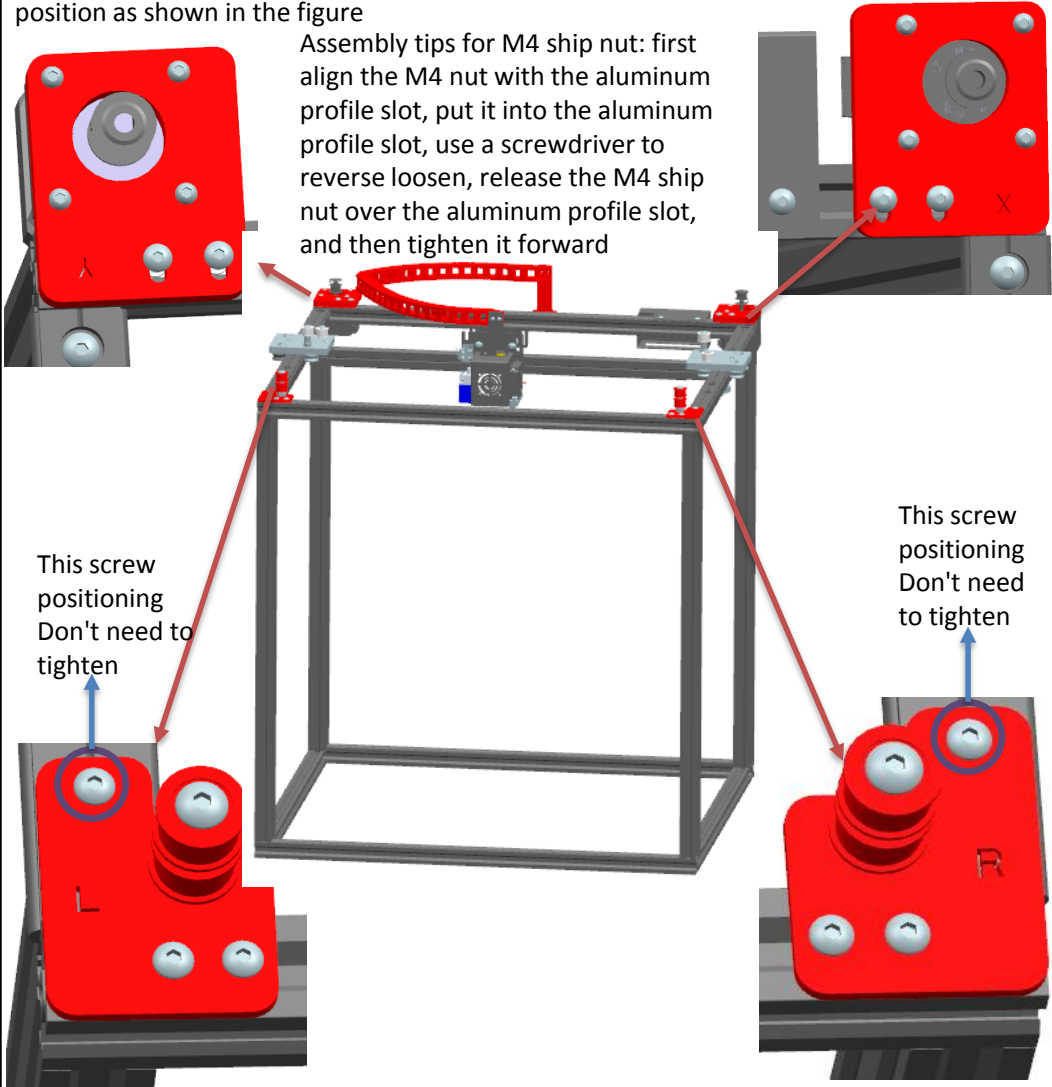




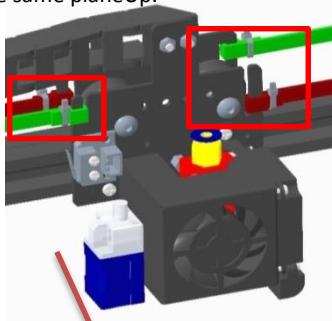
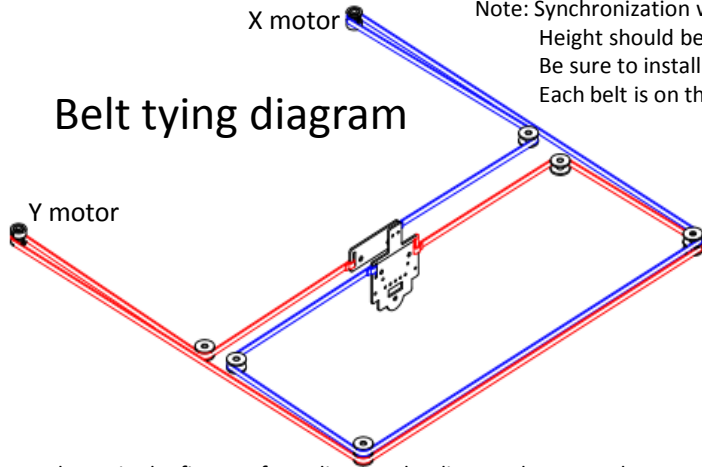
This screw positioning  
Don't need to tighten

This screw positioning  
Don't need to tighten




# Step 6: Belts assembly

Assembly material specification and quantity:


				
basic frame 1pcs	Belt 2pcs	Ties		



- 1.As shown in the figure, after adjusting the distance between the motor gear and the belt, lock the 2 rice screws on the gear.
2. Also assemble the second belt, the tension of the second belt should be equal.

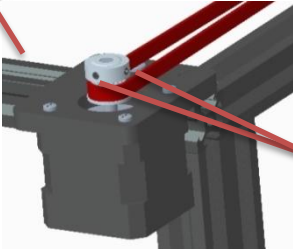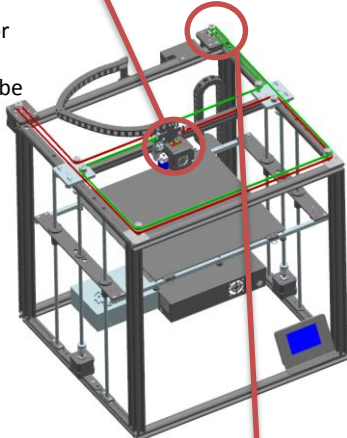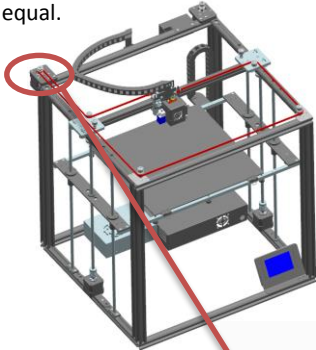

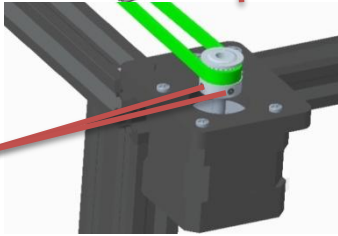


4-M3\*3



# Step 7: Linear bearing assembly





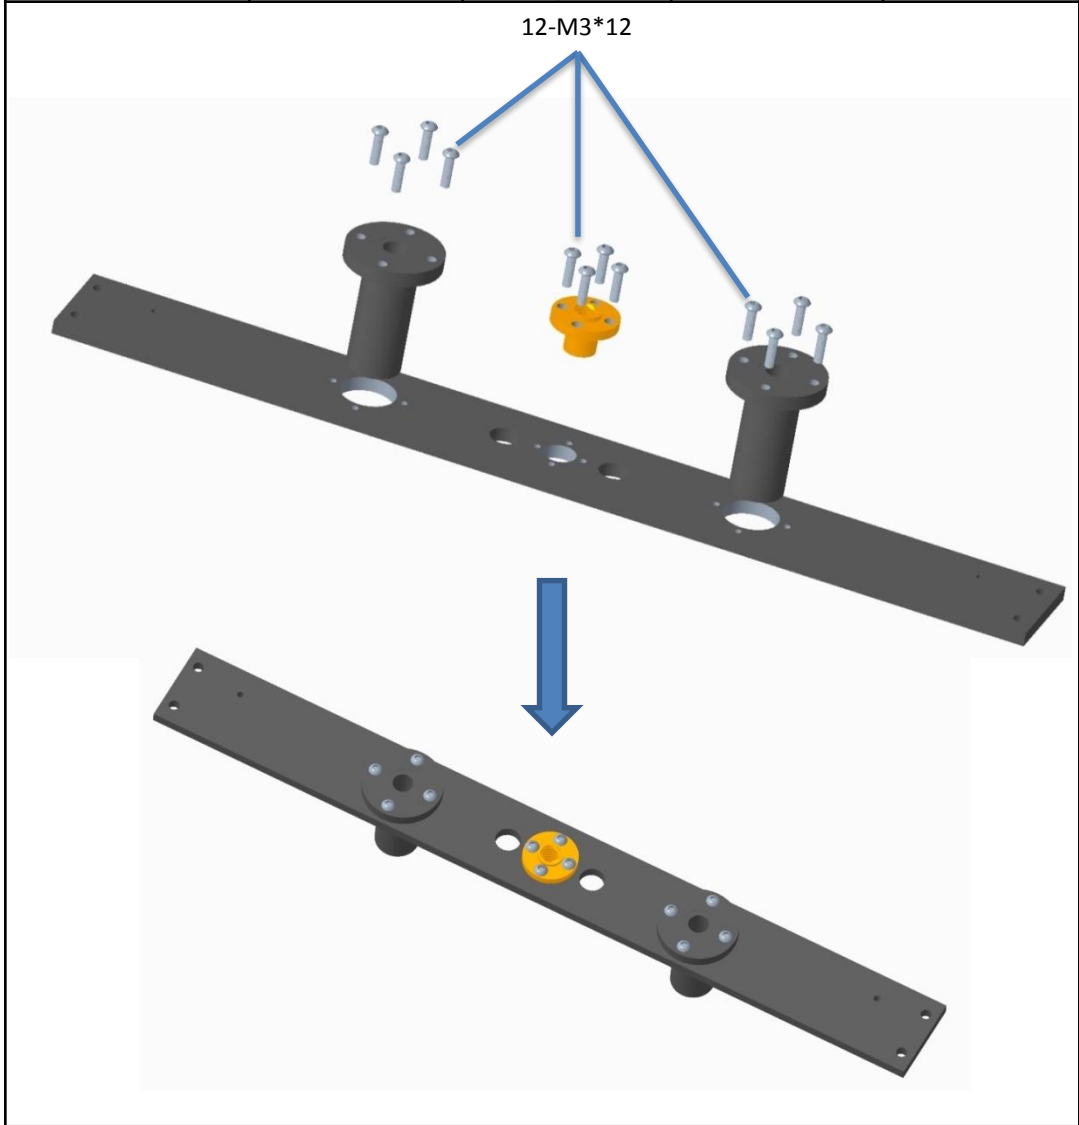



Assembly material specification and quantity:


				
beams 2pcs	Linear bearing 4pcs	copper linear bearing 2pcs	screws RM3*12 24pcs	





# Step 8: Z axis parts assembly

Assembly material specification and quantity:

				
basic frame 1pcs	Z axis motor parts 2pcs	foot lock parts 2pcs	bearing base parts 2pcs	polish rod Φ8*528 4pcs
				
lead screw T8*453 2pcs	screws RM4*20 8pcs	screws RM4*8 4pcs		

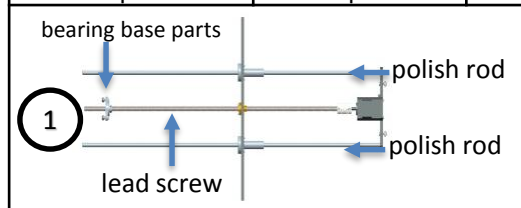

As shown in Figure 1, assemble the assembly, put the assembly into the frame as shown in Figure 2, and align the holes to lock the screws.

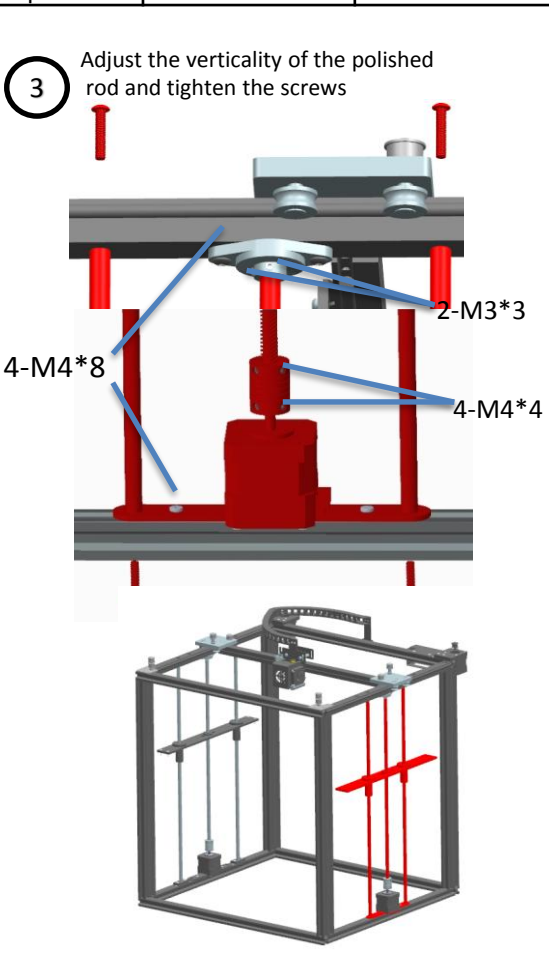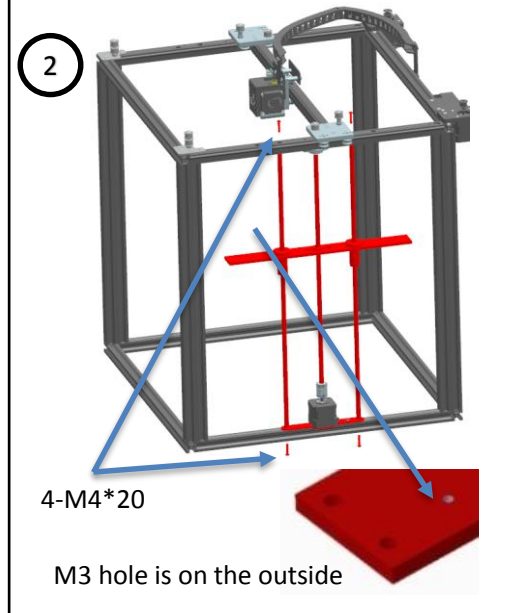




# Step 9: Controller box assembly

Assembly material specification and quantity:





 basic frame  
1pcs




Z axis motor parts  
2pcs

Separate the screen from the host and  
Fix the M4 boat nut on the bottom rack as shown

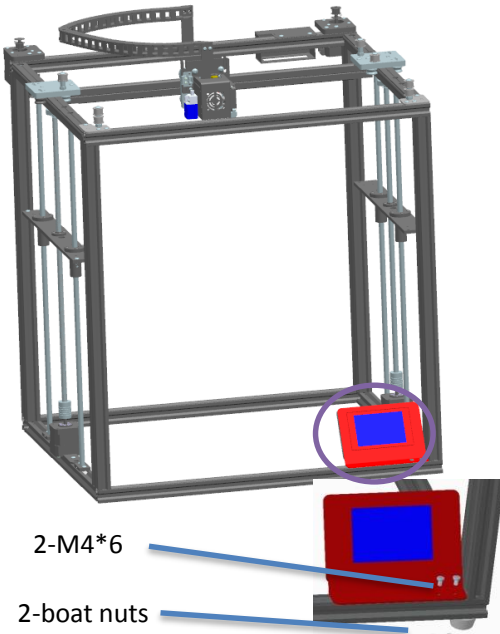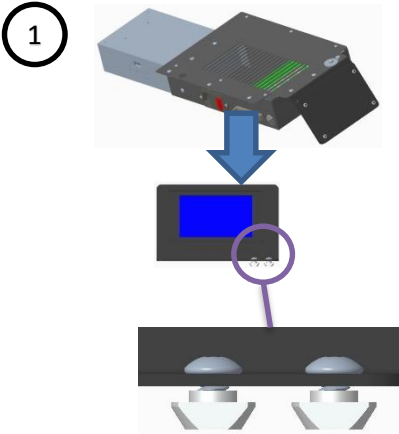



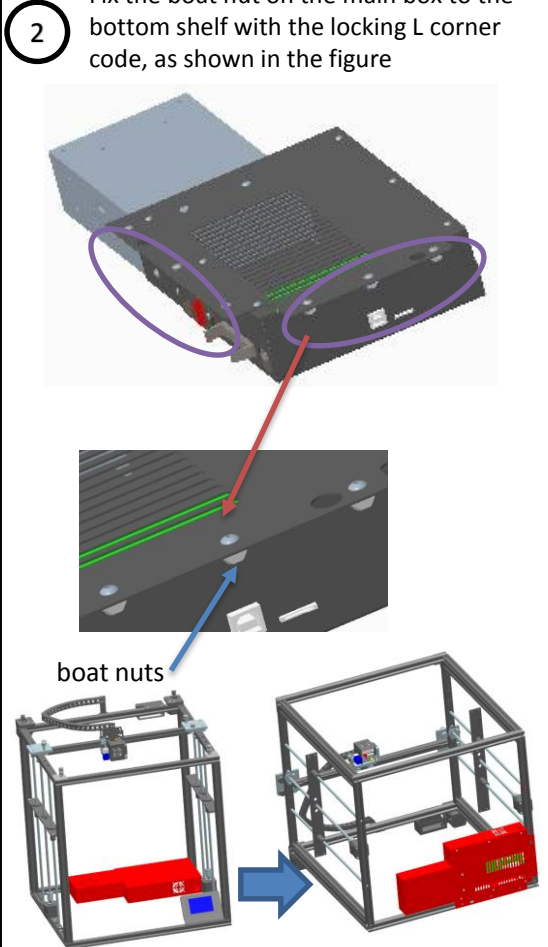










Fix the boat nut on the main box to the  
bottom shelf with the locking L corner  
code, as shown in the figure





# Step 10: Print plate assembly

Assembly material specification and quantity:

				
basic frame 1pcs	heat bed parts 1pcs	beams 2pcs	plastic nuts M3 6pcs	screws RM3*16 2pcs
				
spring 6pcs	nuts M3 6pcs	screws KM3*30 6pcs	screws RM4*12 8pcs	drag chain parts 1pcs

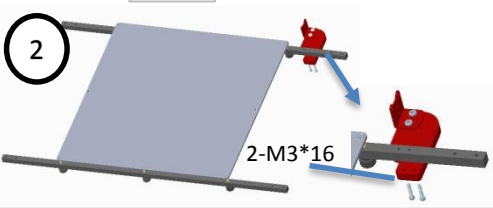
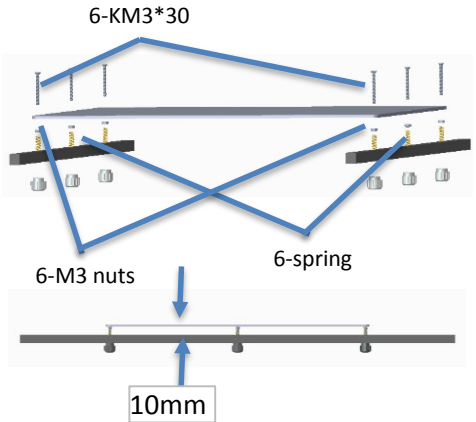
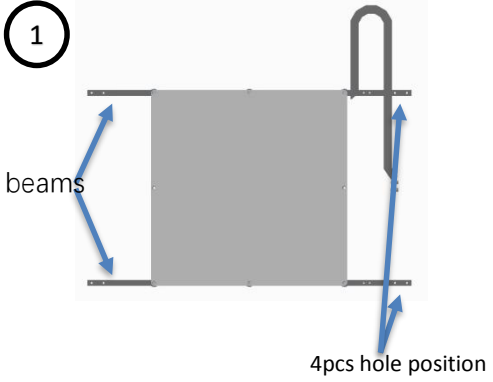


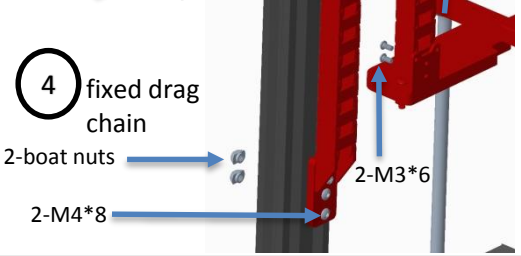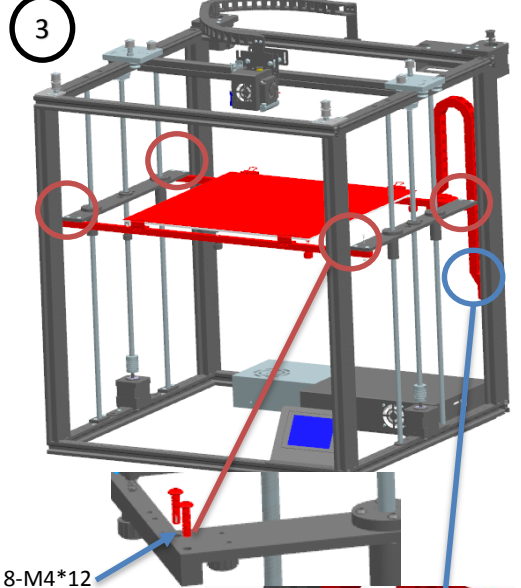


Place the left and right horizontal plates on the same plane, and lock the hot bed assembly on the horizontal plate according to Figure 3. Fix the towline bracket according to Figure 4. Adjust the hot bed to the left and right level, move up and down smoothly, then tighten the screws




# Step 11: Feeding motor assembly

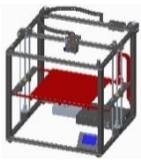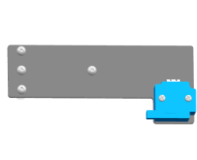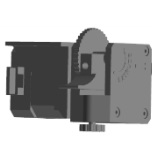Assembly material specification and quantity:

				
basic frame 1pcs	filament run out detection parts 1pcs	Titan extruder 1pcs	screw RM4*6 4pcs	boat nuts M4 2pcs
				
screw RM4*6 2pcs				

1 Assemble Titan extruder to filament runout detection parts

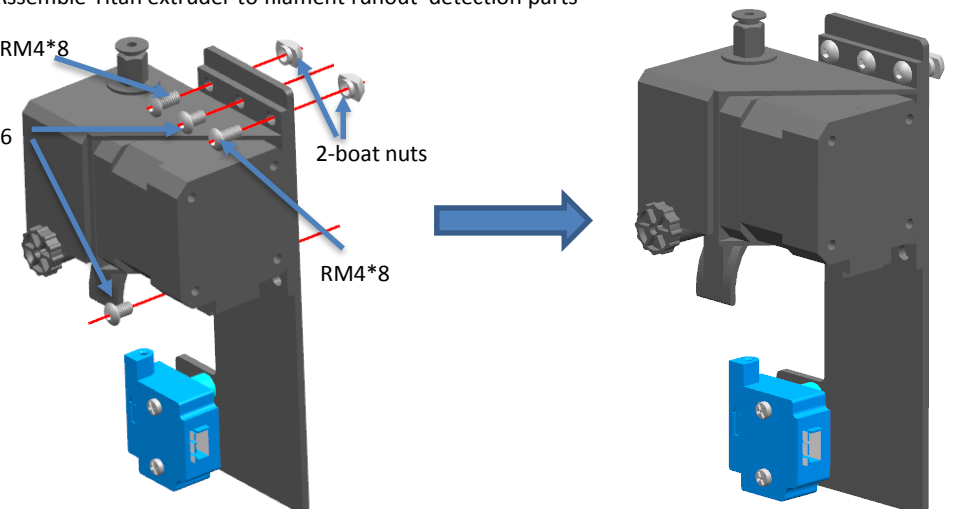

RM4\*8


2-RM4\*6

2-boat nuts

RM4\*8

As shown, lock the Titan extruder assembly to the basic frame




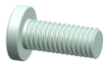


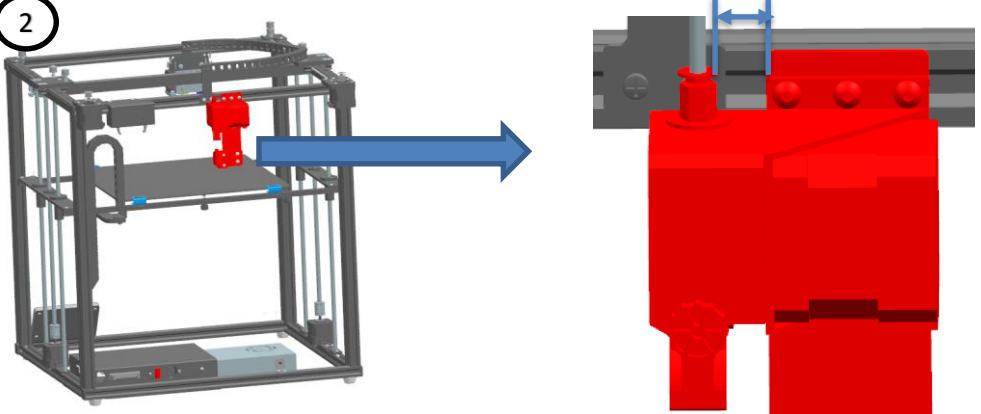2




10MM

# Step 12: Switch and filament bracket assembly

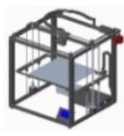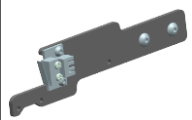Assembly material specification and quantity:

					
printer 1pcs	YZ switch parts 1pcs	bracket part 1pcs	screw RM5*12	screw RM4*6 4pcs	boat nuts M4 4pcs


Note: the feed tube of the print head is not inserted at the bottom, which may lead to blockage.

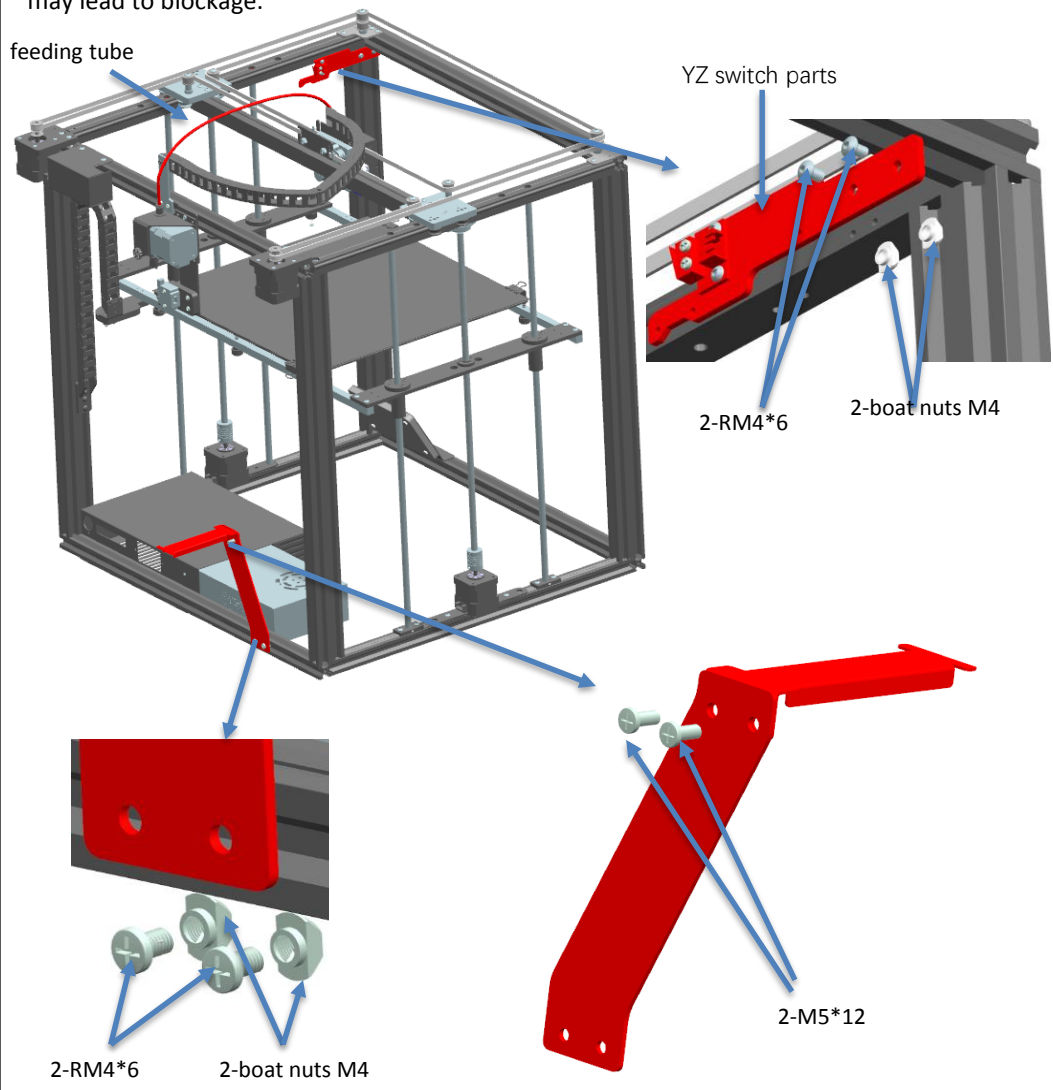


# Step 13: Black sticker and seal assembly

Assembly material specification and quantity:

				
printer 1pcs	seal	end cap 8pcs	clips	

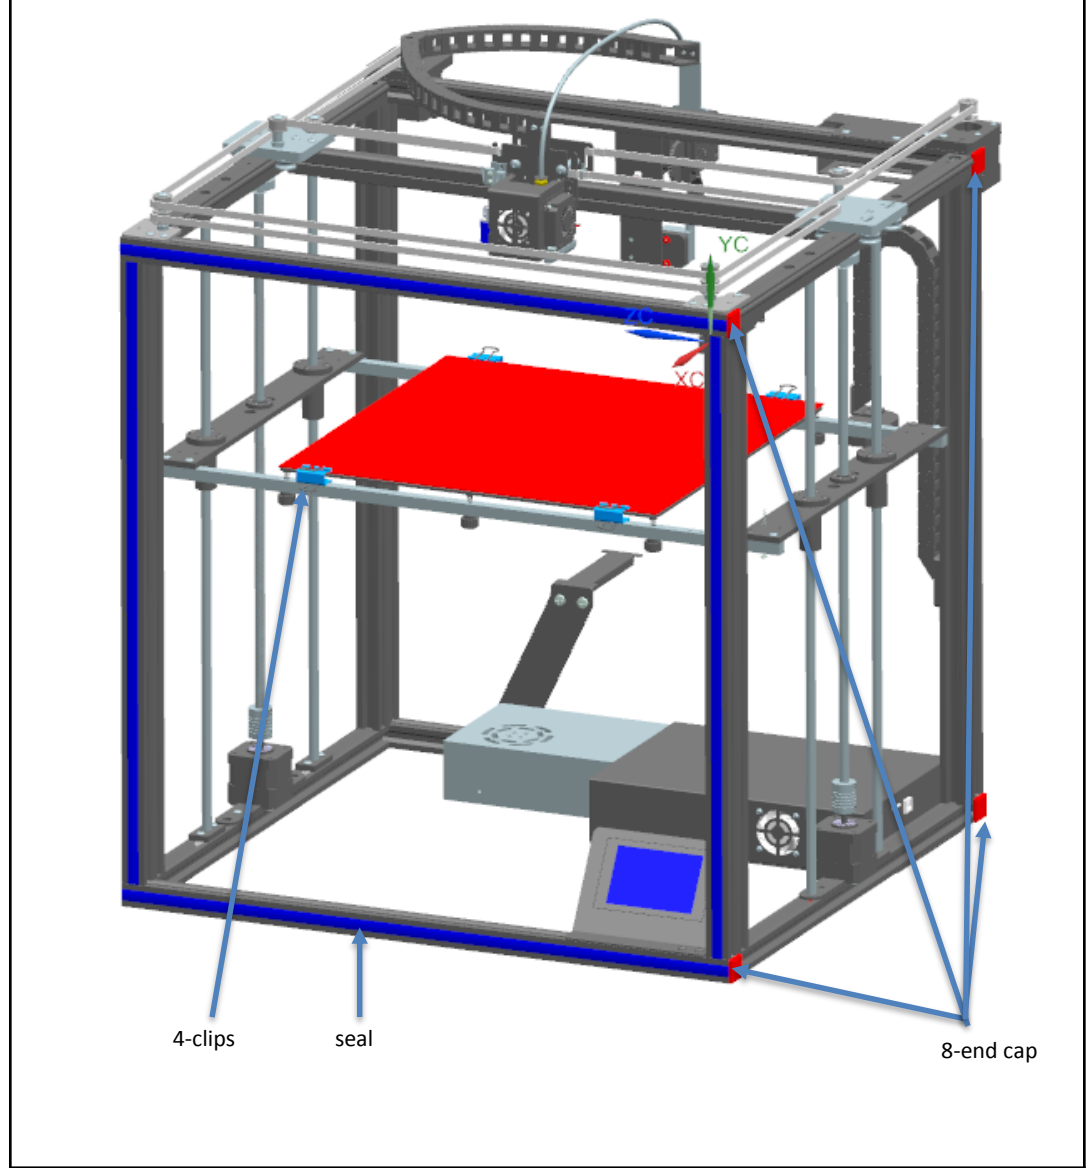

# Step 14: Wiring

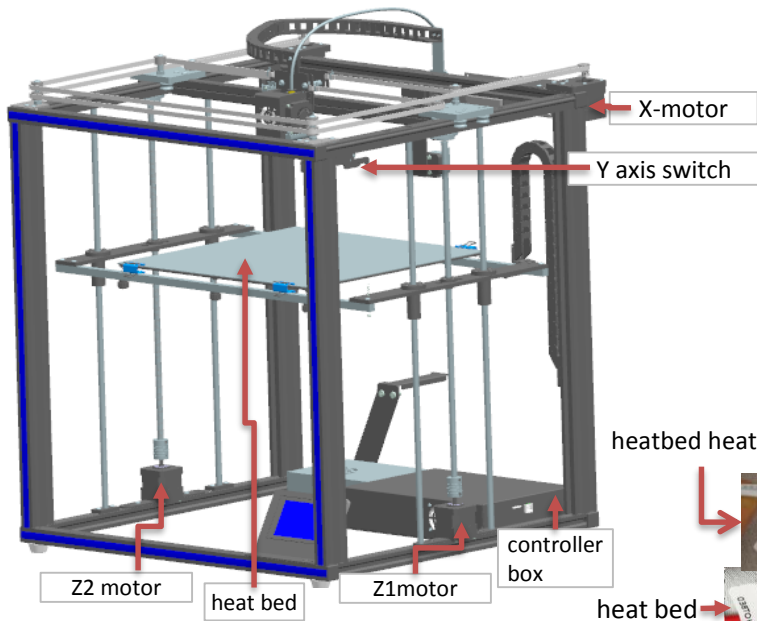


controller box



heatbed heating



heat bed

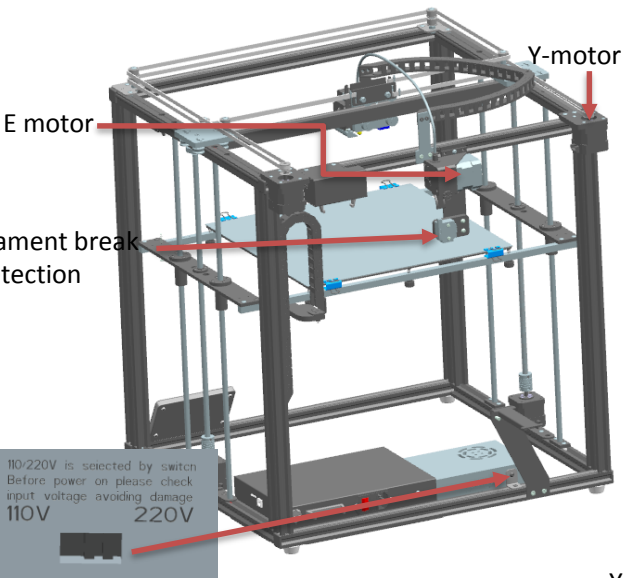

110/220V is selected by switch  
Before power on please check  
input voltage avoiding damage  
110V 220V

Z2 motor

Y motor

E motor

X motor



filament run out  
detection

Z1 motor





Y axis switch

Y axis switch

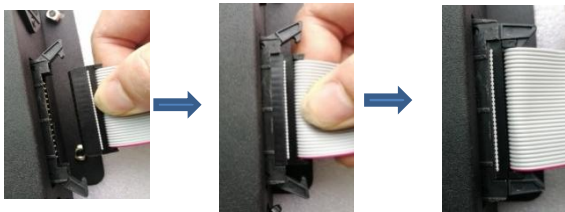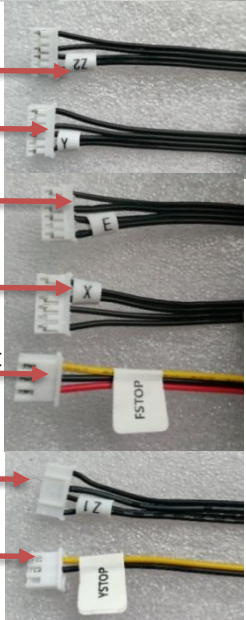

filament break  
detection

 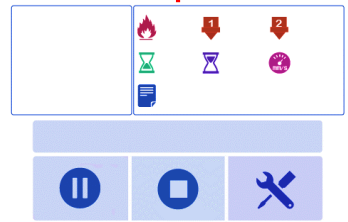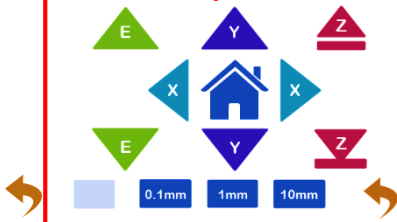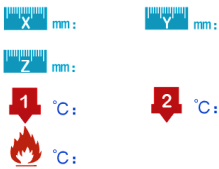

# 5. Interface operation and printing




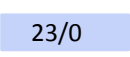






### Print test:


Click  → “Testing file” →  , start print.

If the first layer is not sticky, the nozzle is on the high side and the platform can be raised appropriately; If the nozzle has a small amount of thread, the nozzle is on the low side and the platform can be appropriately lowered.

### Unload consumables:

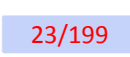Click  →  →  ←  →  →  ←  → 

After waiting for temperature up to 180 °C, consumables through the run out detection, extruder and Feed pipe until the nozzle has consumable extrusion, as shown in the figure below:

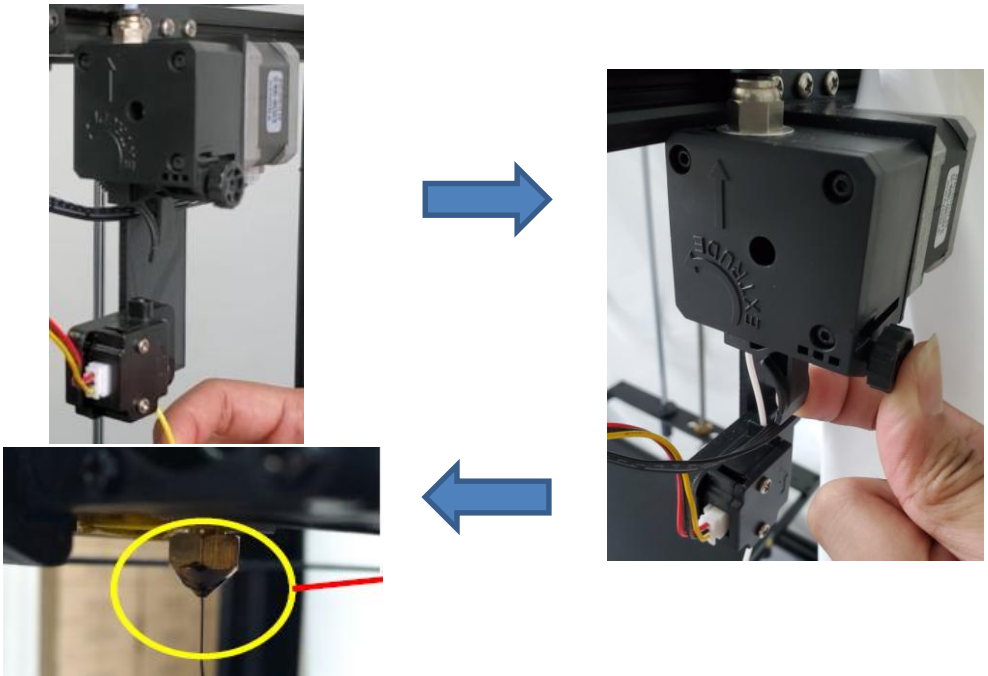






# 6.Slice software



## 1. Installation

Find out slice software in SD card “TronxyInstall.exe ” double click, Then follow these steps to complete the installation.


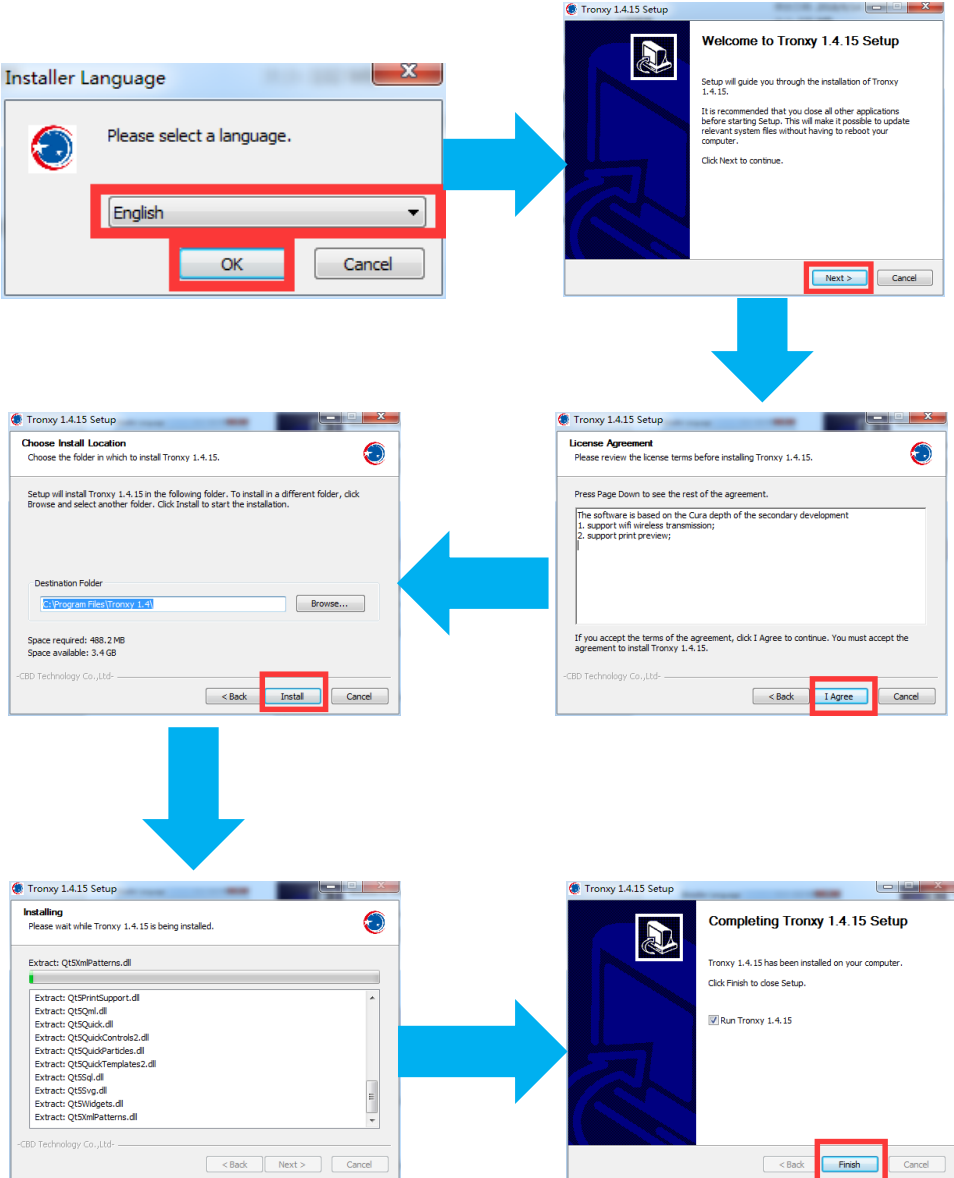


## 2. How to use slice software

① 、 Type setting: follow the steps below to complete the setting.

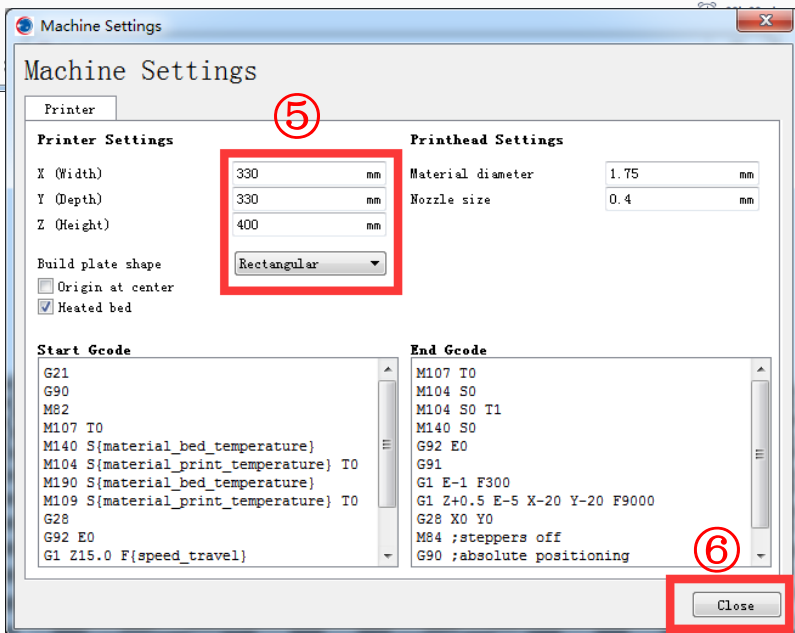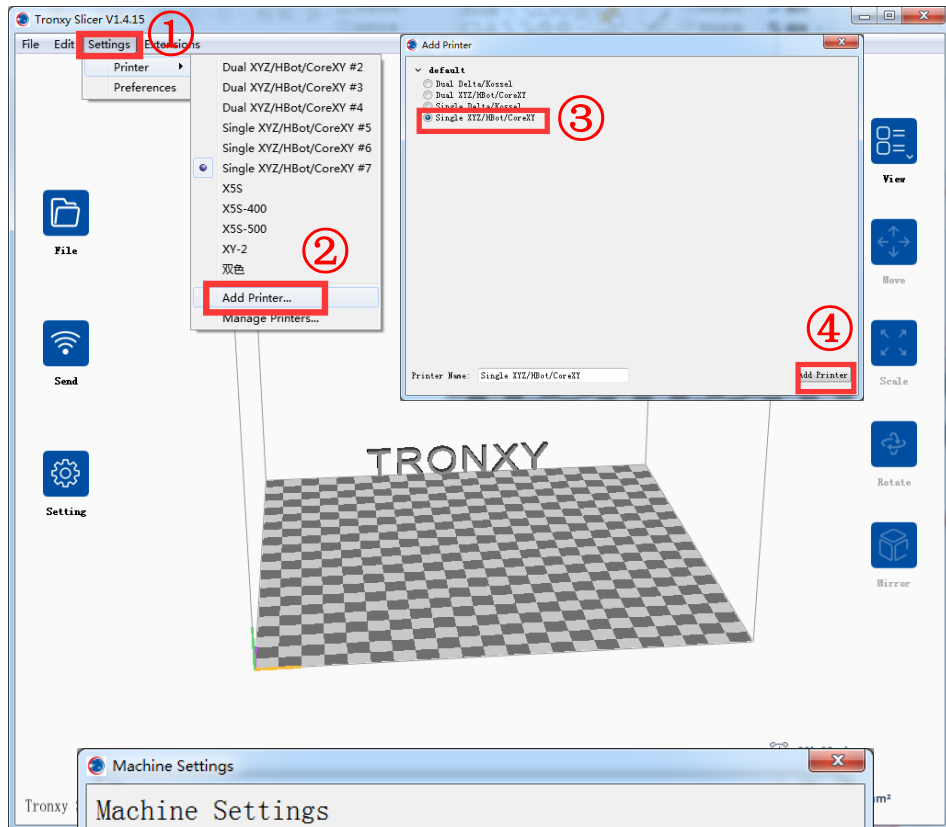

②、Parameter setting: (The following figure gives the reference value, according to their own needs can be modified)

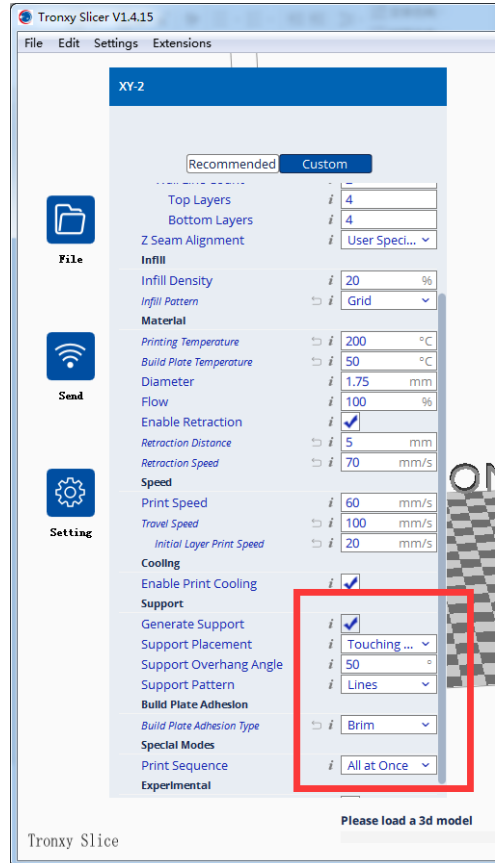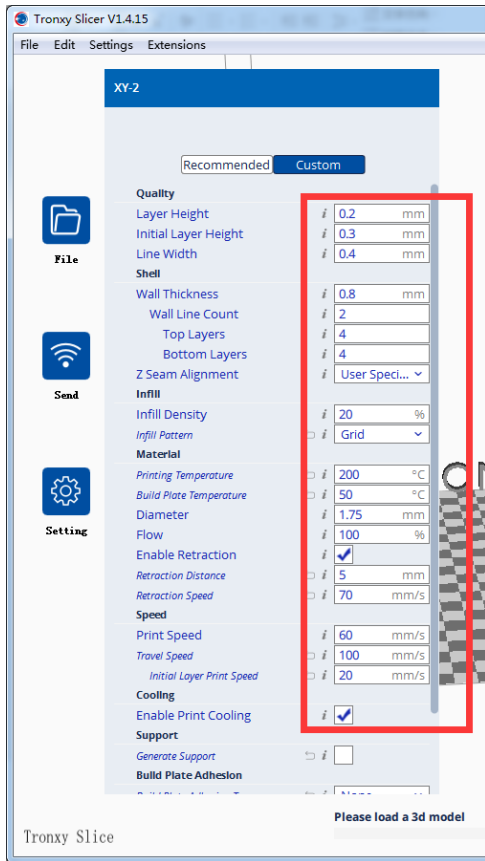

### Some parameters are set for reference:

Layer thickness : 0.1-0.3mm

Print temp : PLA - 200 °C ABS - 240 °C

Heatbed temp : PLA - 50°C ABS - 80 °C

Print speed : 20-120mm/s (suggest 60mm/s)

Support : Choose according to the model structure

Platform support: It is recommended to use the model when the bottom contact is small

## 7. Fault cause analysis

### 1. Machine cannot start ?

- 1) Check the power line and other wires connect correct or not.
- 2) Check whether the supply voltage matches the local standard.
- 3) Check whether the screen or power supply is damaged and replace in time.
- 4) Check the wires if damage or breakage.
- 5) Check whether the power fuse is burnt out.

### 2. The contents of the SD card cannot be read?

- 1) Check the card reader if damage.
- 2) If the connect computer show empty, please format the SD card and try again.
- 3) Check whether the SD card is inserted into the socket correctly.
- 4) The filename has an illegal character, please rename it.
- 5) Please replace the damaged SD card and try again.

### 3. if the print head does not produce enough material or does not produce enough material?

- 1) Check whether the print head temperature have not reached 200 °C above (PLA), led to consumable cannot squeeze, waiting for the temperature rises to the set target.
- 2) Check whether the filaments are knotted, which leads to unsmooth feeding.
- 3) Check whether the filaments or pipes are not inserted in place, resulting in the failure of feeding.
- 4) Check whether the temperature of the print head is too high, which leads to excessive softening of filaments and can't be extruded normally.
- 5) Check whether the diameter of filaments is inconsistent with the diameter set in the slicing software, so that the amount of extrusion filaments is not enough.
- 6) Check whether the consumables are blocked by dirt or nozzle blocked during extrusion.
- 7) Replace with better quality filaments.

#### **4. If the first layer upwarp ?**

- 1) Check that the hot bed has been leveled.
- 2) Check the surface of the hot bed for dirt.
- 3) Check whether the distance between the nozzle and the platform is too high, resulting in insufficient adhesive force.
- 4) Check the hot bed for adequate temperature.
- 5) Check the first layer of the slicing software to see if it is printing too fast.

#### **5. The model is not easy to take off?**

- 1) Heating the hot bed to 50-70 °C, and after cooling to try again, or use the shovel.
- 2) It is recommended to buy TRONXY magnetic stickers.

#### **6. Can't heat it up?**

- 1) Check the heating rod and thermistor for poor contact or damage.
- 2) Check that the slice software has set the target temperature.
- 3) Check whether the thermistor wire falls off.

#### **7. Motor out of step?**

- 1) Check the tightness of the belt, whether the pulley is not locked.
- 2) Check the current voltage.
- 3) Check X/Y/Z axis motion is smooth.
- 4) Print speed too fast.
- 5) Environment temp too high.
- 6) Need flash the firmware.

#### **8. Abnormal motor noise or vibration?**

- 1) Check whether the motor line is in bad contact, loose or wrong connection.
- 2) Motor temperature is too high.
- 3) Check whether the motor is damaged.
- 4) Flash the firmware.
- 5) The printing load is too heavy.

## **9. Model dislocation and fault**

- 1) Nozzle feeding not smoothly, please clean the nozzle or replace the nozzle
- 2) Check that if the printing speed is too fast
- 3) The quality of filaments is poor, please replace with new filaments

## **10. Abnormal sound and vibration of filaments feeding motor**

- 1) Please check whether the nozzle is blocked
- 2) The nozzle feeding is not smooth, please clean the nozzle
- 3) Whether the software Settings are incorrect
- 4) Check whether the motor does not work
- 5) Check the motor working or not or feeding gear is not working

## **11. Screen related questions**

- 1) No screen/blue screen, please restart or check whether the cable is plugged in
- 2) Touch screen malfunction, check whether the screws are installed too tight
- 3) Garbled/splash screen, static, ground connection or restart

## **12. Motherboard related issues**

- 1) The wiring is not responding. Please check the wiring installation
- 2) Automatic shutdown restart, may be abnormal firmware or module of “resume print after power failure” damaged
- 3) Lack of heat dissipation, please lower the ambient temperature
- 4) No response due to motherboard damage

## **13. Unable to connect to printer**

- 1) Check that the driver is not installed or properly installed
- 2) The serial port was not selected correctly
- 3) The software parameters do not match

# TRONXY

ABOUT US



[www.tronxy.com](http://www.tronxy.com)

Shenzhen China