



Sloggn Pro Tip

Townie Ski + Snow Board Rack

To ensure that your ski rack works optimally it may require a bit of a tweak prior to installation. The top of the Wing Plates needs to be level to ensure that the Ski Arms close without issue.


If you are still having issues with the Ski Arm closing, you can loosen the bolts that connect the Wing Plate to the Ski Arms. The nylon lock washers will stay in place even if there is a bit of space.

Step 1:

Determine if the top of your Wing Plate is level:


Good:

If it is good, you are set to install. No further action needed.

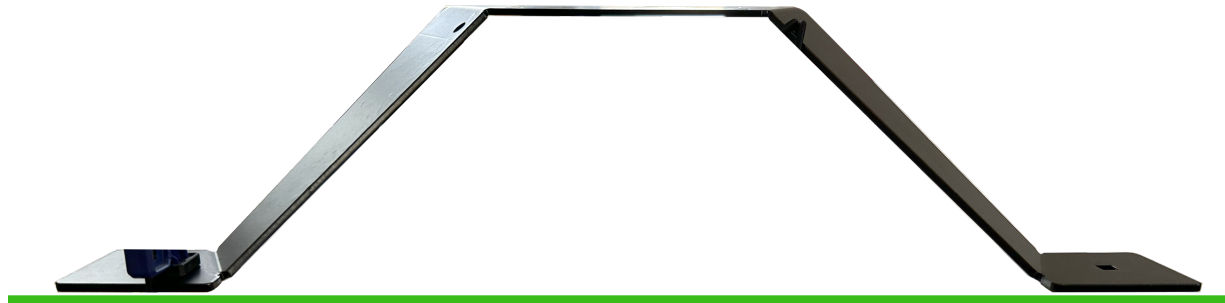

Needs a Tweak:

If your Ski Arm isn't level jump to the fix below:

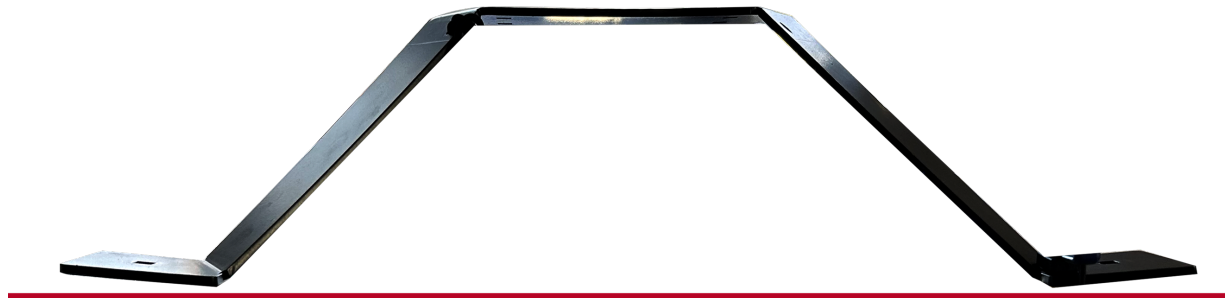



Step 2: Tweak it!

If the ends don't lay flat, you will need to tweak it a bit. Place are on carpet and push down just a little, check it and repeat if needed. You don't need to push very hard.

