

Hey Sexy!

Congratulations, you're on your way to Heavenly Orgasms with the AdultLuxe Celestia G-Spot and Rabbit Vibrator. Here's your quick guide to operating the Celestia.

Before Using:

- 1). Please ensure that the Celestia is fully charged for about 3 hours before use.
- 2). Ensure that you wash/disinfect with antibacterial soap and warm water.
- 3). Only use a water-based lubricant. Massage oils, hand creams and other forms of lubricants should never be used.

How To Use:

1). Insert the 2.0 DC plug into the charging port. The indicator will start flashing when charging and will stop when charging has finished. Please use the 5V/500mA USB power adaptor or connect via the Computer USB Port to charge (DO NOT USE WHILE CHARGING).

2). On, Off Adjusting Speed and Heating

To Power on: Hold the **On/Off button (1)** for 3s. The indicator lamp will blink one time and enter the standby mode. Press the button one more time to start the vibration.

To Power down:

Hold the On/Off button **(1)** for 3s until the indicator lamp blinks once and then powers off. The motors and heat function will turn off together.

Adjusting speed:

On every press of the On/Off button **(1)**, the vibrating speed will circulate from 1-2-3-4-5-0-1-2-3-4-5. You can choose from any one of these functions.

Heating On/Off:

On: Press the **Heating button (2)** to start the heating. Heating On mode will be indicated by a Red light.

Off: Press the button once again to stop the heating.

Adjusting the pulse vibration patterns:

Vibration modes will change after every press on the **Vibration button (3)**. You can choose from 10 different vibrations.



Specifications:

Material: Silicone and ABS
 Vibration Modes: 5 Speed Adjust, 10 Frequency Pulse
 Heating Temp: 38°C (100.4°F)
 Noise Range: ≤45dB
 Waterproof Grade: IPX-4
 Battery Type: Enclosed Lithium
 Charging Time: 3 Hours
 Working Duration: 1 Hour
 Standby Time: 3 Months
 Input Voltage: 5V=500mA

Cleaning & After Care

- 1). After use, your Celestia should be cleaned with warm water & antibacterial soap.
- 2). Please ensure that you dry the massager with a soft clean towel and store it within the pouch provided. Keep in a dust-free environment.
- 3). Avoid keeping the Celestia in direct sunlight.

Safety Recommendations

- 1). Try not to exceed the recharge period beyond 24 hours.
- 2). Avoid sharing the Celestia with others.
- 3). To avoid causing injury and damage, please ensure you use a water-based lubricant.
- 4). Stop using the Celestia if you find it in any way uncomfortable.
- 5). Ensure that you store your Celestia out of reach of children and pets.

Warranty

Your Celestia has a 1-Year warranty from the date of purchase against any manufacturing defects or malfunctions.

All man-made damages, including regular wear and tear damages, are beyond the scope of this warranty. Because of the special nature of adult products, items once used and opened cannot be returned. Please check carefully before use.

