

WORX RACING SEADOO AIR FILTER

PART # - WR04054

MODELS: Yamaha EX

INSTALLATION INSTRUCTIONS


- 1 x WR04043 4-inch throttle body adapter
- 1 x WR04054 Mounting Bracket
- 1 x WR04020-5 Air Filter 4 inch
- 1 x WR04020-6 Air Filter 1 inch with hose clamp
- 1 x 4-inch hose clamps
- 1 x Bolt kit

IMPORTANT: READ ALL INSTRUCTIONS BEFORE PROCEEDING WITH INSTALLATION


- 1- Make sure ski is secure and on a flat surface. Remove lanyard and disconnect battery.
- 2- Remove seat, rear plastic seat mount bracket and side plastics
- 3- Disconnect fuse box, ECU and angle sensor remove from air filter housing
- 4- Disconnect breather filter from air filter hose then disconnect air filter hose from throttle body
- 5- Remove OEM air filter box from ski.
- 6- Fit fuse box, ECU and angle sensor to the WR04054 mounting bracket that's supplied
- 7- Install WR04054 mounting bracket to ski and reconnect fuse box, ECU and angle sensor
- 8- Install throttle body adapter (WR04043) and air filter element
- 9- Install the breather filter (WR04020-6) to the breather hose. Mount Breather high in the engine bay, do not twist or restrict this hose.
- 10- Install seat base and reconnect battery.

<u>Maintenance</u>. Keep the airfilter hose and element free of lubricants and excessive water. Check clamps and deterioration of hose over time before using your Watercraft.

Thank you for purchasing **Worx Racing components** products. We firmly believe that **Worx Racing Components** products are among the finest watercraft parts available. A great deal of time and effort has gone into the design and development of this product to ensure that it will perform to the highest standard and that installation is a relatively straight forward and simple procedure. If you have any questions or comments on the performance and/or installation of our products, please contact us at the numbers listed on page one or through your local **Worx** dealer.

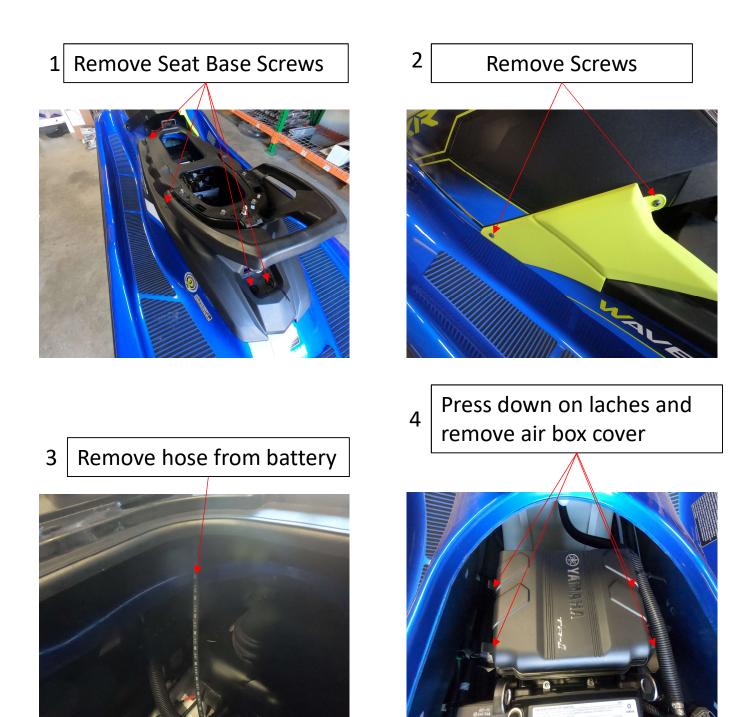

Disconnect fuse box, ECU and angle sensor remove from air filter housing

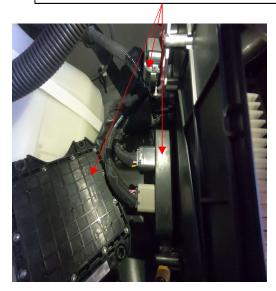


Remove OEM air filter box from ski.




Unscrew this 2 bolts on both sides

6 Disconnect breather filter from air filter hose then disconnect air filter hose from throttle body

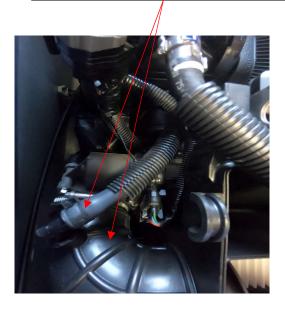

Fit fuse box, ECU and angle sensor to the
WR04054 mounting bracket that's supplied

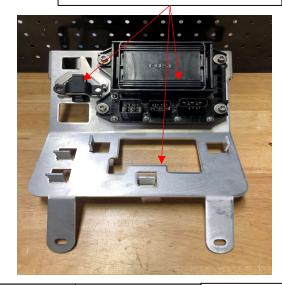

Fuse Box Holder 4 x M6 x 30 cap 4 x M6 washer 4 x spacer 4 x ¼ x ¾ washer Bracket mount 4 x M8 x 20 cap 4 x M8 spring washer 4 x M8 washer Angle sensor 2 x M6 x 16 cap 2 x M6 washer 2 x M6 nut

5

7

Install WR04054
mounting bracket to
ski and reconnect fuse
box, ECU and angle
sensor



Install the breather filter (WR04020-6) to the breather hose. Mount Breather high in the engine bay, do not twist or restrict this hose.

11



10 Install throttle body adapter (WR04043) and air filter element



12 Install seat base and reconnect battery

