



Placement and Maintenance

Your Nord Dining Table is designed for indoor use on level floors. Furniture with hard lacquer, wax polish or painted surface should be dusted with a dry cloth. Spillages should be wiped up as soon as possible. Our furniture will endure most temperatures in the home but it is best to avoid placing furniture next to heat sources such as radiators or fires.

Step 1


C1 Top Panel x 2

C3 Bottom Rail x 2


Unpack and identify the parts listed below. It is required to have **2 people to carry and assemble** the units over 50lbs. The assembly workspace should be a non-marring **surface such as carpet**. For missing hardware pieces, visit our website www.mossdesign.us

C4 Cross Rail x 2

C2 Leg Frame x 2

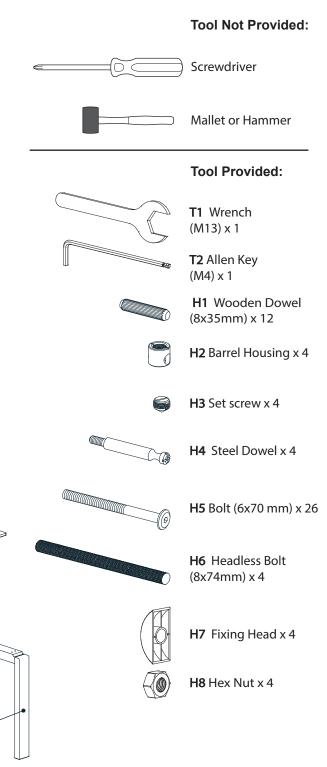


Step 2 -Attach wooden dowels to cross rails.

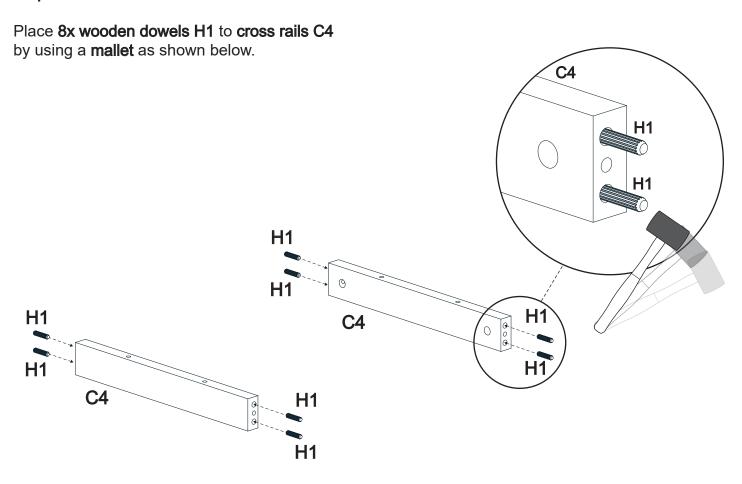


Step 3 - Attach steel dowels to bottom rails C3.

Fix 4x steel dowels H4 by using a screwdriver to bottom rails C3 as shown below.

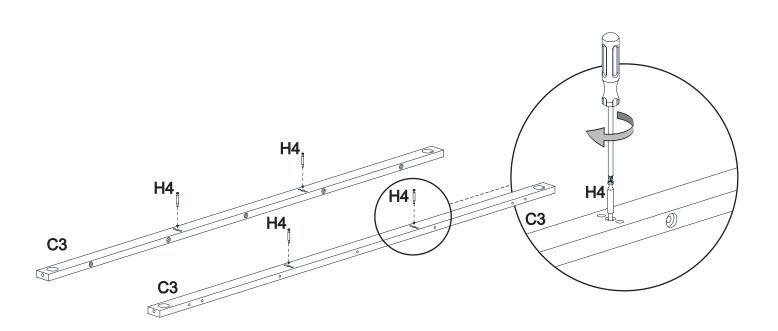


Step 4 - Attach barrel housings to bottom rails.

Place 4x barrel housings H2 and 4x set screws H3 to bottom rails C3 as shown below.

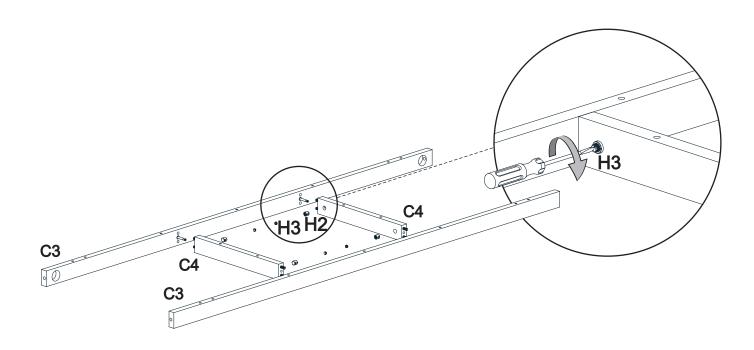


Step 5 - Attach wooden dowels to bottom frame.

Place 4x wooden dowels H1 to bottom frame by using a mallet as shown below.

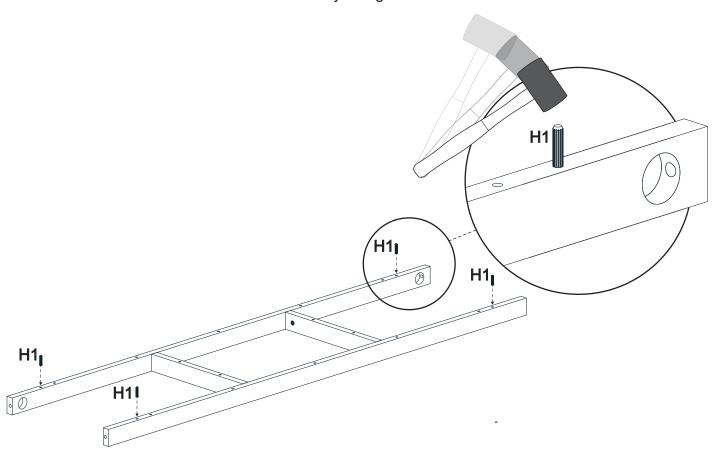


Step 6 - Attach headless bolts to leg frames.

Fix 4 headless bolts H6 to the leg frames C2 by hand.

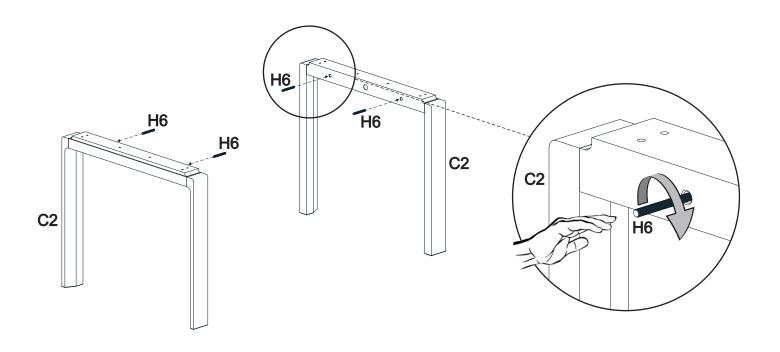

Step 7 - Attach legs to the bottom frame

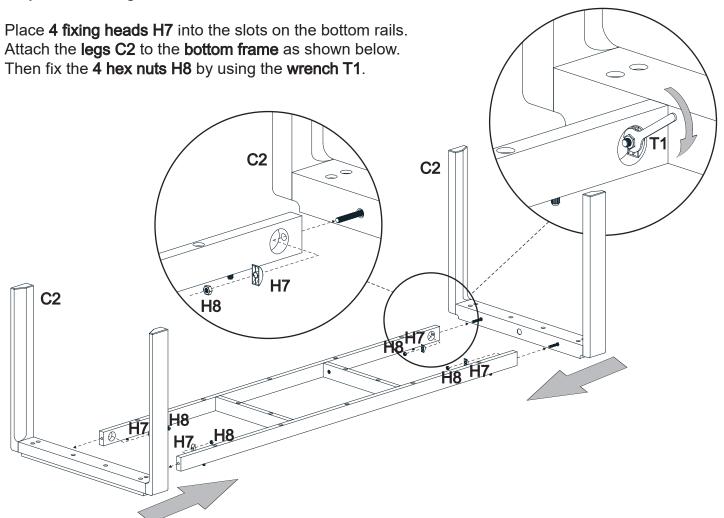

Step 8 - Fix the bottom frame and legs by using bolts.

