



**Cuddly Bird User Instructions
and Warranty Information**

Product specifications

Material: Silicone+ABS

Number of Motors: 2

Size: product: 78*55*56 mm charging base: 112*78 mm

Weight: net weight: 133g gross weight: 247g

Battery: 500 mAh

Recharge: Charge this product through the Type-C connector for 2,5 hours; during charging, the base light will flash, and will become extinguished when fully charged.

Operating time: This product can run for more than 2.5 hours at maximum in Sucking Mode. This product can operate for more than 80 minutes at maximum in Vibration Mode.

Waterproof grade: IPX6, Washable, not recommended to soak it.

 
Packaging list



Cuddly Bird



Lamp Charger



Portable Bag



Instructions





Charging Cable

Note: This product has no charger. Please charge the product with a smartphone charger for everyday use.

Button instructions



Keep pressing the button  for 3 seconds to start the Sucking Mode, and intermittently press the button to switch between three levels (Light, Intermediate and Intense)

Keep pressing the button  for 3 seconds to start the Vibration Mode, and intermittently press the button to switch between three levels (Light, Intermediate and Intense) and 1 frequency conversion

Keep pressing the same button: on/off

Keep pressing different buttons: switch between Vibration/Sucking Modes

 
Low battery indicator: when the remaining power can only maintain the appliance running for 40 minutes, the red light will flash for 2-3 times, representing 20% of the full power.

Power shortage status: when this product turns off, the red light will flash for 6 seconds


Keep pressing the button twice: start the travel lock to avoid uncomfortable situations when this product starts by accidentally pressing the button. Keep pressing the button twice to unlock it for normal use.

Cuddly Bird User Instructions

Vibration Mode - Move the product on your body, including your ears, back, neck, chelidons, back and waist, inner thighs, pudendum and other sensitive parts of your body, enjoying slowly.

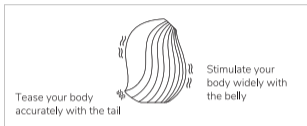

 
Sucking Mode - Apply a lubricant to the clitoris, and make the mouth of the appliance fit properly into it, starting with a low vibration level, so you can enjoy a pleasant sensation gradually.

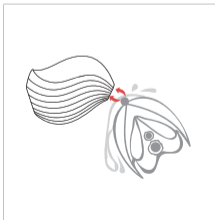


Warning prompt:

When the mouth does not fully fit the skin, there will be a layer of air trapped in and out, producing a bubble-like sound. This is perfectly normal, and the pleasure obtained will not be intense.

 When the mouth fits perfectly with the sensitive part, the bubbly sound will be replaced by a stable hum, then you will be able to enjoy the pleasure of oblivion!




 More Exploration - This product can be used in other sensitive parts, allowing you to enjoy the highly realistic tender tease.

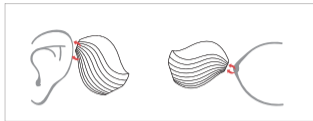

* Wash it with clean water after use, then place it in its storage box with the base or inside a storage bag.

 Night Lamp Instructions

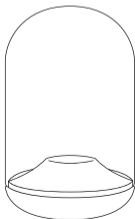

- When this product is plugged in, if you remove Cuddly Bird from the base, the base light will light up shining and becoming a night lamp, allowing you to create a romantic atmosphere for your pleasure time or be used in daily life.
- When this product is plugged in, please put Cuddly Bird in the base in order to charge it.
- During charging, the night lamp will alternatively show a state of breathing, shining and dimming.
- When Cuddly Bird is fully charged, the night lamp will turn off, and will not disturb or consume energy. (The night lamp has no battery, so it needs to be plugged in for use)

Maintenance

- Clean the Cuddly Bird before and after use, Try to keep it clean after each wiping.
- Please do not use the Cuddly Bird in environments with a high temperature, humid environments, with salt water or sea water, in order to avoid malfunctions.
- Please do not soak or boil the appliance for a long time.
- In order to avoid malfunctions, please do not immerse it under a column of water above 30cm deep, as the waterproof design of the appliance is made to operate at a gentle wash level.
- Please do not use the Cuddly Bird in a state of physical discomfort, such as fatigue or after drinking alcoholic beverages.
- Please do not drop or hit it hard, to avoid electric shock, short circuits or malfunctions.
- Please do not clean the Cuddly Bird with organic solvents, degreasing oil, alcohol, hot water, etc., as these may cause the product to deform or discolour.
- If you do not feel well after using the Cuddly Bird, please stop using it immediately and seek medical advice as soon as possible.
- If you encounter a malfunction in the appliance or experience an abnormal reaction, please stop using it immediately and cut off the power supply in order to avoid accidents.
- The appliance is only suitable for use by adults over 18 years of age, To prevent the spread of disease, please do not share it with others.
- Please do not use it with silicone lubricants, It is recommended that you use it with water-based lubricants.

Precautions

- Please do not disassemble, repair or modify the product yourself, as it may cause damage to the appliance, water leaks, fire and other abnormal reactions that may result in personal injury.
- Consult a doctor before using this appliance, if you use an electronic medical device such as an artificial pacemaker, you are a pregnant woman or belong to any group of people who are suffering from any other type of disease being treated by a doctor.
- Keep it out of the reach of children, in order to prevent them from swallowing their accessories or dismantling their parts, as they can cause an accident.

1 Year Warranty

- The warranty period for the OSUGA product is one year after purchase. Any quality issues caused by the manufacturing of the product or defect in its materials are covered by the warranty.
- The scope of the warranty covers mainly damage due to the quality of the product itself, but does not cover wear and tear due to long-term use or wear and tear due to malfunction, negligence or accident.
- Please do not attempt to open or disassemble OSUGA product, or else you will not be able to enjoy a free repair service.
- If you have such quality issues and inform OSUGA during the warranty period, OSUGA will replace the appliance for free.
- Any claim for quality assurance must be provided with reasonable evidence that the product is still within the warranty period. Please meet the specifications and keep the purchase certificate properly.

Disposal and Recycling

Disposal of waste from electronic equipment (applicable to the EU and other European countries subject to waste separation and disposal systems)

The trash can icon marked with a fork indicates that the product should not be treated as household waste and it should be sent to the appropriate electrical and electronic recycling facility for disposal.



Disclaimer :

The user use this product at his own risk. OSUGA and its retailers assume no legal responsibility or liability caused by injury or non-physical damage caused directly or indirectly by the use of this product. OSUGA reserves the right to modify the content of this manual, any changes will be made without prior notice.

After-sales card

This card must be used to make an exchange. If you need to change your appliance, please send an email to our after-sales service with the necessary information so that we can deal with your problem more efficiently after the sale.

Guarantee period : 1 year

Special announcement :

Our brand firmly safeguard the rights and interests of consumers. If for any reason our product has quality problems, we will actively take care of solving them.

However, adult supplies belong to the intimate and private product group, and in order to ensure that each customer can purchase new products, we do not accept the exchange without quality problems after the plastic packing of the box is open.

Customer Service: support@osuga.com

Date of sale		Purchase method	
Order number			
Reason for exchange			
Consignee name			
TeL			
Delivery address			