

# Manual of Moonflow



## Specifications

<b>Material</b>	Main body   silica gel+PC+zinc alloy	Charger bracket   PC+aluminium alloy
<b>Hardware</b>	Motor*1	
<b>Size</b>	Main body  175.5*43.7*28mm	Charger bracket   193.5*46.5*46.5mm
<b>Weight</b>	165.5g (main body78g+charger bracket87.5g)	
<b>Battery</b>	200mAh	
<b>Recharge</b>	Type-C Connected to charger bracket, PIN magnetic charger, 1.5 hours to 100%	
<b>Usage time</b>	The vibration mode can run for more than 60 mins at full speed.	
<b>Waterproof</b>	Main body   IPX6, Washable, not recommended to soak it. Charger bracket   Not waterproof: please clean it with soft cloth.	

## Packing list



Moonflow



Charger bracket



Storage bag





Manual



Type-C charging cable

Tip: The product package does not contain charger. Please use regular intelligent charger.

## Description

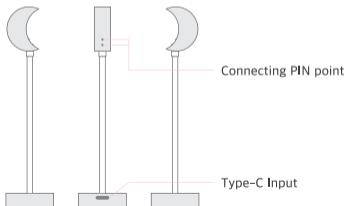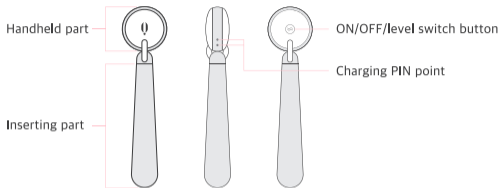

## Quickstart guide

Simple One-button Operation 

### ON / OFF

Press the button for two seconds to turn it on/off. Without light flashing, you can start the level 1 vibration mode.

### Switch the level

Click the button to switch among eight vibration modes.

Level 1/2/3 are three strong vibration modes; level 4/5/6/7/8 are five levels of variable-frequency vibration modes.

### [Press for orgasm]

Double click the button to get into the mode of [press for orgasm]; double click again to exit the mode and return to the previous vibration mode.

When in any level, one can double click to enter the mode of [press for orgasm]; before exiting the mode of [press for orgasm], single click will not switch the level.

### About travel lock


Clicking the button three times can turn on the travel lock; at the same time, the red light will flash for three times, the device will be locked, indicating that it is not being used.

Clicking the button again three times can shut down the travel lock; at the same time, the white light will flash for three times, the device will be unlocked, indicating that it is being used.

## Tips

- The travel lock can only take effect when it is turned off. When it is turned on, the travel lock will not be activated by clicking the button three times:
- After the travel lock is activated, don't worry about embarrassment caused by accidentally turning on the Moonflow, you can enjoy the journey freely:
- When the battery is lower than 20% , the red light will continue to flash as a reminder, and the product can still be used for 10-15 minutes.

## Charging instructions

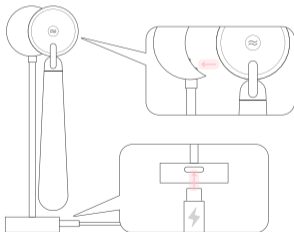

- Connect the charging bracket to Type-C charging cable and plug it in.
- Align the charging PIN point of the moonflow with the charging slot of the bracket, when it is connected to the magnets on both sides, the Moonflow will be hung. At this time, the red light stays on, indicating that it is being charged.
- After the charging is completed (about 1.5 hours), the red light is off and the white light stays on, indicating that the battery is fully charged and the power supply is automatically cut off.

### Tips

- The charging bracket is only used as a charging tool and does not have the function of storing power:
- The product is PIN magnetic charging, please make sure that the main body is connected with the PIN point of the bracket when charging;
- The red light staying on indicates the charger is working properly .Incorrect contact position will lead to the charging failure.


## Recommended usage of the Moonflow

### 1. Inserting experience

A. Cover the Moonflow with enough lubricant to make it easier to enter the vagina for use. The plump rod-shaped shape fits the vaginal wall while entering the vagina. It can stimulate and tease the vagina through different inserting depths and vibration frequencies to obtain

different pleasure experiences.


B. Double click to enter the mode of [ Press for orgasm ],release both hands at the same time, clamp the moon drop with your legs tightly, immerse yourself in the most violent stimulus, and release your hands to do other things you want to do.

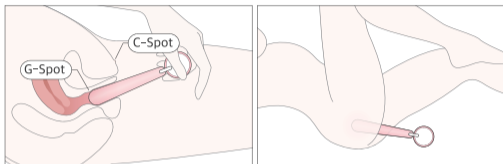

## 2. Body-touch experience


A. Cover the Moonflow with enough lubricant, press the button for long to turn on the main body, tune to the proper level and move it along the sensitive body parts, e.g., behind the ear, neck, elbow under, chest, bottom and inside of the leg. It will bring you the most lusting experience that makes you wet and numb.

B. When the Moonflow moves along or stays on different sensitive parts, please switch to different vibration frequencies so that the sensitive parts have different experience. In this way, the lusting process becomes more interesting and diverse.

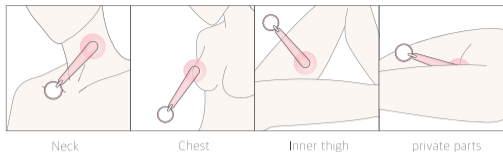

### 3. “C-spot” stimulating experience

 
Cover the Moonflow with enough lubricant: Turn on the vibration mode and fit it to the C-spot area of the clitoris to awaken the C-spot. At the same time, by switching among different vibration frequencies, you can deeply experience the greatest excitement and pleasure brought by different modes.

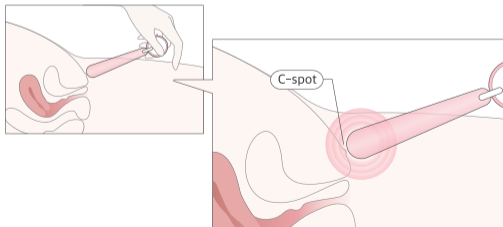



#### 4. "G-spot" surprise experience

Hold the hand-held part and quickly pry the Moonflow up and down to add pressure the G-spot in the vagina, which can effectively stimulate the G-spot and obtain different pleasure.

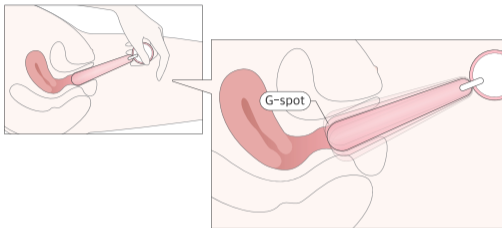

#### Tips



There are **only** two metal rings connected between the handheld area and the inserting area of the Moonflow, and they are in a fixed state.

Please don't twist it at will, so as not to affect the experience.

The maximum vertical bearing weight of the Moonflow is 5kg; the maximum vertical bearing weight of the charging bracket is 10kg.

Please keep it carefully to avoid bending.

## Attention

Please clean the Moonflow before use. After use, please clean, dry and keep it well.

Do not use sharp objects (such as nails, especially manicured nails) to clean the body.

Do not use it in environments with a high temperature, humid environments, salt water or sea water to avoid malfunctions.

Do not soak or boil it in the water for a long time.

With waterproof design, it can still operate normally in weak water washing, but do not use it with strong water column or immerse it under a column of water above 30cm deep to avoid product failure.

Do not use it when you are tired, drunk or unwell.

Do not drop or hit it hard, to avoid short circuits or malfunctions.

Do not clean it with organic solvents, degreasing oil, alcohol, hot water, etc., as these may cause the product to deform or discolour.

If you do not feel well after using, please stop using it immediately and seek medical advice as soon as possible.

If you encounter a malfunction in the product or experience an abnormal reaction, please stop using it immediately and cut off the power supply in order to avoid accidents.

The product is only suitable for use by adults over 18 years of age. To prevent the spread of disease, please do not share it with others.

## Warning

Please do not disassemble, repair or modify the product yourself, as it may cause damage to the appliance, water leaks, fire and other abnormal reactions that may result in personal injury.

Consult a doctor before using this appliance, if you use an electronic medical device such as an artificial pacemaker, you are a pregnant woman or belong to any group of people who are suffering from any other type of disease being treated by a doctor.

Keep it out of the reach of children, in order to prevent them from swallowing their accessories or dismantling their parts, as they can cause an accident.

## 1 Year Warranty

The warranty period for the OSUGA product is one year after purchase. Any quality issues caused by the manufacturing of the product or defect in its materials are covered by the warranty.

The scope of the warranty covers mainly damage due to the quality of the product itself, but does not cover wear and tear due to long-term use or wear and tear due to malfunction, negligence or accident.

Please do not attempt to open or disassemble OSUGA product, or else you will not be able to enjoy a free repair service.

If you have such quality issues and inform OSUGA during the warranty period, OSUGA will replace the appliance for free. Any claim for quality assurance must be provided with reasonable evidence that the product is still within the warranty period. Please meet the specifications and keep the purchase certificate properly.

## Disposal and Recycling

**Disposal of waste from electronic equipment (applicable to the EU and other European countries subject to waste separation and disposal systems)**

The trash can icon marked with a fork indicates that the product should not be treated as household waste and it should be sent to the appropriate electrical and electronic recycling facility for disposal.



### Disclaimer :

This product is an electronic product, there may be risks if you used improperly. In the process of use, please refer to the instructions of the product or consult OSUGA customer service if you have any questions. And if you don't use of the products according to the instructions in the product instructions which will lead to any direct or indirect bodily or non-bodily injury or damage caused. OSUGA and its retailers will not bear any legal liability or obligation for it. OSUGA reserves the right to modify this instruction manual.

# After-sales card

This card must be used to make an exchange. If you need to change your appliance, please send an email to our after-sales service with the necessary information so that we can deal with your problem more efficiently after the sale.

Guarantee period : 1 year

## Special announcement :

Our brand firmly safeguard the rights and interests of consumers. If for any reason our product has quality problems, we will actively take care of solving them. However, adult supplies belong to the intimate and private product group, and in order to ensure that each customer can purchase new products, we do not accept the exchange without quality problems after the plastic packing of the box is open.

Customer Service: [support@osuga.com](mailto:support@osuga.com)

---

Date of sale		Purchase method	
Order number			
Reason for exchange			
Consignee name			
Tel.			
Delivery address			