



NEXTALK N710

Conference Speakerphone



User Manual

(Model: AIMIC-M4)

Please read and keep this instruction carefully before using the product

 
Product Instruction

NEXTALK Conference Speakerphone is a smart conference microphone speaker designed for office people, pickup, amplification, recording and subtitles. It can realize 360° sound pickup, intelligent noise reduction, recording and transfer writing and other functions. It solves the pain points of meetings, such as inaudible remote call, noisy environment, and difficult to organize meeting minutes, so that users can enjoy a clear, stable and smooth remote call experience anytime and anywhere.


Applicable scene: teleconference, online learning, media interviews, business negotiation, etc.

Product Instruction


List of accessories

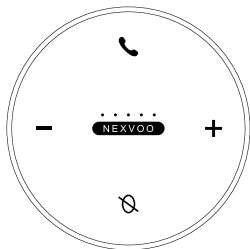

NexTalk N710

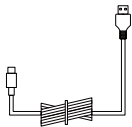 


USB Cable

 


User Manual

Product Instruction

 Buttons and lights instruction

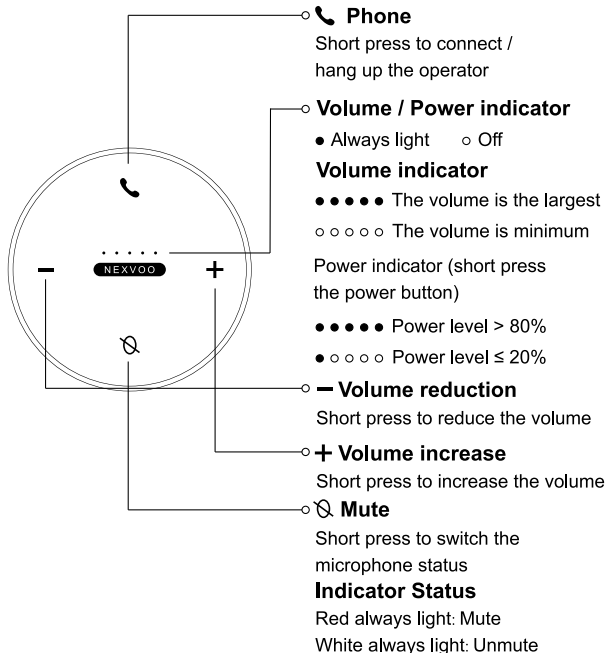

Product Instruction

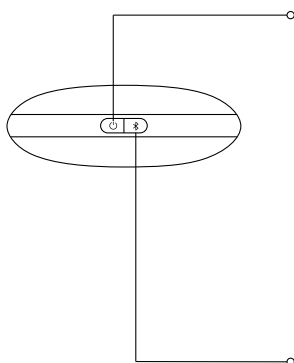 

Power

Long press for 3 seconds to turn on or off

Indicator status

Red breathing light: Power level is less than 10%

White breathing light: In the boot charging

White always light: Boot charge full or shutdown charging

* When the indicator is off, the charge is full.

Bluetooth

Long press for 2 seconds to enter the pairing mode

Short press to disconnect the Bluetooth connection

Indicator status

Blue flashing: Bluetooth pairing

Blue always light: The Bluetooth was paired successfully

Instructions for use

1. Connection

The initial Bluetooth name of the device is "**AIMIC-M4 * * * ***" (that is, the last four serial at the bottom of the product).

* **Bluetooth connection**

(1) Mobile Bluetooth connection

After the device is turned on, long press the (Bluetooth icon) Bluetooth button for 2 seconds. After the Bluetooth indicator flashes, turn on the Bluetooth function of the mobile phone and search the Bluetooth device "**AIMIC-M4 * * * ***" for matching connection; Or turn on the NFC function of the mobile phone at the same time, and touch the NFC logo area of the device for Bluetooth connection. The Bluetooth indicator light is always on, so that the connection is successful.

(2) Computer Bluetooth connection

After the device is turned on, long press the (Bluetooth icon) Bluetooth button for 2 seconds. After the Bluetooth indicator flashes, open the Bluetooth monitoring setting page of the computer system and select the device for matching connection.

The Bluetooth indicator light is always on, so that the connection is successful.

Instructions for use

* USB connection

After the device is turned on, connect the device to the computer via USB cable. After hearing the prompt sound, the connection is successful.

NOTE: The current version does not support OTG cable directly connected mobile phone.

2. Charging instructions

- (1) When the USB data cable is used to connect the computer, the device will enter the charging state no matter it is turned on or not.
- (2) If consumers use a power adapter for power supply, they should buy a matching power adapter that can obtain CE certification and meet the standard requirements.

NOTE: Before first using the device, it is recommended to charge for 1 hour to ensure sufficient power.

Basic parameters

Product name	NEXTALK Conference Speakerphone
Model	AIMIC-M4
Size	112.5mm*112.5mm*35.4mm
Bluetooth	Bluetooth v5.1
Pickup radius	4m
Microphone	Four omnidirectional simulated MEMS
Speaker	5w
Battery capacity	2000mAh
Charge	5V $\overline{=}$ 2A Type-C interface

FAQ

Description	Handling advice
The volume is not synchronized when the phone is connected with Bluetooth	<ol style="list-style-type: none">1. Verify that the phone supports Bluetooth sound synchronization. Some Android / Hongmeng phones do not support volume synchronization.2. Check whether the mobile phone is turned on for volume synchronization. Some mobile phone models need to open the volume set permission in the system Settings.
When the device is connected to the phone with Bluetooth, the phone / message is not ringing from the device	<ol style="list-style-type: none">1. Check whether the mobile phone call volume is turned on, or whether the volume is too low.2. Check that the device can speak normally.3. Check whether the mobile phone call input and output device is the device.
There is no sound when the device connected to the Windows computer via Bluetooth.	<ol style="list-style-type: none">1. Recommend that the speakers select a native device with the word "stereo" for playing music.2. Recommend that during calling or meeting, the speaker selects a native device with the word "hand free".

FAQ

Description	Handling advice
There is no sound when the device connected to the ZOOM /Teams etc APP on computer via Bluetooth.	<ol style="list-style-type: none"><li data-bbox="394 242 945 332">1. Check that the microphone and speakers of the call software are properly connected to the device.<li data-bbox="394 344 945 435">2. Check whether the computer audio drive is normal. Recommend to restart the computer and try again.
The device does not respond when connected to the computer with the USB.	<ol style="list-style-type: none"><li data-bbox="394 465 945 591">1. Check whether the device is in Bluetooth connection. Please disconnect the Bluetooth connection first, and then use USB cable to connect the device.<li data-bbox="394 603 945 658">2. Check whether the USB data cable is damaged.<li data-bbox="394 670 945 697">3. Restart the device and try it again.



FC CE RoHS

Nexvoo, Inc.

Asia office:

No.56-58, North 5F, Huoju Plaza, Huoju Road, Huli district
Xiamen city, Fujian province
China

USA office:

9325 Uptown Drive, Suite 900
IN 46256 Indianapolis
USA

EMEA office:

Poort van Midden Gelderland Rood 22
6666 LT Heteren
The Netherlands



图号: SP-1489

项目: NexTalk N710说明书V1.0

尺寸: 95x110mm

方式: 风琴折叠

材料: 128铜版纸

更新日期: 2022年08月18日

制作: 厦门市凌拓通信科技有限公司