



CONTENT

1. Brief introduction

2. Specifications

3. Package contents

4. Introduction to main components

5. Introduction of panel

6. Switch on and off instructions

7. Function description

8. How to place bills correctly

9. Error Messages and Troubleshooting

10. Safety Instructions

11. Daily maintenance






1. Brief introduction

The DT5 is the perfect solution for a high speed and reliable portable money counting machine, suitable for any paper banknote. Counting money outdoors has never been smoother and faster. Packed inside a leather bag which is handy to strap around your waist and convenient to carry; all you have to do is plug 4*AA batteries and use it on the go.

 
2. Specifications

Dimension	"7.4x3.7x2.8" In
Net weight	0.86 lbs
Power supply	DC6V/1.5A or 4pcs AA(LR6)
Power consumption	≤4W
Banknote size	Min130×50mm Max180×100mm
Counting speed	≥600pcs/min
Capacity of counting	150pcs new bills/120pcs old bills
Counting display	3Digital LED
Noise	≤30dB


3. Package contents

				
Machine	User manual	Power adapter	Counting guide	Leather Bag

4. Introduction to main components

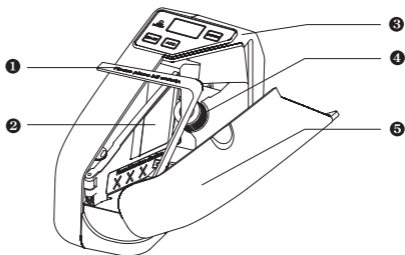

 1. Counting Guide
2. Pivating Feeding Surface
3. Right Cover
4. Counting Wheel
5. Protective Cover

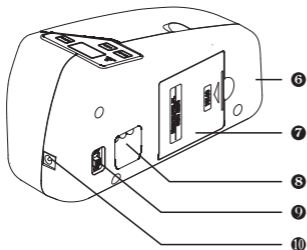

6. Left Cover
7. Battery Cover
8. UV light and White light
9. Power Switch
10. Power Port

5. Introduction of panel

1. START key

Short press to start counting. Short press after each count to reset the number

2. ADD key

Short press to enter the ADD mode; this function will add the new stack of counted bills to the former count

3. UV/WM key

Short press to switch between 3 different modes:

- (1) Turn on UV function;
- (2) Turn on Water mark function;
- (3) Turn off both UV/WM functions.

Note: Both functions will automatically turn off when counting

6. Switch on and off instructions

1. Turn the power switch to the ON position or open the transparent cover to turn it on.
2. Turn the power switch to OFF position and close the transparent cover to shut down.

7. Function description

 
1. Power Supply: Connect the supplied 100-240V adapter to the unit or install the batteries - 4pcs AA (LR6)

2. Count:

- Open the transparent cover and turn on the machine. Once the self-checking operation is complete, the machine will enter the working state and the screen will display "0".
- Securely attach the counting guide in the right place, press the pivoting feeding surface to put into the bills (be sure to push them to the end). Short press the "START" key to count, short press it again to reset after each count.

- If you need to accumulate banknotes, remove the first batch that has been counted and short press "ADD"


Note: Counting the same batch of bills more than once is recommended to ensure accuracy.

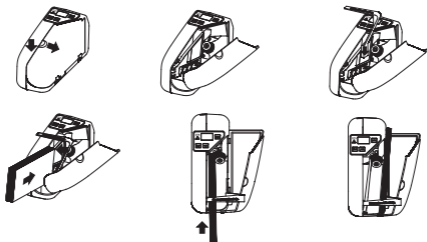


> Press down with your thumb the "PressDown" button on the left cover to open the transparent cover

> Push the pivoting feeding surface to the left then insert the stack of notes in an orderly manner.

 3.UV function: Turn ON the device by using the power switch or opening the transparent cover, press "UV/WM" key to turn on the UV function. As shown in the picture below, move the bills to see the UV image.

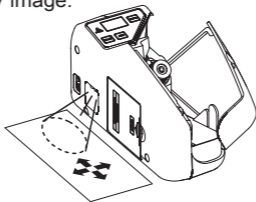

 4. WM function: In the working state, press “UV/WM” key twice to turn on the WM function. As shown in the following picture, move bills closer to the light to check the watermark.

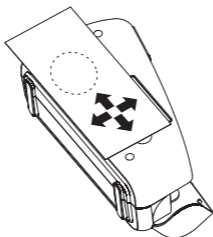

5. Auto-sleep function: the machine will enter sleep mode if you keep it idle for 1 minute: the digital display will turn off, and it will wake up when you count again.

6. Turn off the machine: Close the transparent cover and make sure the Power Switch is Off.

8. How to place bills correctly

When counting, place same-sized bills in a neat and square manner to achieve optimal counting results. Placement of the bills in disorder leads to wrong counting results (figure below)



9. Error Messages and Troubleshooting

If an error code is displayed, please check out below troubleshooting steps. This product should be operated only from the type of the power source indicated in the user's guide.

When the count is inaccurate, please check if the resistance wheel has serious wear, tilt or clearance is too large. Please adjust the resistance leather to the best position.

Error code	Malfunction description	Check method	Solution
E-0	voltage instability	Check if it is consistent with the prescribed power supply, and if the battery power is too low	Replace the power supply that meets the requirements, replace the battery with sufficient charge
E-1	Bottom sensor flaut	Obstruction of the bottom sensor	Clean the sensor and the counting wheel with alcohol
E-2	Top sensor flaut	Obstruction of the top sensor	Clean the sensor and the counting wheel with alcohol
E-3	The counting result not accurate	Check if there are corners missing or folded;or the bills are not smooth	Change bills, flatten out the corners, and organize money to make sure all bills are the same size

10. Safety Instructions

Please read and understand all of the safety instructions.

Only use the AC/DC adapter provided with the unit. The use of other AC/DC adapters may result in electric shock, fire or cause serious damage to the unit.

- Never push objects of any kind into the unit through case slots, since they may touch dangerous voltage points or shortcut parts, resulting in a risk of fire electric shock.
- Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a. When the power supply cord or plug is damaged or frayed.
 - b. If water has been spilled into the unit.
 - c. If the unit has been exposed to rain or water.
 - d. If the products shows a noticeable change in performance.
- To reduce the risk of electric shock, do not disassemble this product. Take it to qualified service personnel when service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
- Do not operate the unit in areas with high temperature or high humidity since it may prevent it from working correctly.
- Do not use the unit if the power cord is damaged or if the plug socket contact is loose. Not following those instructions may result in electric shock, fire or other hazards.

1 1. Daily maintenance

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaner. Use a damp cloth for cleaning dust and ink residues.

Contact us

1-332-228-1098

Support@deteckusa.com

Check out our Video Tutorials
on [youtube.com/deteckusa](https://www.youtube.com/deteckusa)

www.deteckusa.com