

MyBabiie®

For little people who dream big


MB240 Pushchair




Please always read all the instructions provided carefully before use, and keep the care and maintenance instruction for further reference.

IMPORTANT! KEEP FOR FUTURE REFERENCE


Components

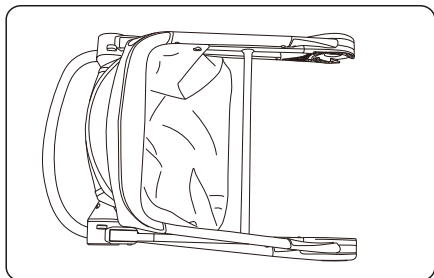


Chassis

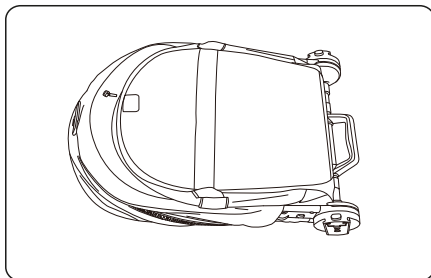


Seat unit

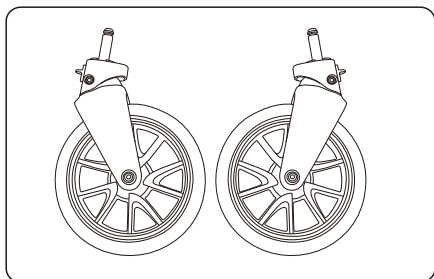


Front wheels

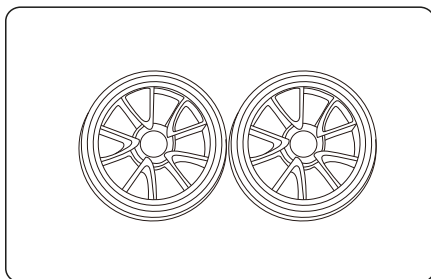

Rear wheels

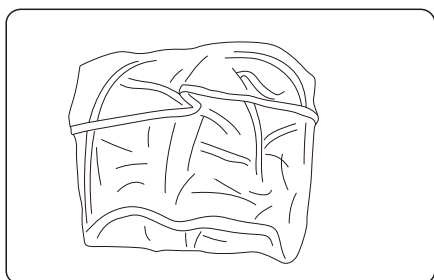

Rain cover

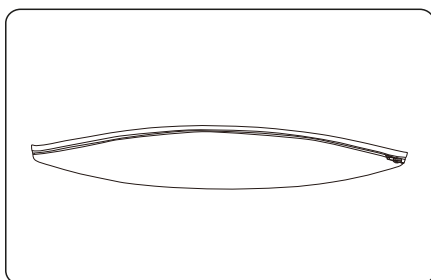


Hood visor

Assembly instructions

Unfold the stroller

Take out the chassis from the carton, unfold the chassis firstly by stepping on the rear tube and pulling upward on the handle bar, then lean forward until the folding hinge is fully engaged. The folding mechanism will lock into place when the legs are fully extended. You should hear a clear "click".

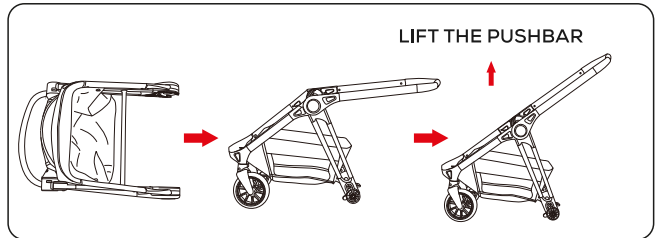

Front & Rear Wheels Assembly

Install front & rear wheels

Push the wheels into the wheel housing until they lock into places. You should hear a clear "click".


NOTE: Pull the wheels to ensure that they are securely attached to the chassis.

Fix the direction of front wheels

Put the front wheels in forward direction and press down the fixer. You should hear a clear "click". Pull up the fixer and wheel can rotate freely.

Remove the front & rear wheels

Push release button on the side of the front wheel hub and remove the front wheel. Pull the release pin on the side of the rear wheel hub and remove the rear wheel.

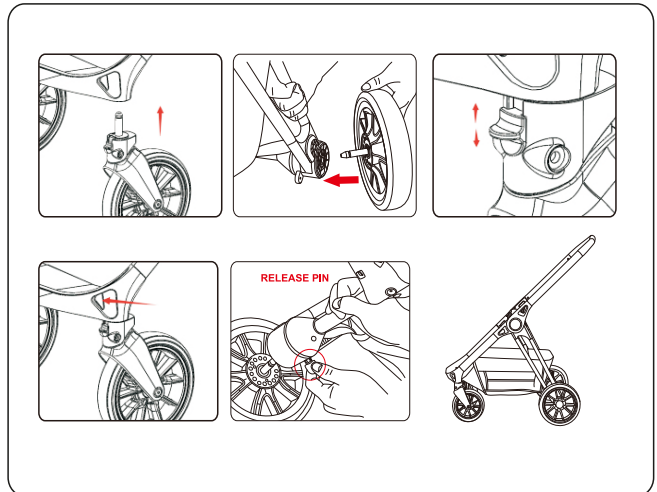


Seat Assembly

Unfold the seat, then install the hood visor on the hood by using the zipper.

Align the seat with the anchors on the side of the chassis and push them together until they install securely. You should hear a clear "click".

Extend the hood to its opening condition and adjust the hood freely according to your desired position.

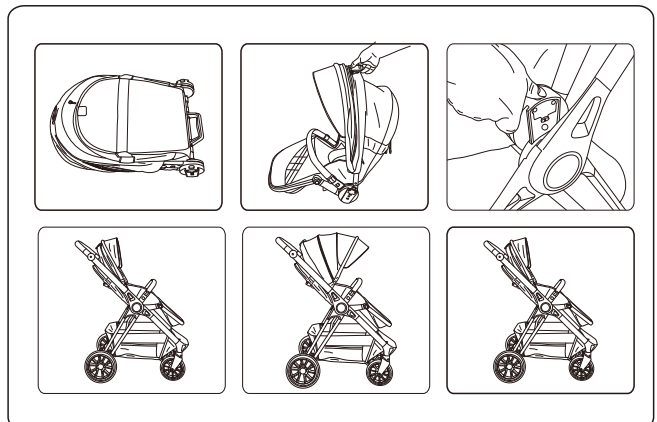



Assembly instructions

Seat direction adjustment

The seat can face in either direction, forward or backward.

Press the release button on each side, to take out the seat and adjust the direction of the seat.



Note: Do not adjust the seat direction with the baby inside.

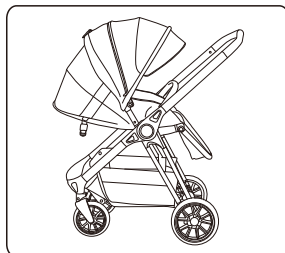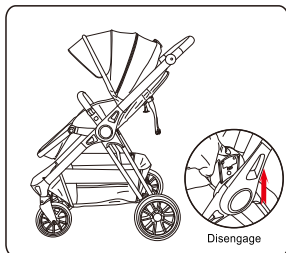

Seat backrest adjustment



To recline the backrest, pull the lever on the back of the seat and lower the seat to your required position.

To raise the seat, simply push the backrest up.

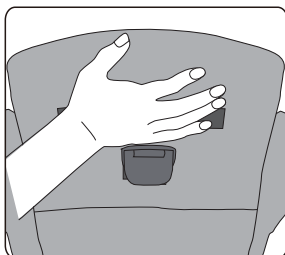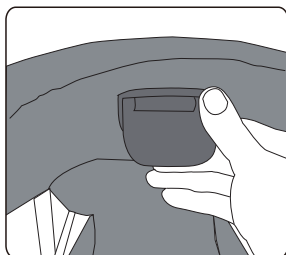



Footrest adjustment

Press the adjustment button on the two sides of the footrest at the same time to adjust up or down.

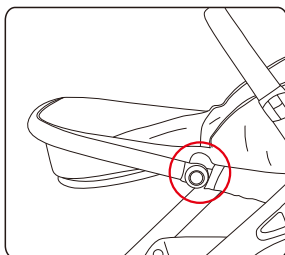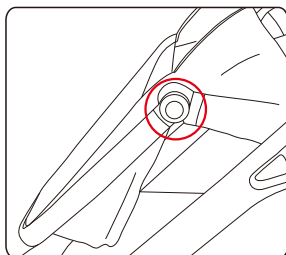

Handle bar adjustment

To lower or raise the push handle on the pushchair, press in the buttons on either side and rotate the bar to your preferred position.

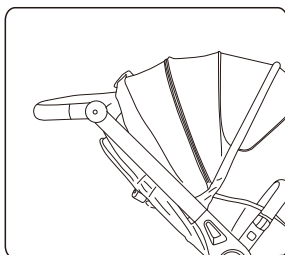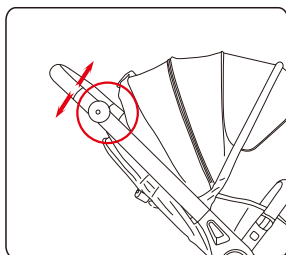


Assembly instructions

Brake operation

To engage the brake, push the brake lever down with your foot. The stroller might have to be required to be rolled back and forth to fully engage the brake. Check that the stroller will not move once the brakes are properly applied.

Release the brake by pushing the brake lever up.

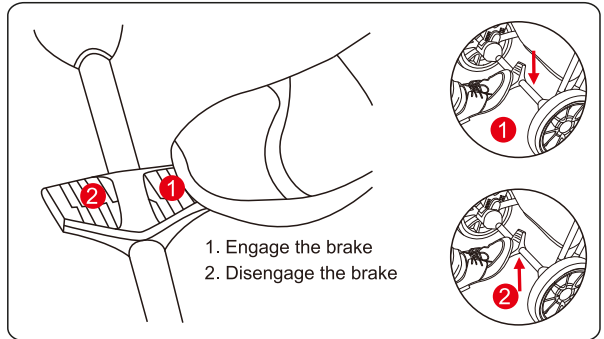


5-point safety harness

Insert the shoulder strap buckle 1 into the buckle housing of center hub. Repeat for the other side 2.

Insert the completed waist buckle 3+4 into the buckle housing too.

Ensure all the buckles engage the housing securely in place.

To release buckles, press center button on buckle housing.

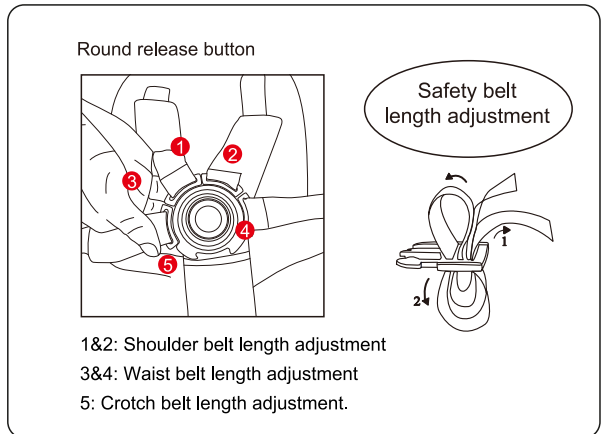

The shoulder straps of the 5-point harness have 2 attachment positions. Select the position that places the shoulder strap level with, or below the child's shoulder.

To adjust harness height unhook the shoulder strap from the crotch buckle. Insert the shoulder strap through the harness spread slots. Insert shoulder strap through the appropriate slot and reattach the shoulder strap to the crotch buckle.


Assembly instructions

To fold the stroller

Pull the stroller backward several inches to adjust the front wheels to the front, then fix the front wheels.

Lift the release button on canopy and push forward on the rear edge of hood toward the floor. Secure the stroller in the folded position by pushing the handle bar backwards to be level with the rear frame. You should hear a "click". The stroller can be self-standing after folding.

Note: The stroller can be folded in parent facing position.

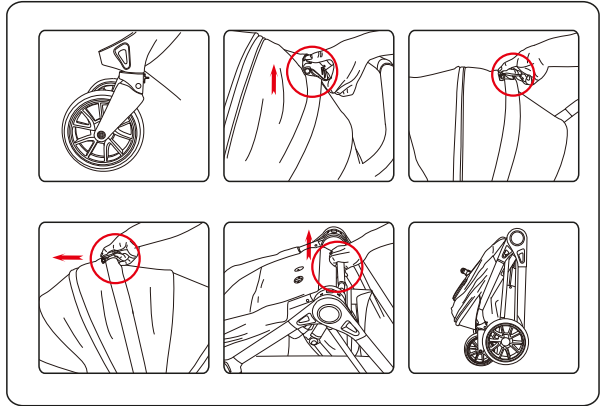

Cleaning & washing

Please note the textile designation. Metal and plastic parts should be cleaned with a damp cloth and mild detergent. Do not use abrasive agents. Please check on a regular basis that the brakes, wheels, latches, connecting elements, belt systems and seams are properly functional.

In case of any damage or irregularities, the product no longer use. Don't expose the product to strong sunshine After use in rain or snow, the wheels should be lubricated and the vehicle dried to prevent rust. Care for, clean and check this product regularly. Don't use accessories that have not been approved by the manufacturer.

For the proper functioning of the wheelchair, we recommend regular cleaning and lubrication of all moving parts, mechanisms and wheel axles with the appropriate cleaning agents and lubricants.

Safety & care notes

**IMPORTANT, RETAIN FOR FUTURE REFERENCE:
READ CAREFULLY**

THANK YOU FOR CHOOSING OUR PRODUCT, PLEASE ALWAYS READ ALL THE INSTRUCTIONS PROVIDED CAREFULLY BEFORE USE AND REMEMBER, YOUR CHILD'S SAFETY MAY BE AFFECTED IF YOU DO NOT FOLLOW THESE INSTRUCTIONS. SUITABLE FROM BIRTH WHEN USING THE MAX LOAD OF THE STROLLER IS 33 LBS (15KG), NEVER OVERLOAD.

THIS PRODUCT COMPLIES WITH EN1888-1:2018

WARNING: NEVER LEAVE YOUR CHILD UNATTENDED.

WARNING: ENSURE that all the locking devices are engaged before use.

WARNING: MAKE SURE the brake system is engaged when putting or taking out the child.

WARNING: To avoid injury ensure that your child is kept away when unfolding and folding this product.

WARNING: DO NOT let your child play with this product.

WARNING: ALWAYS use the restraint system seat belt to avoid serious injury from falling or sliding out. It may be dangerous to leave your child unattended.

WARNING: Accessories which are not approved by the manufacturer shall not be used.

WARNING: Avoid placing the stroller near naked heat sources such as electric bar fires, gas fires, etc. or where a child could gain access to any other kinds of hazards.

WARNING: ALWAYS use the crotch strap in combination with the waist belt.

WARNING: ALWAYS use the harness provided and make sure the harness is correctly fitted.

WARNING: Any load attached to the handle affects the stability of the stroller.

WARNING: Use the stroller for only one child at a time.

WARNING: The maximum permissible loading for shopping basket is 6.6 lbs (3kg).

WARNING: Excessive weight may cause a hazardous unstable condition to exist.

This seat unit is not suitable for children over 36 months.

WARNING: DO NOT use if any parts is broken, torn or missing.

WARNING: This stroller is not suitable for children over 33 lbs (15kg)

WARNING: Only replacement parts supplied or recommended by the manufacture/distributor shall be used.

WARNING: This product is not suitable for running or skating.

WARNING: DO NOT place the parcels or accessory items or both on the stroller may cause the unit to become unstable.

Your child's safety is your responsibility

If you have a problem with this product or require replacement parts, please visit www.mybabiie.com/support


Register your product at: www.mybabiie.com/warranties

Pushchair do's & don'ts



Do use your brakes!

Ensure the parking brake is engaged during the loading and unloading of children & when the stroller is stationary.

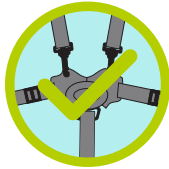

Do always use the restraint system!

Ensure that the child restraint system is correctly fitted at all times.



Do keep your stroller clean and dirt free.

Use a clean white cloth, warm water and a mild detergent to keep your stroller clean.



Do always keep two hands on the handles when pushing.

You could lose control of your stroller if not steering with both hands.



Do follow manufacturers instructions when assembling and using your stroller.

For safety, please refer to our instruction manuals or contact customer support if you're unsure.



Don't use your stroller up and down stairs!

Don't use your stroller up or down stairs or to bump kerbs.



Don't hang bags off the handles!

Bags and other items should not be hung from the handles as this can affect the stability of the stroller.



Don't run or skate with your stroller!

Our products are not suitable for running or skating.



Don't carry the stroller with baby inside!

Our strollers are not designed to be carried with your baby inside them.



Don't put hot drinks in the cup holder.

Hot drinks burn and can easily spill from the bottle holder.



Don't jetwash your stroller.

Some jet washers are very powerful and could damage parts of your stroller!



Don't leave your child un-attended in their stroller.

Always keep your child and stroller in view to avoid accidents.



Don't treat your stroller like a trolley.

Don't load your stroller up with all your shopping as they are not built for this purpose and could cause damage.



Don't use your stroller as a bumper cart!

Damage can easily occur if your stroller is knocked into other things.



Don't smoke around your stroller

We wouldn't want your stroller or little one getting hurt or damaged!



Don't leave your stroller unattended on extreme gradients.

Even with your brakes on your stroller is at risk from tipping or sliding on extreme gradients!



Don't sit in the strollers unless the user is under the guideline weight.

Our strollers are designed to hold a maximum weight. If exceeded this will cause damage!



Do enjoy your product!

Go out and have fun adventures with your little one!

MyBabiie®

For little people who dream big

Register your product at:

www.mybabiie.com/warranties

**In the first instance of needing assistance please
contact your original place of purchase.**

This product qualifies for 12 month warranty when
registered through our site

Follow us!



/MyBabiie



@MyBabiieOfficial



@MyBabiie



/MyBabiie

My Babiie Ltd

Repton Manor, Repton Avenue, Ashford, Kent, TN23 3GP