



MB33

Tandem Pushchair

GB Instruction Manual

ES Manual de instrucciones



IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

Welcome to the familiee

Your trust in our product means the world to us, and we're thrilled to be a part of your parenting journey. Our team has worked tirelessly to ensure that the MB33 provides comfort, safety, and style for you and your little one. We're confident it will exceed your expectations. Should you have any questions or require assistance in the future, please don't hesitate to reach out. Thank you for choosing My Babiie; we wish you and your family countless wonderful journeys ahead.

Get to know your MB33 Tandem Pushchair

Scan the QR code below on your camera app to be linked off to our page to get all the information you need for using your Pushchair. From setting it up to how to fold it down, it's all there!



SCAN ME



Warranty

We provide a 1 year warranty against manufacturing or material defects.

The warranty period is effective from the day of purchase and applicable to the UK and Ireland. If you made your purchase from an authorised retailer, please return your product to them.

If you bought your product via our website; mybabiie.com, please contact our Customer Service team via email (info@mybabiie.com). We are happy to refund any product if you change your mind about your purchase (if purchased from our website, mybabiie.com.) As long as you tell us within 30 days of receiving your goods. They must be returned in an unused condition, in the original, undamaged packaging and complete with all original parts and accessories. Proof of purchase is required.

What is not covered by the Guarantee?

- Failure to follow My Babiie user guide and maintenance instructions.
- Damage caused by non domestic use
- General wear and tear, for example: worn wheels, damaged rain covers, worn/tear fabric.
- Deliberate damage, misuse or neglect.
- Product which has been modified, undergone an unauthorised repair or used a non approved spare part.
- Car seats which have been involved in an accident, we recommend all car seats should be replaced if involved in an accident.
- Cosmetic damage.
- Parts subject to normal wear and tear, foam handles, rubber elements of wheels, signs of fabric wear.
- Loss incurred as a result of not being able to use a product whilst waiting for a spare part or repair.

A repair service is available for any item that sustains accidental damage at any point during its lifespan. If the damages are not covered by our guarantee, we will provide a quote for the repair costs on an individual basis. If you find yourself in need of spare parts that are not covered by the warranty, you can purchase each spare part on our website (subject to availability).

To read more about your guarantee, please visit mybabiie.com/guarantee.

Our guarantee is provided by My Babiie Ltd, Registered address: 15 Commercial Road, Paddock Wood, Kent, TN12 6EN .

Your statutory rights are not affected by the guarantee.

Registering your Warranty

To register your warranty please visit www.mybabiie.com/warranties

Registering for your product warranty allows you to claim repairs or replacements if your product develops a fault. It will also help us contact you in the event of a product issue that you may need to be made aware of.

Problems or Questions

If you have any questions about your product then please drop us an email at info@mybabiie.com and we will get back to to you as soon as possible. Alternatively, you can chat to us on our Live Support Chat on our website mybabiie.com or contact us via our social media channels.

Safety & care notes

IMPORTANT -READ CAREFULLY AND KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

The stroller meets the EN 1888 -1:2018 + A1: 2022 safety standard

WARNING: This seat uni is not suitable for children under 6 months

WARNING: Never leave the child unattended.

WARNING: Ensure that all locking devices are engaged before use.

WARNING: To avoid injury, ensure that the child is kept away from when unfolding and folding this product.

WARNING: Do not let the child play with this product.

WARNING: Always use the restraint system.

WARNING: Every time, check that the seat unit /pram body attachment devices are correctly engaged before use.

WARNING: This product is not suitable for running or skating.

IMPORTANT: When used with a single seat, it must be fixed in the lower position (as shown in the configurations on page 12).

IMPORTANT Your child's safety is your responsibility.

When using your stroller, under any circumstances, ensure your child is attached with the 5-point safety harness correctly adjusted to fit. Always use the crotch strap with the safety harness, even when using a footmuff on the stroller.

- Any load attached to the handle or backrest or side of vehicle affects the stability of the pushchair.
- Always use the rear foot brake to immobilise your stroller.
- Ensure that the rear foot brake is applied when you place the child in or take them out of the stroller.
- Always use the crotch strap in combination with the waist belt.

GENERAL INSTRUCTIONS

This stroller is intended to transport:

1. Two children from birth up to a maximum weight of 15kgs each, as well as an additional weight of 3 kgs in the basket below the stroller.
2. A child from birth up to a maximum weight of 15 kgs, as well as an additional weight of 3 kgs in the basket below the stroller.

We recommend that you use the lying down position when your child is less than 6 months old. When use the sleeping cot, the product is suitable for a child who can not sit up by itself, roll over and cannot push itself up on its hands and knees. The maximum weight of the child is 9kg. The harness must be completely removed when used in carrycot mode. There is a risk of strangulation if the harnesses are not removed.

Safety & care notes

Correct product assembly is essential. Please note that incorrect use could damage the stroller and be dangerous for your child.

- Never transport more than one child per seat in the stroller.
- Do not use replacement parts or accessories other than those recommended by My Babiie. Only replacement parts provided by or recommended by My Babiie should be used.
- To avoid the risk of suffocation, keep all plastic bags away from and out of the reach of children.
- Always attach your child with the 5 point safety harness correctly adjusted to fit him whenever you use the stroller in seat mode only!
- The child should always be kept clear of detachable parts when adjustments are made and when opening and closing the stroller.
- When the stroller is folded and upright, keep the child clear to avoid his being injured should the stroller fall.
- Should the stroller be used by someone unfamiliar with it, always show them the correct way to use it.
- To avoid the risk of strangulation, NEVER attach strings, ribbons or cords onto the stroller or onto your child, or use the harness when in carrycot mode
- The stroller should always open and close without difficulty. If it doesn't, do not force the mechanisms and refer to the Instruction manual.
- Ensure that all safety mechanisms are engaged before use and that they are used correctly.
- Never lift up the stroller by the seat but by the chassis only.
- Never lift the seat/carrycot by the bumper bar!
- Overloading, incorrect folding and the use of accessories non-approved by the manufacturer may seriously damage or break the stroller (in particular the use of buggy boards).
- Never place any item on the stroller hood.
- Never place a load on the foot-rest.
- Never allow children to stand on the foot-rest.
- Do not use the raincover indoors, during warm weather, when it is sunny or near a source of heat. Your child may become too hot.
- ALWAYS TAKE YOUR CHILD OUT of the stroller when going up or down stairs, or when using an escalator.
- Step over obstacles (pavements etc...) with care. Bumping it up and down repeatedly may damage your stroller.

WARNING: Discontinue use of the carrycot mode as soon as the child is able to sit by him/herself, roll over and can push itself up on its hands and knees. Maximum weight of the child is 9kg or 6 months (whichever comes sooner) for using in carrycot mode.

Safety & care notes

MAINTENANCE

This stroller should be regularly checked by the person using it.

- Clean the plastic and metal parts of your stroller with a damp cloth and dry them immediately
- Use only mild cleaning products.
- The textile parts should be wiped clean with a damp cloth (do not machine wash). Use only a mild detergent. DO NOT USE BLEACH. Dry in the shade.
- Regularly check screws, rivets and bolts. Replace any parts which may have become worn.
- Prolonged exposure to direct sunlight may prematurely discolour the stroller fabric.

PLEASE NOTE! It is not recommended to use your stroller in sea water or over sand.

PLEASE NOTE! Always rinse parts in contact with salt and sand, in particular the wheels, the springs and the rivets (including after rolling on snowy/salted pavements).

WARNING: Only use in the configurations shown on page 11.

WARNING: Only use parts recommended by the manufacturer.

WARNING: Never use the stroller if it is damaged or broken.

WARNING: No additional mattress shall be added unless recommended by the manufacturer.

 
WARNING: Do not use the carrycot mode for overnight sleeping.

Your child's safety is your responsibility


If you have a problem with this product or require replacement parts, please visit www.mybabiie.com/support

Register your product at: www.mybabiie.com/warranties


Components

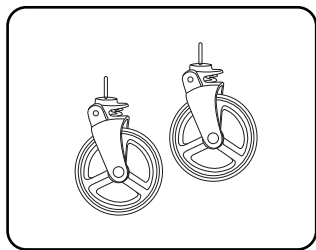


Front wheels x2

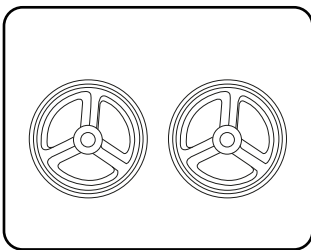 


Rear wheels x 2

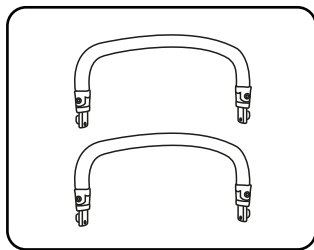 


Front bumper x2

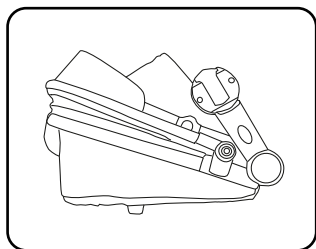 

Seat x2

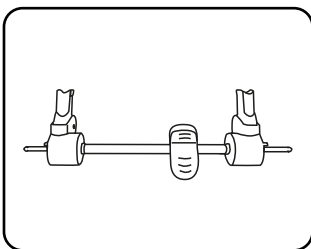 


Rear wheel axle

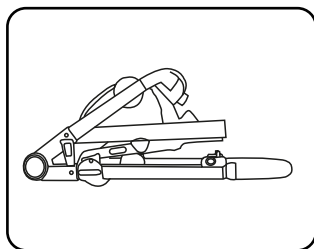 

Frame



 Rain cover x 2



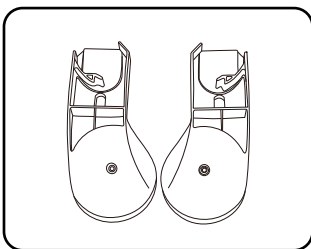


Car Seat Adapters

Assembly instructions



1 Open frame

   Release locking hook, pic(1a). Lift up the handle, pic(1b) and open the frame, pic(1c). You will hear a “click” sound once in the locked open position.

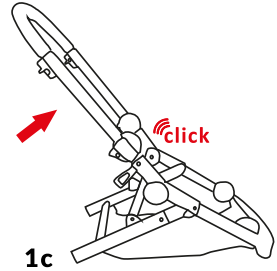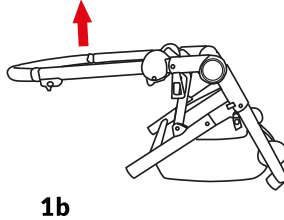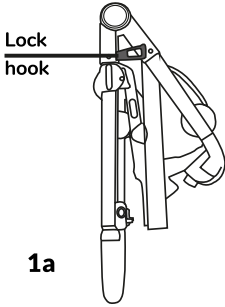

2 Assemble the rear wheels sets

  
Pic (2a) Push the wheels into the wheel housing until they lock into place. You should hear a click sound. Then push the rear axle onto the pushchair frame until you hear a click sound each side. Pull the wheels to ensure that they are securely attached to the chassis.

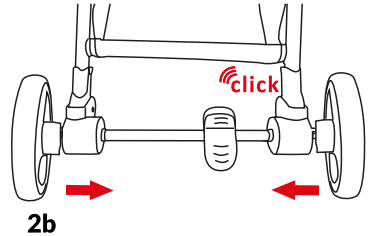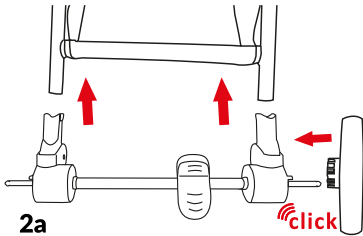

3 Front wheels


Push the wheels into the wheel housing until they lock into place. You should hear a click sound.

 Pull the wheels to ensure that they are securely attached to the chassis.

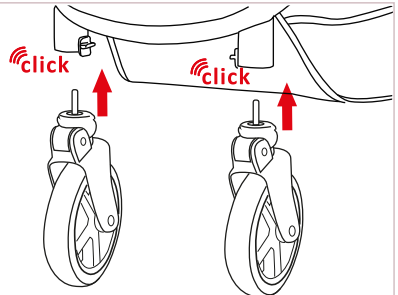


Assembly instructions

 - 4** Take out the seat and open the seat out flat as shown in pic 4a. Then fold towards the center to make sure it is fully locked out as pic 4b.

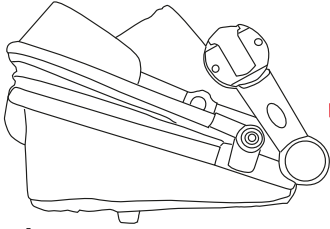


4a

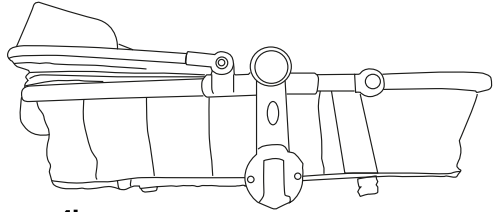 


4b

 
- 5** Align the seat unit with the anchors on the sides of the chasis and push them together until they install securely. You should hear a click sound as in pic 5. In order to make sure the seat is assembled correctly to the chassis lift it up to check it is locked in securely.

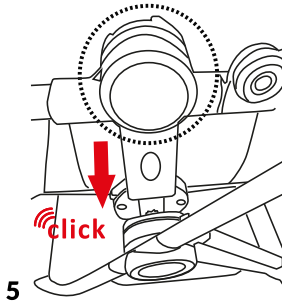


5

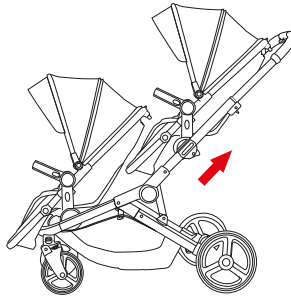 

 - 6** Insert the front bumper into the seat, lift up the front bumper with a little force to make sure it is assembled securely, pic(6a). To remove the bumper bar use two hands to press down the release buttons on both sides. Do not use the front bumper as a handle to carry the seat unit.

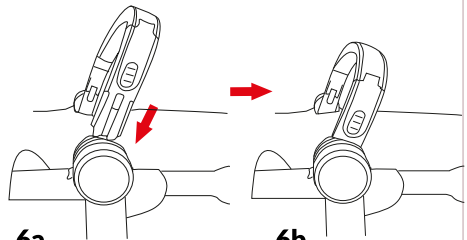

6a





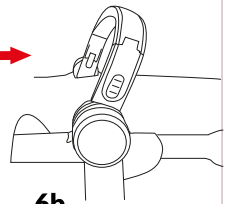 


6b

Assembly instructions


7 Harness adjustment

     Slide the top harness buckle into the side waist buckle (pic 7.2) Repeat for other side. Insert the completed waist buckle into the buckle housing, pic 7.4. Ensure the buckles engage the housing securely in place. To release the buckles, press the centre button on the buckle housing.

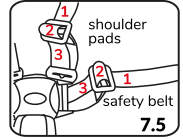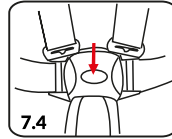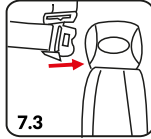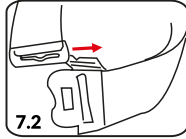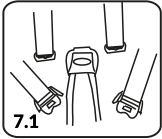


8 Brake operation

 To engage the brake, push the brake lever down with your foot. Check that the stroller will not move once the brakes are properly applied. Release the brake by pushing the brake lever up.

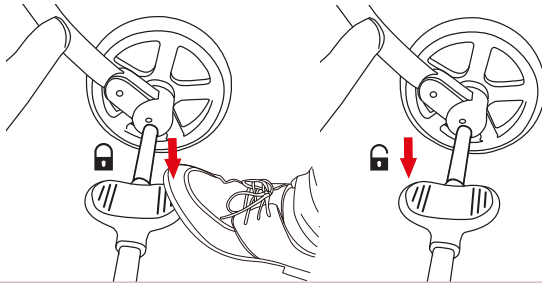

 
9 The front wheels direction can be locked or set to swivel. Pull up the lock direction button to enable swivel wheels or press down to lock the wheels in one direction. Ensure to do the same on both front wheels.

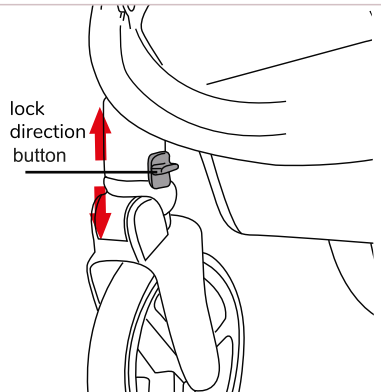

Assembly instructions


10 Legrest adjustment

 Press the adjustment button on both sides of the footrest at the same time to adjust up or down.

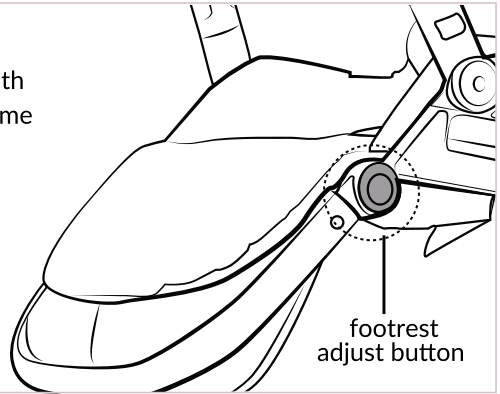


11 Handle height adjustment

 To adjust the height of the push handle, press down the button on the centre of the handle. Release the handle button once you have adjusted it to the suitable height.

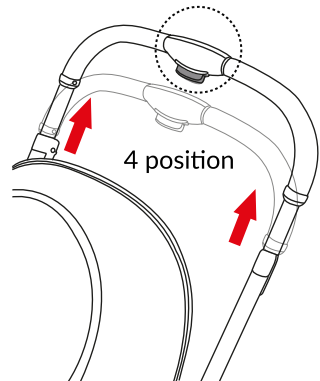


12 Seat removal

 To remove the seat, press the release buttons on both sides of the seat, take off both sides and lift up.

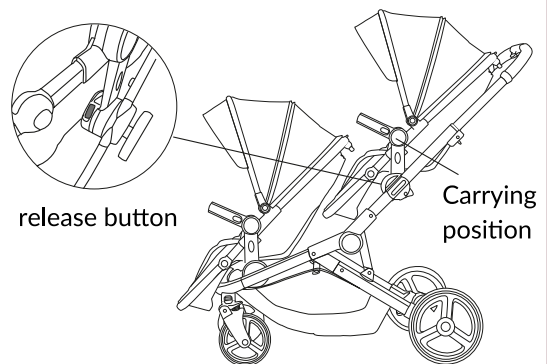


Assembly instructions

 - 13** This is a 2 in 1 seat; seat and bassinet. To change it from a seat to the bassinet, simply undo the safety catch found under the seat and fully loosen the Adjustment Buckle.

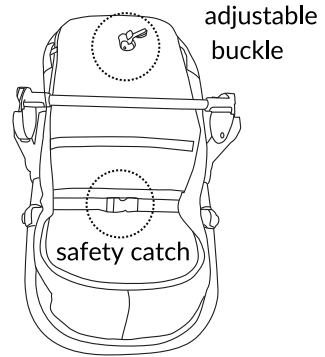

- 14** Then recline the bassinet to the horizontal laying down position using the backrest button at the base of the hood. You must then remove the harnesses from the seat when using as a bassinet (to avoid risk of strangulation).

 1. Locate the attachment points of the harness straps to the stroller seat. These can be found on the back of the seat.
2. Push the harness clips through the holes in the seat back so that they come through the front of the seat fabric.
3. Once all the straps are released, carefully remove the harness from the stroller seat

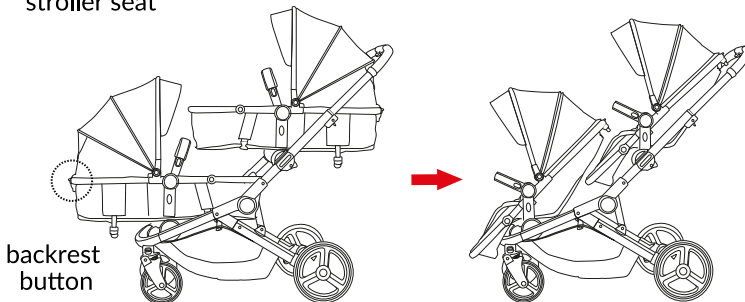


The bassinet is for new born babies, from birth up to 6 months or 9kg (whichever comes sooner).

To turn the bassinet into the seat unit simply click together the safety catch under the seat and tighten the adjustment buckle. see 13.


The seat should only be used for children 6 months and older (up to 15kg).

Disassembling the pushchair

 
- 15** To disassemble the pushchair, remove the seats by pressing the seat unit disassembly buttons on either side, then lift off the seats.

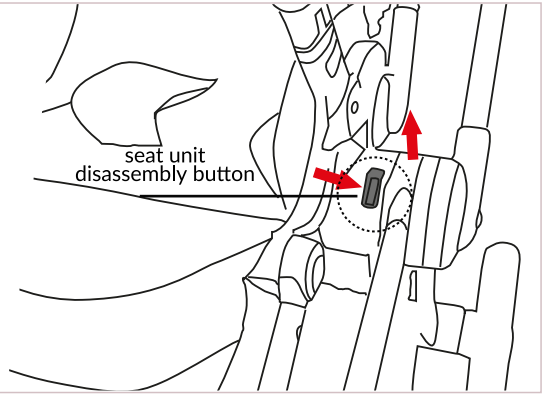

 - 16** After removing the seat, adjust the handle bar to the lowest level position, press the right side of the second lock button then use two hands to pull the folding button upwards, after that, press down the handle bar until locked shut.

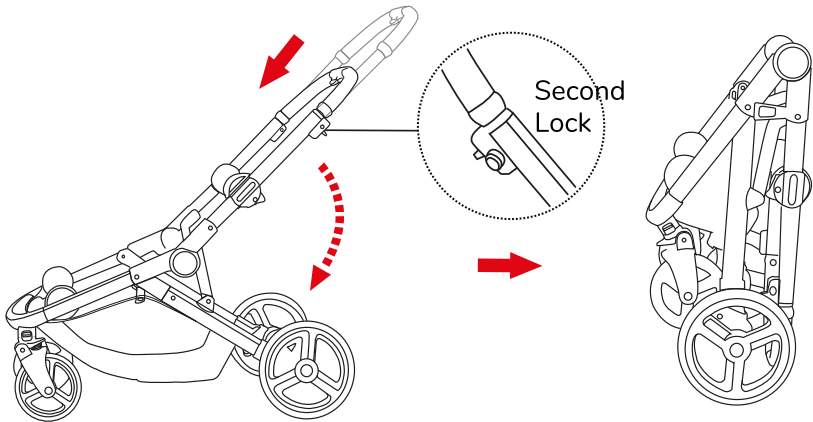


Pushchair configurations

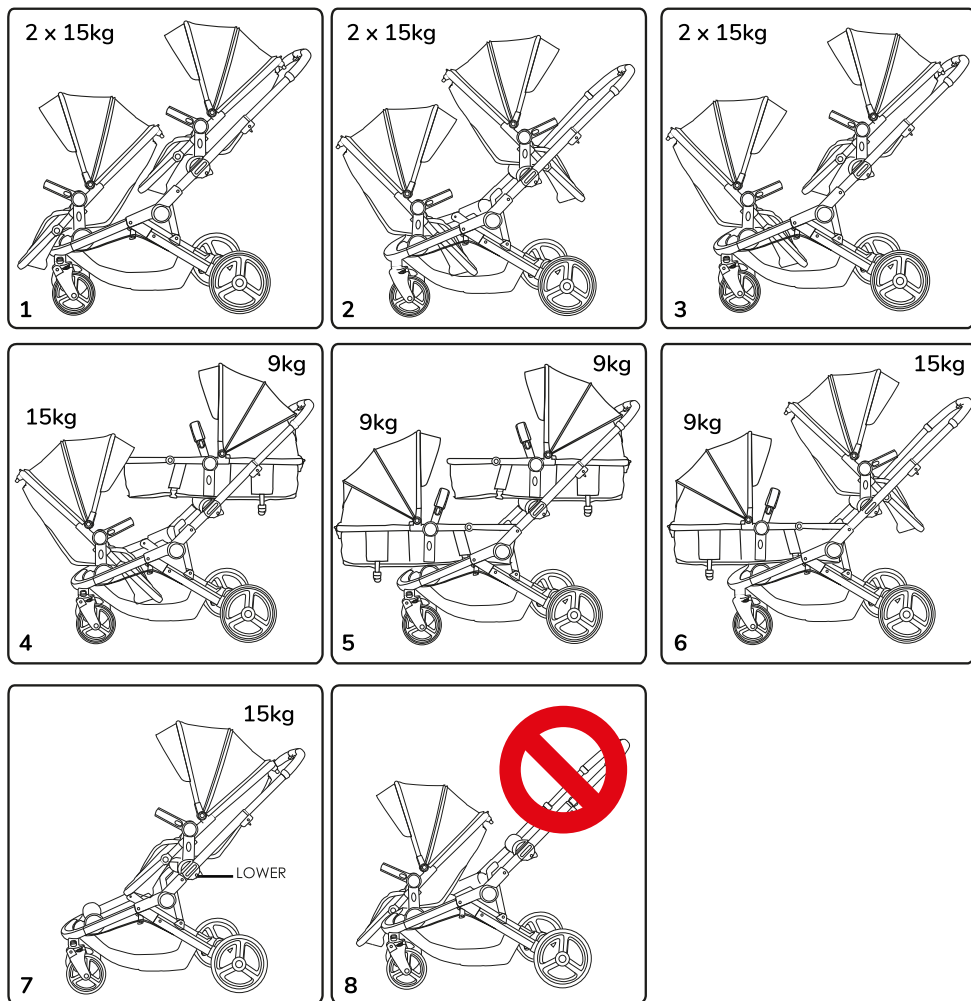 


WARNING: Never use in the state as shown in Pic 8. When using a single seat, it must be attached to the top seating position but lowered down the frame to the lowest point, as shown in Pic 7. When you use double seats on the frame, please make sure the top seat is adjusted to the highest position on the frame.

Assembly instructions car seat

 
Adaptors x2

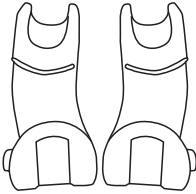


Infant carrier
(sold separately)

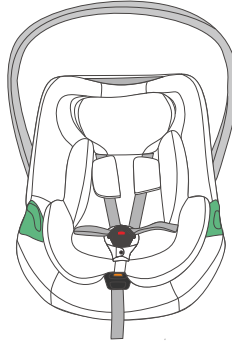 

 - 1 Insert the adaptors into the stroller until you hear a click sound. After finished, please pull them up a little to make sure they are clicked into position securely.

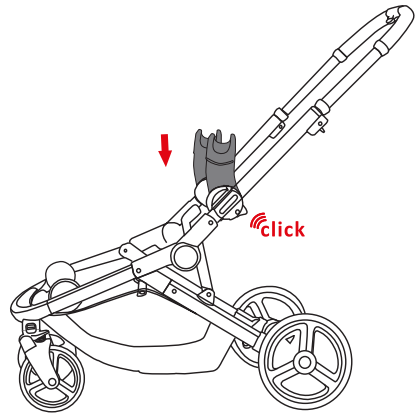

 
- 2 Align the infant carrier over the frame and adaptors then lower the car seat onto the adaptors until you hear a click sound. After finished, please pull up the car seat a little to make sure it is clicked into position securely.

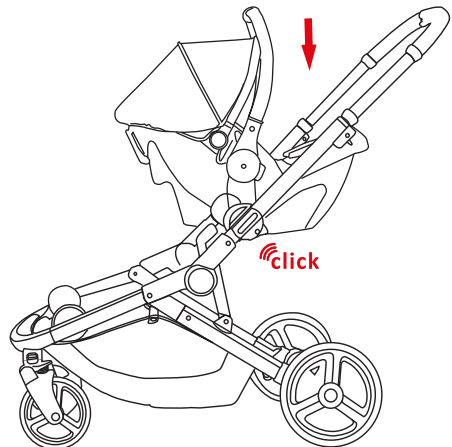


Assembly instructions car seat

3 Removing the car seat

 Press the 2 buttons on both sides of the car seat to release it from the adaptors. Lift off the car seat from the frame and adaptors.

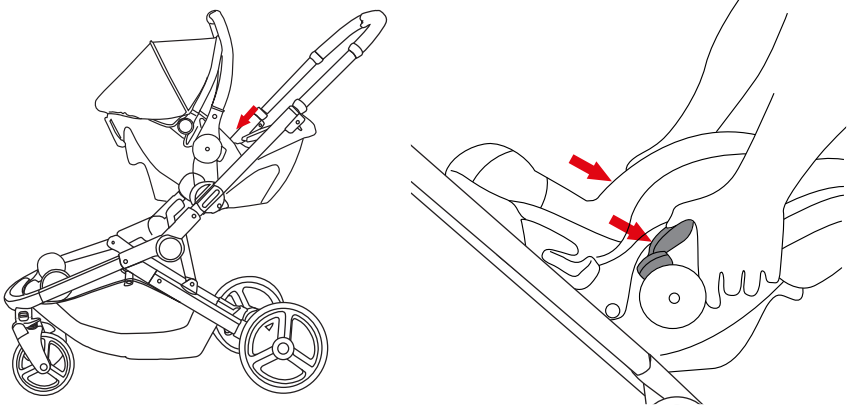

 4 If you want to remove the adaptors, press in the buttons on the adaptor then lift up the adaptor to remove them from the frame.

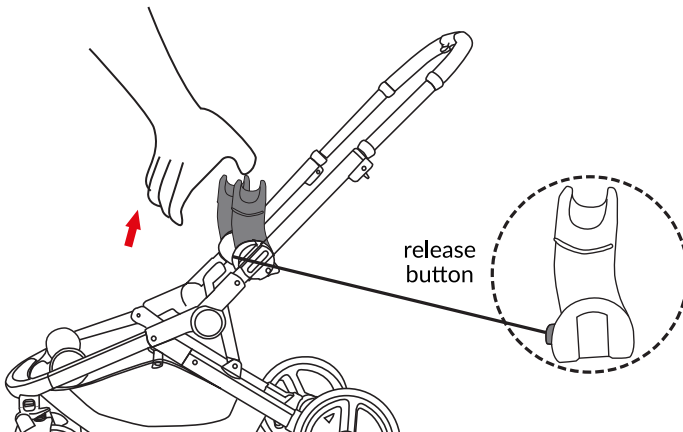

⚠ WARNING

Please assure all the locking devices are in lock positions before use.

 
 
WARNING Check that the car seat attachment devices are correctly engaged before use.

This vehicle does not replace a cot or a bed, should your child need sleep, then it should be placed in a suitable pram body, cot or bed.

Assembly instructions car seat

5 WARNING

When using a single car seat, please adjust the level on the frame to the lowest position, when using the stroller's seat unit with car seat at the same time, the car seat needs to be adjusted to the highest level. Only use the car seat in these positions to avoid injury.

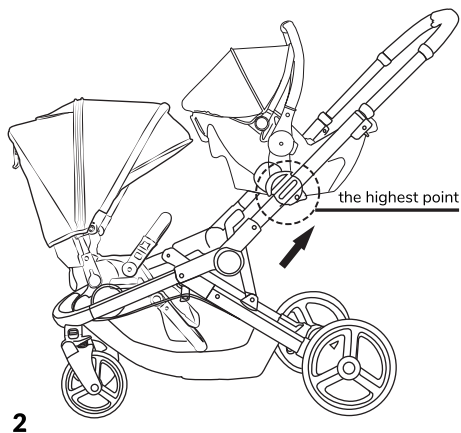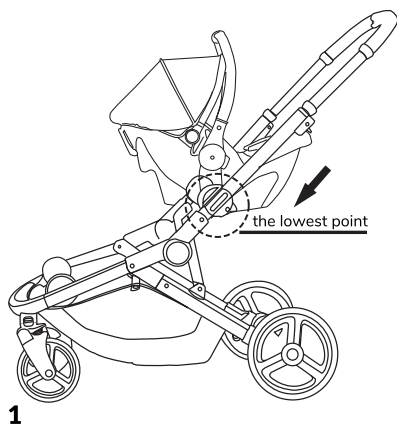


Pushchair do's & don'ts



Do use your brakes!

 Ensure the parking brake is engaged during the loading and unloading of children & when the stroller is stationary.

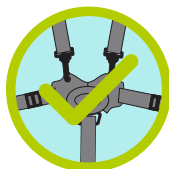


Do always use the restraint system!

Ensure that the child restraint system is correctly fitted at all times.



Do keep your stroller clean and dirt free.

 Use a clean white cloth, warm water and a mild detergent to keep your stroller clean.

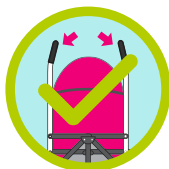

Do always keep two hands on the handles when pushing.

You could lose control of your stroller if not steering with both hands.



Do follow manufacturers instructions when assembling and using your stroller.

For safety, please refer to our instruction manuals or contact customer support if you're unsure.



Don't use your stroller up and down stairs!

Don't use your stroller up or down stairs or to bump kerbs.



Don't hang bags off the handles!

Bags and other items should not be hung from the handles as this can affect the stability of the stroller.



Don't run or skate with your stroller!

Our products are not suitable for running or skating.



Don't carry the stroller with baby inside!

Our strollers are not designed to be carried with your baby inside them.



Don't put hot drinks in the cup holder.

Hot drinks burn and can easily spill from the bottle holder.



Don't jetwash your stroller.

Some jet washers are very powerful and could damage parts of your stroller!



Don't leave your child un-attended in their stroller.

Always keep your child and stroller in view to avoid accidents.



Don't treat your stroller like a trolley.

Don't load your stroller up with all your shopping as they are not built for this purpose and could cause damage.



Don't use your stroller as a bumper cart!

Damage can easily occur if your stroller is knocked into other things.



Don't smoke around your stroller

We wouldn't want your stroller or little one getting hurt or damaged!



Don't leave your stroller unattended on extreme gradients.

Even with your brakes on your stroller is at risk from tipping or sliding on extreme gradients!



Don't sit in the strollers unless the user is under the guideline weight.

Our strollers are designed to hold a maximum weight. If exceeded this will cause damage!



Do enjoy your product!

Go out and have fun adventures with your little one!

IMPORTANTE: LEA ATENTAMENTE Y CONSERVE ESTAS INSTRUCCIONES PARA FUTURAS CONSULTAS

El cochecito cumple con la norma de seguridad EN 1888 -1:2018 + A1:2022

ADVERTENCIA: Este asiento uni no es apto para niños menores de 6 meses.

ADVERTENCIA: Nunca deje al niño desatendido.

ADVERTENCIA: Asegúrese de que todos los dispositivos de bloqueo estén activados antes de su uso.

ADVERTENCIA: Para evitar lesiones, asegúrese de mantener alejado al niño cuando despliegue y pliegue este producto.

ADVERTENCIA: No deje que el niño juegue con este producto.

ADVERTENCIA: Utilice siempre el sistema de retención.

ADVERTENCIA: Compruebe cada vez que los dispositivos de fijación del cuerpo del asiento/cochecito estén correctamente enganchados antes de su uso.

ADVERTENCIA: Este producto no es apto para correr o patinar.

ADVERTENCIA: Cuando se utiliza con un solo asiento, se debe fijar en la posición más baja (como se muestra en las configuraciones de la página 11).

IMPORTANTE La seguridad de su hijo es su responsabilidad.

Cuando utilice su cochecito, asegúrese en cualquier caso de que su hijo esté sujeto con el arnés de seguridad de 5 puntos correctamente ajustado. Utilice siempre la correa de la entrepierna con el arnés de seguridad, incluso cuando utilice un saco en el cochecito.

- Cualquier carga fijada al asa, al respaldo o al costado del vehículo afecta la estabilidad del vehículo cochecito.
- Utilice siempre el freno de pie trasero para inmovilizar su cochecito.
- Asegúrese de que el freno de pie trasero esté aplicado cuando coloque o saque al niño del vehículo paseante.
- Utilice siempre la correa de la entrepierna en combinación con el cinturón.

INSTRUCCIONES GENERALES

Este cochecito está destinado a transportar:

1. Dos niños desde el nacimiento hasta un peso máximo de 15kgs cada uno, así como un niño adicional peso de 3 kg en la cesta debajo del cochecito.
2. Un niño desde su nacimiento hasta un peso máximo de 15 kgs, así como un peso adicional de 3 kg en la cesta debajo del cochecito.

Le recomendamos que utilice la posición tumbada cuando su hijo tenga menos de 6 meses. Cuando se utiliza la cuna, el producto es adecuado para un niño que no puede sentarse solo, darse vuelta y no puede levantarse sobre sus manos y rodillas. El peso máximo del niño es de 9 kg. El arnés debe retirarse por completo cuando se utilice en modo capazo. Existe riesgo de estrangulamiento si no se quitan los arneses.

El correcto montaje del producto es fundamental. Tenga en cuenta que un uso incorrecto podría dañar el cochecito y ser peligroso para su hijo.

- Nunca transportes más de un niño por silla en el cochecito.
- No utilice piezas de repuesto ni accesorios distintos a los recomendados por My Babiie. Sólo se deben utilizar piezas de repuesto proporcionadas o recomendadas por My Babiie.
- Para evitar el riesgo de asfixia, mantenga todas las bolsas de plástico alejadas y fuera del alcance de niños.
- Sujete siempre a su hijo con el arnés de seguridad de 5 puntos correctamente ajustado para adaptarse a él siempre que ¡Usas el cochecito sólo en modo asiento!
- El niño siempre debe mantenerse alejado de las piezas desmontables cuando se realizan ajustes y al abrir y cerrar el cochecito.
- Cuando el cochecito esté plegado y en posición vertical, mantenga al niño alejado para evitar que se lastime en caso de que el cochecito se caiga.
- Si el cochecito lo utiliza alguien que no está familiarizado con él, muéstrelle siempre el modelo correcto forma de usarlo.
- Para evitar el riesgo de estrangulamiento, NUNCA coloque cuerdas, cintas o cordones en el cochecito o sobre su hijo, o utilice el arnés cuando esté en modo capazo
- La silla de paseo siempre debe abrirse y cerrarse sin dificultad. Si no es así, no fuerce el mecanismos y consulte el manual de instrucciones.
- Asegúrese de que todos los mecanismos de seguridad estén activados antes de su uso y que se utilicen correctamente.
- Nunca levante la silla de paseo por el asiento sino únicamente por el chasis.
- ¡Nunca levante el asiento/capazo por la barra del parachoques!
- Sobrecarga, plegado incorrecto y uso de accesorios no aprobados por el fabricante puede dañar gravemente o romper la silla de paseo (en particular, el uso de sillas de paseo tableros).
- Nunca coloque ningún objeto sobre el capó del cochecito.
- Nunca coloque una carga sobre el reposapiés.
- Nunca permita que los niños se paren sobre el reposapiés.
- No utilice la cubierta para la lluvia en interiores, durante climas cálidos, cuando esté soleado o cerca de una fuente de calor. Su hijo puede tener demasiado calor.
- SAQUE SIEMPRE A SU NIÑO del cochecito cuando suba o baje escaleras, o cuando utilizando una escalera mecánica.
- Pasar por encima de los obstáculos (aceras, etc...) con cuidado. Golpearlo hacia arriba y hacia abajo repetidamente puede dañar su cochecito.

ADVERTENCIA: Deje de utilizar el modo capazo tan pronto como el niño sea capaz de sentarse solo, darse la vuelta y levantarse sobre sus manos y rodillas. El peso máximo del niño es de 9kg o 6 meses (lo que ocurra primero) para uso en modo capazo.

MANTENIMIENTO

Esta silla de paseo debe ser revisada periódicamente por la persona que la utiliza.

- Limpie las partes plásticas y metálicas de su cochecito con un paño húmedo y séquelas inmediatamente.
- Utilice sólo productos de limpieza suaves.
- Las piezas textiles deben limpiarse con un paño húmedo (no lavar a máquina). Utilice sólo un detergente suave. NO USE LEJÍA. Secar a la sombra.
- Comprobar periódicamente tornillos, remaches y pernos. Reemplace cualquier pieza que pueda haberse desgastado.
- La exposición prolongada a la luz solar directa puede decolorar prematuramente la tela del cochecito.

¡TENGA EN CUENTA! No se recomienda utilizar el cochecito en agua de mar o sobre arena.

¡TENGA EN CUENTA! Lave siempre las piezas en contacto con la sal y la arena, en particular las ruedas, los muelles y los remaches (incluso después de rodar sobre pavimentos nevados o salados).

 
ADVERTENCIA: Úselo únicamente en las configuraciones que se muestran.

ADVERTENCIA: Utilice únicamente piezas recomendadas por el fabricante.


ADVERTENCIA: Nunca utilice el cochecito si está dañado o roto.

ADVERTENCIA: No se agregará ningún colchón adicional a menos que lo recomiende el fabricante.


ADVERTENCIA: No utilice el modo capazo para dormir durante la noche.

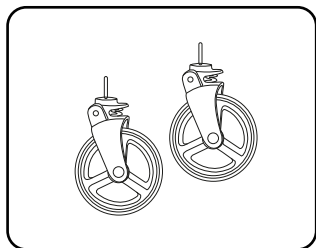


Ruedas delanteras x2

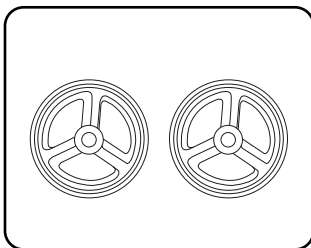 


Ruedas traseras x 2

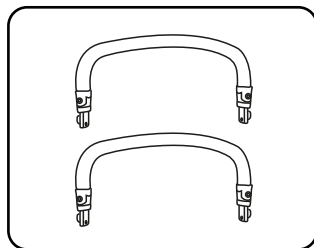 


Parachoques delantero x2

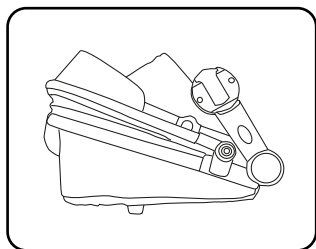 

Asiento x2

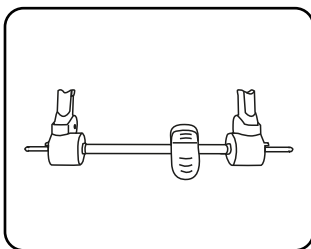 


Eje de la rueda trasera

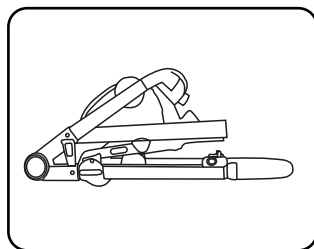 

Marco



 2 fundas para lluvia

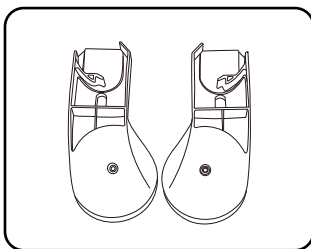


Adaptadores para
asientos de coche

1 Marco abierto


Suelte el gancho de bloqueo, imagen (1a). Levante la manija, imagen (1b) y abra el marco, imagen (1c). Vas a escuchar un sonido de "clic" una vez que esté en la posición abierta bloqueada.

Cerrar gancho

 
1a

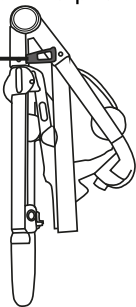

1b

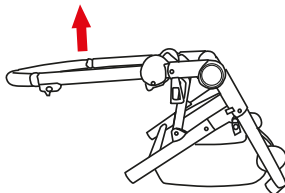 


1c

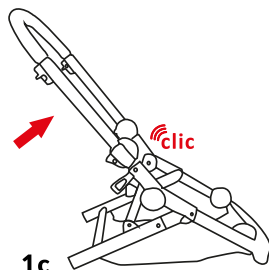 


2 Ensamble los juegos de ruedas traseras

 Imagen (2a) Empuje las ruedas dentro del alojamiento de las ruedas hasta que encajen en su lugar. Deberías escuchar un sonido de clic. Luego empuje el eje trasero sobre el marco del cochecito hasta que escuche un clic en cada lado. Tire de las ruedas para asegurarse de que estén bien sujetas al chasis.

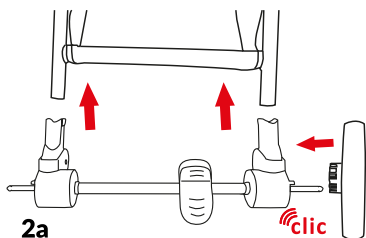


2a

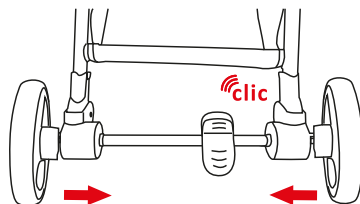 


2b

3 Ruedas delanteras

 
Empuje las ruedas dentro del alojamiento de las ruedas. Hasta que encajen en su lugar. Deberías escuchar un sonido de clic. Tire de las ruedas para asegurarse de que estén bien sujeto al chasis.

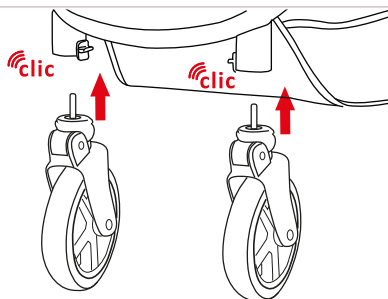

 
- 4** Saque el asiento y ábralo hasta quedar plano como se muestra en la imagen 4a. Luego doble hacia el centro y asegúrese de que esté completamente bloqueado como en la imagen 4b.

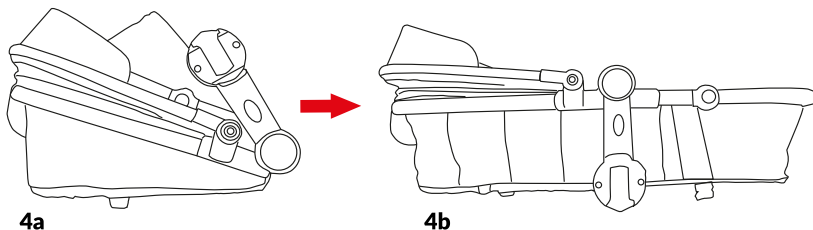





 
- 5** Alinee la unidad del asiento con los anclajes a los lados del chasis y empújelos hasta que se desbloqueen de forma segura. Debería escuchar un clic como en la imagen 5a. Para asegurarse de que el asiento esté correctamente ensamblado en el chasis, levántelo para comprobar que esté bloqueado de forma segura.

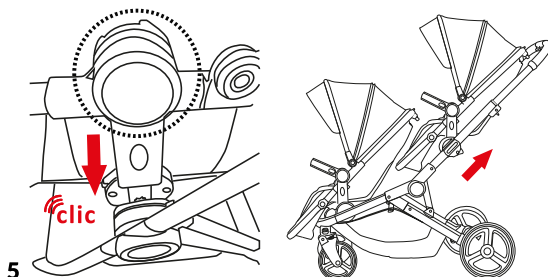

 - 6** Inserte el parachoques delantero en el asiento, levante el parachoques delantero con un poco de fuerza para asegurarse de que esté ensamblado de forma segura, imagen (6a) Para quitar la barra protectora, use dos manos para presionar los botones de liberación en ambos lados. No utilice el parachoques delantero como asa para transportar la unidad del asiento.

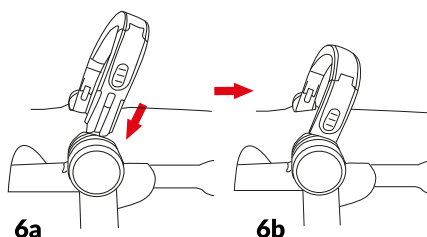


     - 7** Deslice la hebilla superior del arnés dentro de la hebilla lateral de la cintura (imagen 7.2). Repita lo mismo para el otro lado. Inserte la hebilla de cintura completa en el alojamiento de la hebilla, imagen 7.4. Asegúrese de que las hebillas encajen firmemente en la carcasa. Para soltar las hebillas, presione el botón central en la carcasa de la hebilla.

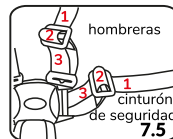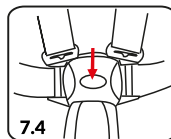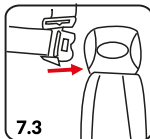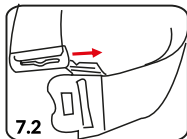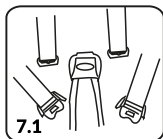


8 Operación del freno

 
Para accionar el freno, empuje la palanca del freno hacia abajo con el pie. Compruebe que el cochecito no se mueva una vez aplicados correctamente los frenos. Suelte el freno empujando la palanca del freno hacia arriba.

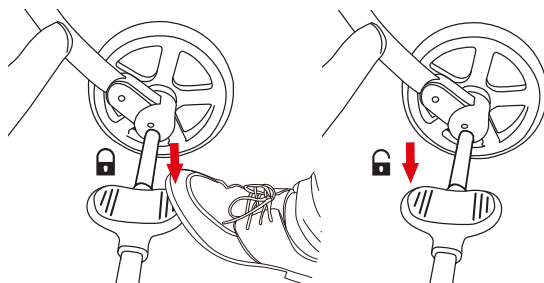

 
- 9** La dirección de las ruedas delanteras se puede bloquear o configurar para que giren. Tire hacia arriba del botón de dirección de bloqueo para habilitar las ruedas giratorias o presione hacia abajo para bloquear las ruedas en una dirección. Asegúrese de hacer lo mismo en ambas ruedas delanteras.

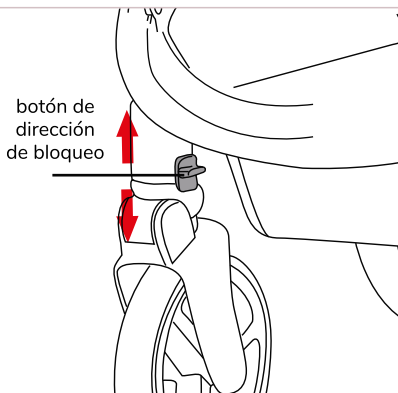

 
- 10** Presione el botón de ajuste en ambos lados del reposapiés al mismo tiempo para ajustar hacia arriba o hacia abajo.

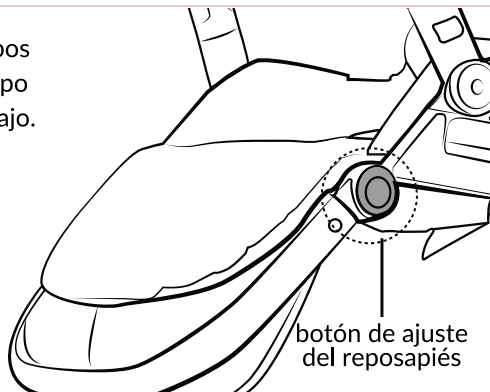

 
- 11** Para ajustar la altura de la manija de empuje, presione el botón en el centro de la manija. Suelte el botón del mango una vez que lo haya ajustado a la altura adecuada.

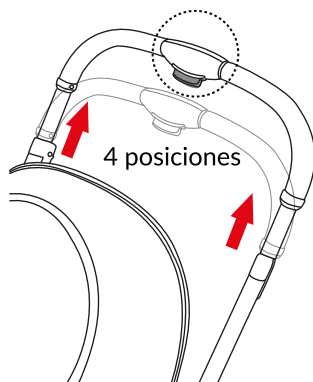

 - 12** Para quitar el asiento, presione los botones de liberación en ambos lados del asiento, retire ambos lados y levántelo.

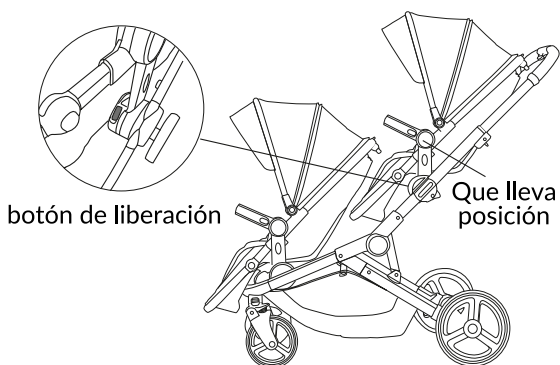


 - 13** Este es un asiento 2 en 1; asiento y moisés. Para cambiarlo de un asiento a un moisés, simplemente deshaga el pestillo de seguridad que se encuentra debajo del asiento y afloje completamente la hebilla de ajuste.

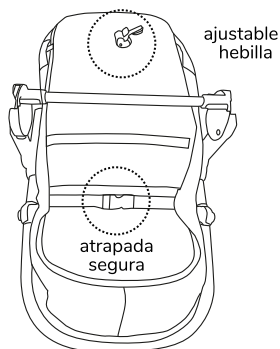

- 14** Luego recline el moisés a la posición horizontal usando el botón del respaldo en la base de la capota. Foto 14. Luego deberás quitar los arneses del asiento cuando lo utilices como moisés (para evitar riesgo de estrangulamiento).

 1. Localizar los puntos de sujeción de las correas del arnés al asiento del cochecito. Estos se pueden encontrar en el respaldo del asiento.
2. Empuje los clips del arnés a través de los orificios del respaldo del asiento para que salgan por la parte delantera. De la tela del asiento.
3. Una vez soltadas todas las correas, retira con cuidado el arnés del asiento del cochecito.

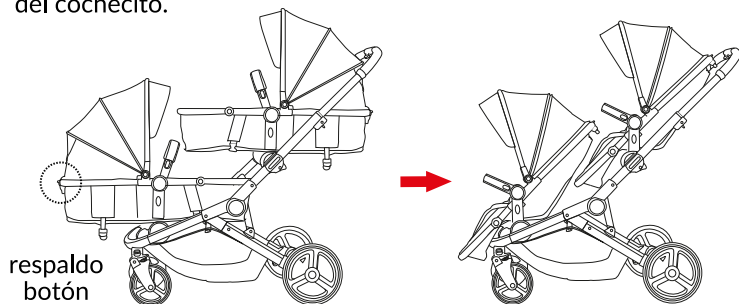


El moisés es para bebés recién nacidos, desde el nacimiento hasta los 6 meses o 9 kg (lo que ocurra antes).


Para convertir el moisés en el asiento, simplemente haga clic en el pestillo de seguridad debajo del asiento y apriete la hebilla de ajuste. 13.

El asiento sólo debe utilizarse para niños a partir de 6 meses.

 - 15** Para desmontar el cochecito, retire los asientos presionando los botones de desmontaje de la unidad del asiento en cada lado, luego levante los asientos.








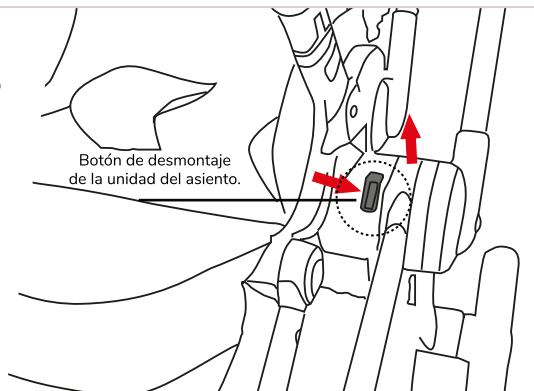


 - 16** Después de quitar el asiento, ajuste el manillar a la posición de nivel más bajo, presione el lado derecho del segundo botón de bloqueo y luego use las dos manos para tirar del botón de plegado hacia arriba, luego presione hacia abajo el manillar hasta que quede cerrado.

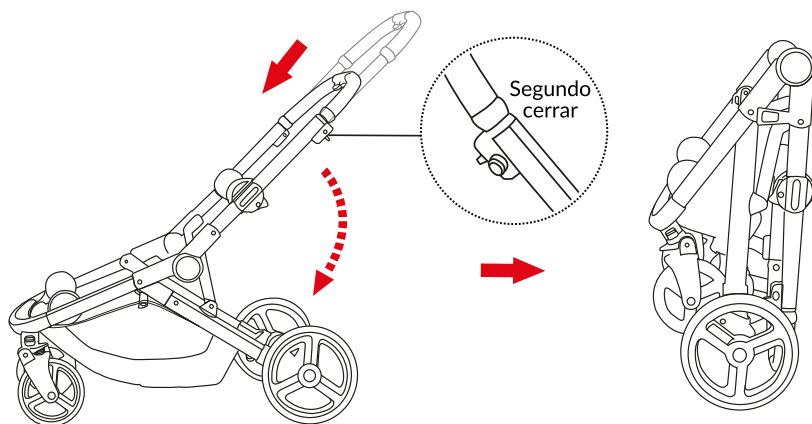

Configuraciones del cochecito

       
 
ES

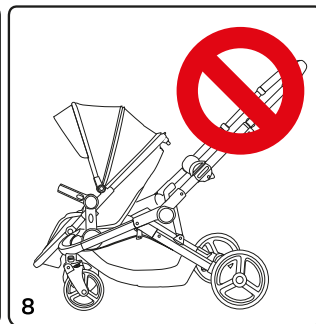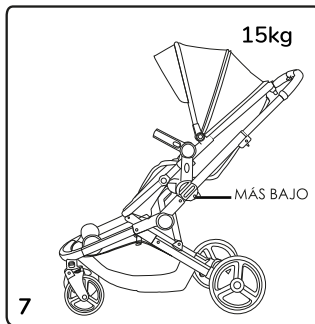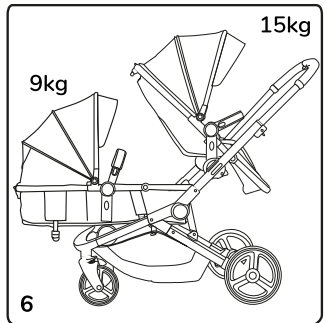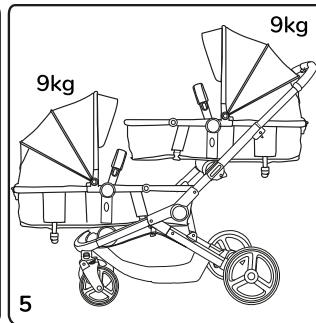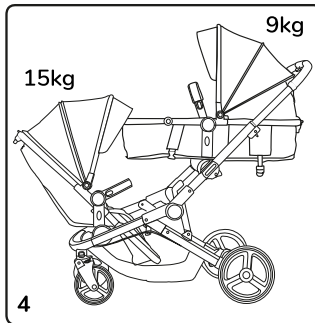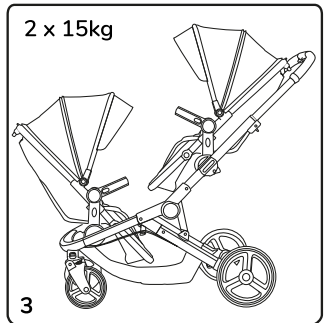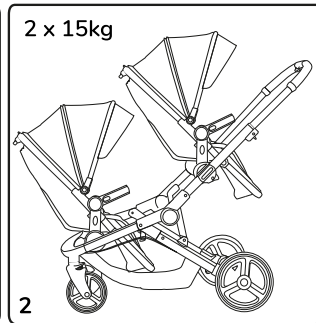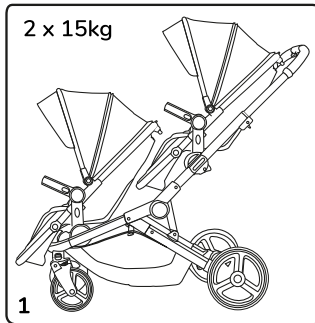

ADVERTENCIA: Nunca lo use en el estado que se muestra en la Imagen 8. Cuando use un asiento individual, debe estar sujeto a la posición superior del asiento pero bajado por el marco hasta el punto más bajo, como se muestra en la Imagen 7. Cuando use asientos dobles en el marco, asegúrese de que el asiento superior esté ajustado a la posición más alta del marco.


Instrucciones de montaje silla de auto **ES**

  Adaptadores x2

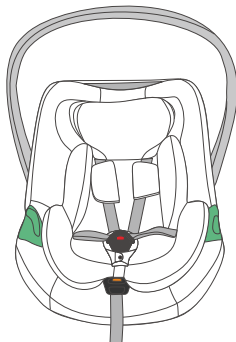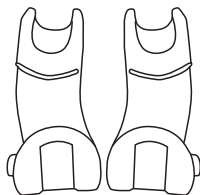


Portabebés
(se vende por separado)

 - 1 Inserte los adaptadores en el cochecito hasta que escuche un clic. Después de terminar, por favor tire levántelas un poco para asegurarse de que encajen en su posición correctamente.

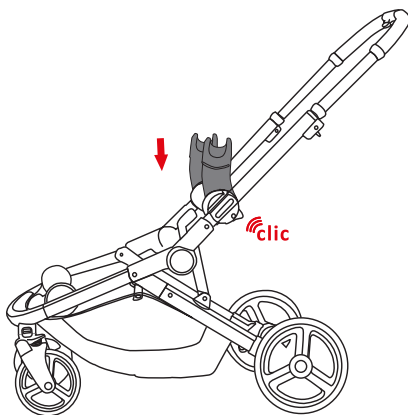


 - 2 Alinee el portabebés sobre el marco y los adaptadores y luego baje el asiento para el automóvil sobre los adaptadores. Hasta que escuche un sonido de clic. Después de terminar, levante un poco el asiento del automóvil para asegurarse de que esté encajado correctamente en su posición.

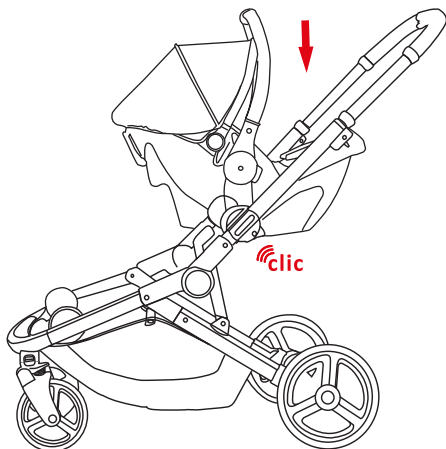


3 Quitar el asiento del coche

 Presione los 2 botones en los dos lados del asiento para automóvil para liberarlo de los adaptadores. Despegar la silla de auto del marco y los adaptadores.

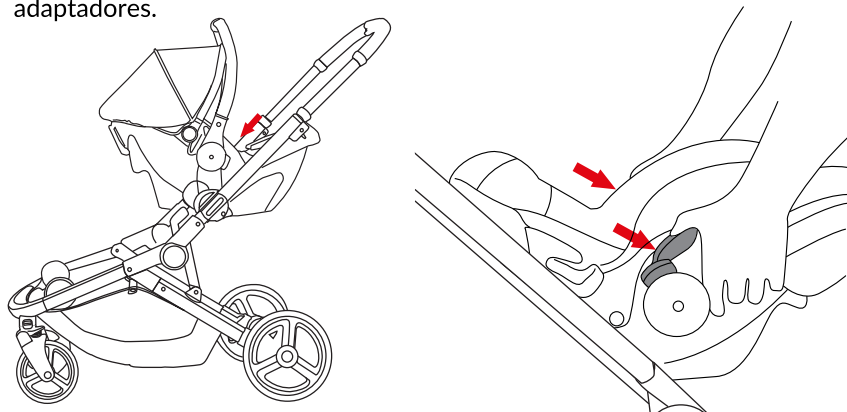

 4 Si desea desconectar los adaptadores, presione los botones del adaptador y luego levante el adaptador para retirarlos del marco. foto (4)

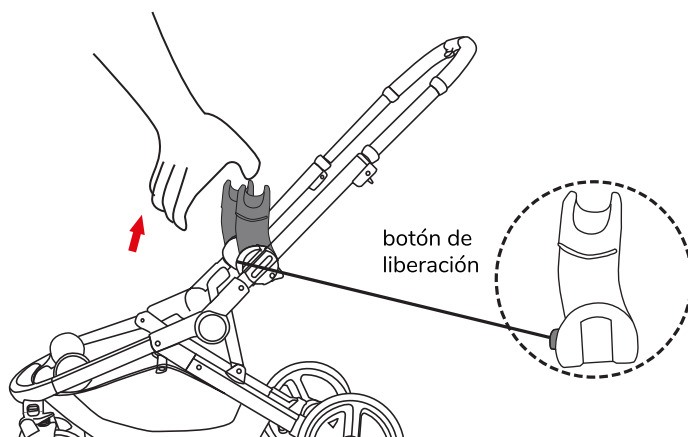



⚠ ADVERTENCIA


Asegúrese de que todos los dispositivos de bloqueo estén en posiciones de bloqueo antes de usarlos.

ADVERTENCIA Compruebe que los dispositivos de fijación de la silla de coche estén correctamente enganchados antes de su uso. Este vehículo no sustituye a una cuna ni a una cama. Si su hijo necesita dormir, deberá colocado en un cochecito, cuna o cama adecuados.

5 ADVERTENCIA

   Cuando use un solo asiento para el automóvil, ajuste el nivel en el marco a la posición más baja; cuando use la unidad del asiento del cochecito con el asiento para el automóvil al mismo tiempo, el asiento para el automóvil debe ajustarse al nivel más alto. Utilice el asiento para el automóvil únicamente en estas posiciones para evitar lesiones.

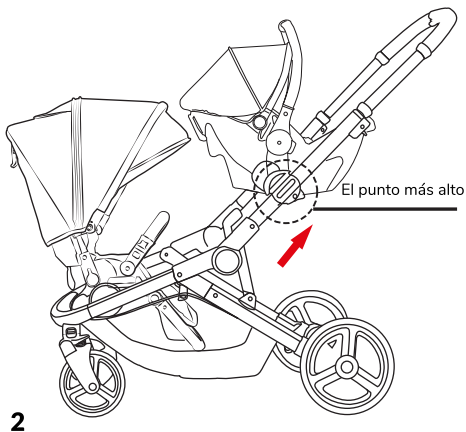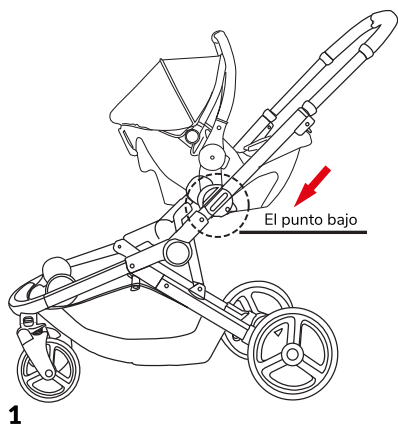

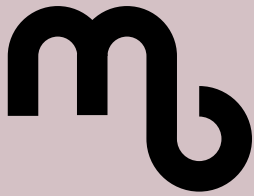

Register your product

www.mybabiie.com/warranties

In the first instance of needing assistance please contact your original place of purchase.

This product qualifies for 12 month warranty when registered through our website

mybabiie.com



My Babiie



@MyBabiieOfficial



My Babiie



@mybabiie_official



@MyBabiie

My Babiie Ltd, Paddock Wood, Kent, TN12 6EN

My Babiie EU , Generaal Vetterstraat 76A, 1059 BW Amsterdam, The Netherlands